 


NORA

8239 AND 8239-S BDIUSA.COM



Component List



A - Phillips Screwdriver x 1



B - 4mm Hex Wrench x 1





D - 1/4-20 x 1.75" Machine Screw x 2





 
F - Leg Assembly x 2



G - Rail x 1



H - 1/4-20 x 3.25" Machine Screw x 10



I - Assembled Cabinet x 1



J - Adjustable Shelf x 2



K - Back Panel x 2

Nora is engineered for easy assembly. Carefully follow this procedure to prevent any damage.

NOTE: This instruction sheet is intended for the entire Nora collection; model 8239 is shown for illustration.

Placement and Maintenance


Nora is designed for indoor use on level floors. Clean glass with glass cleaner; steel parts and wood veneer with a moist cloth.

Step 1

Unpack and Identify


Unpack and identify the components at left. Note that some components are shipped inside the cabinet. The assembly workspace should be a non-marring surface such as carpet. For missing hardware pieces, please contact BDI Customer Service at customerservice@bdiusa.com. For all other concerns, please contact your BDI Retailer.

Step 2
Remove Pre-Installed Adjustable Shelves (J)

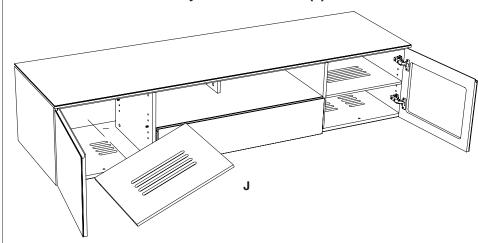


Step 3 Build Base Assembly

Press **Dowel Pins (C)** into place to install **Center Leg (E)** to **Rail (G)**. Then join **Rail (G)** and **Leg Assemblies (F)** together, aligning holes for **1/4-20** x **1.75" Machine Screw (D)**.

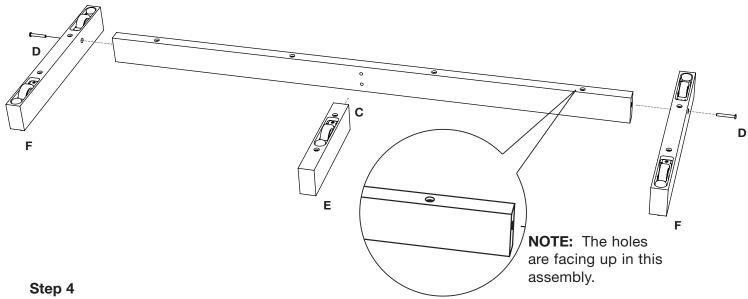


Install Base Assembly

With Assembled Cabinet (I) resting safely on its top surface, install built Base Assembly to Cabinet bottom using 1/4-20 x 3" Machine Screw (H) and tighten with Hex Wrench (B).

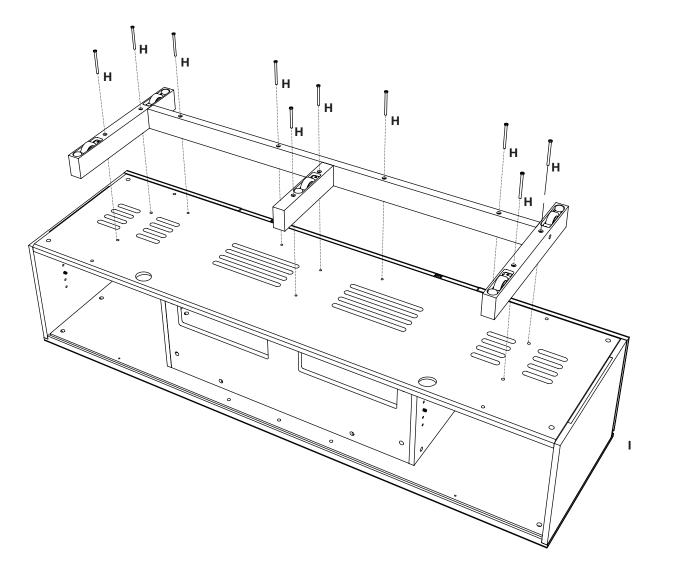


Step 5 Re-install Shelves

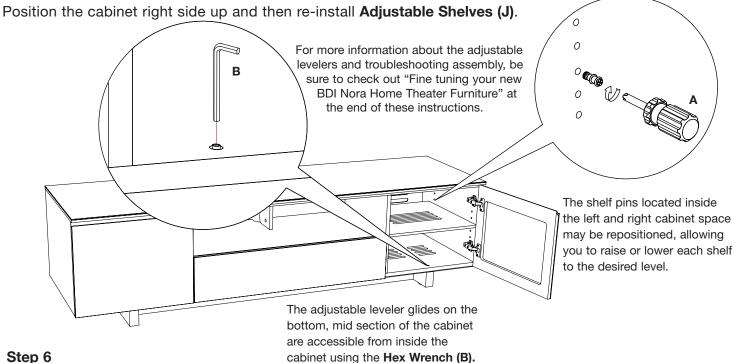


Install Back Panel

Install both **Back Panels (K)** to the backside of the cabinet by inserting top edge in upper channel, then tipping bottom edge forward and into lower channel.

NOTE: Velcro straps are included as wire management for your convenience.

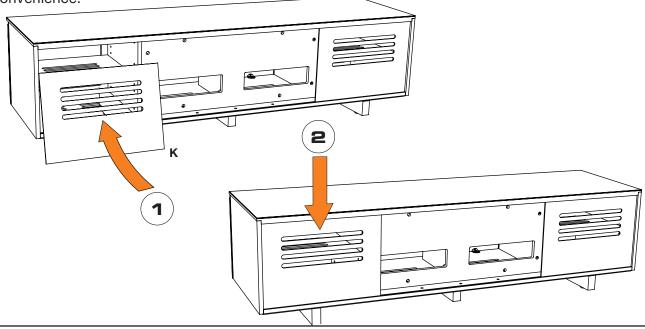

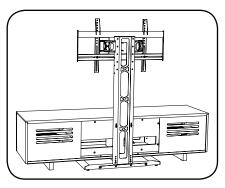

Optional Flat Panel TV Mount

This BDI cabinet is compatible with *BDI's Arena Flat-Panel TV Mount #9970 and #9972* (sold separately), with the following features:

- accommodates most TVs up to 60", 175 lbs
- swivel allows rotating for optimal viewing
- allows adjustable TV mounting height
- accepts and routes cables to and from the TV


For more information, visit www.bdiusa.com

Fine tuning your new BDI Nora Home Theater Furniture


These steps are to be followed after you have unpackaged and completed the simple assembly instructions for your Nora AV stand. Due to jostling in freight or perhaps an uneven floor, the doors and drawers on your Nora stand may not appear to be in perfect alignment. Making a few minor adjustments can rectify this situation. Be aware that depending on your situation, patience and a bit of trial and error are required. The high-quality European hinge hardware is infinitely adjustable, but changing one element can cause the need for further adjustments. Through a little adjustment, you can modify the orientation of the cabinet doors to make sure that they are sitting perfectly on your Nora unit.

STEP 1 - Level your Nora unit

Levelers are integrated into each leg assembly and are accessed from inside the cabinet. If your floor is uneven, you may extend one or more levelers (with the provided **Hex Wrench (B)**) to attain a level, stable cabinet placement. Turning the leveler clockwise will extend the leveler; turning it counter-clockwise will retract it.

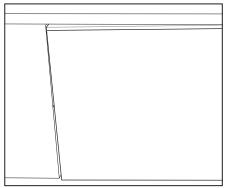


INCORRECT! Door is out of alignment with the rest of the unit.

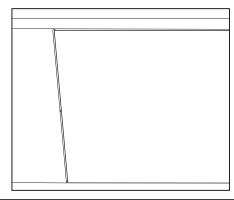

CORRECT! Door is sitting squarely and evenly spaced on tops and sides.

STEP 2 - Adjust Door Hinges (if needed)
The doors on your cabinet should be evenly spaced and the doors should open and close freely without rubbing against the door frame.

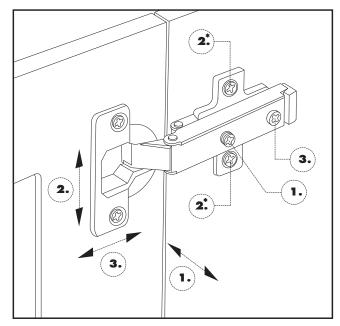

If the cabinet's doors appear out of alignment, this condition can be corrected with minor adjustment to the European hinges on each door.

Because these hinges are infinitely adjustable, adjusting one hinge element can sometimes cau se the need for adjustments to other elements. But with a few adjustments, you can modify the orientation of the cabinet doors to make sure that they hang perfectly within your cabinet.

Use a Phillips screwdriver to adjust Nora's door hinges:

- By adjusting **Screw 1**, the door will move LEFT or RIGHT within the frame. Make minor adjustments at both top and bottom hinges for best results.
- By adjusting **Screw(s) 2**, the door will move UP or DOWN within the frame (the top and bottom hinges must be adjusted the same degree).

NOTE: Loosen **Screws 2** one complete turn, raise or lower door, then hold in position while tightening **Screws 2** (on both hinges).

• By adjusting **Screw 3** the entire door will move IN or OUT, opening or closing the gap between the door frame and cabinet. (This screw rarely needs adjustment.)