



## D-7 Instructions

### TO BEGIN:


- **CONNECT INSTRUMENT CABLE TO THE INPUT JACK. CONNECT AMPLIFIER CABLE TO THE OUTPUT JACK. IF USING AN AC ADAPTER, CONNECT TO 9V DC JACK. OR USE 9-VOLT BATTERY.**
- **LED LIGHT WILL BE ON WHEN FOOT SWITCH IS ACTIVATED.**

### CONTROL FUNCTIONS:

**TONE:** THIS CONTROL ROLLS OFF HIGH FREQUENCIES. AT FULLY CLOCKWISE, HIGH FREQUENCIES ARE UNAFFECTED. AT FULLY COUNTER-CLOCKWISE, THE HIGH FREQUENCIES ARE MINIMIZED.

**FUZZ:** CONTROLS THE AMOUNT OF FUZZ WHEN THE PEDAL IS ON. BE SURE TO TRY TURNING YOUR GUITAR'S VOLUME CONTROL DOWN FOR AN EVEN GREATER RANGE OF TONES.

**VOLUME:** CONTROLS THE OUTPUT OF THE PEDAL WHEN THE PEDAL IS ON. THE PEDAL CAN GET VERY LOUD, USE CAUTION WHEN SETTING THIS CONTROL.

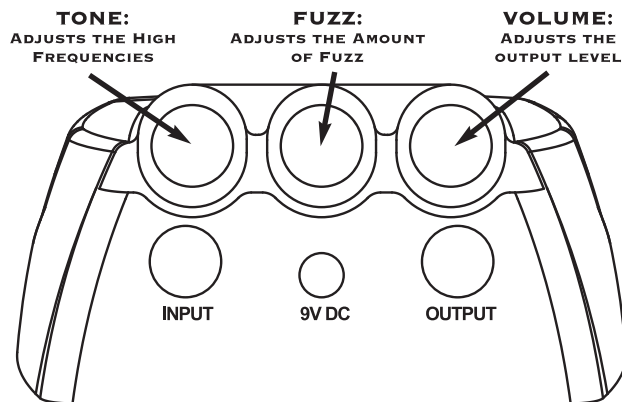

**BATTERY:** USES ONE 5-006P 9-VOLT BATTERY. DANELECTRO "VINTAGE POWER SOURCE" BATTERIES ARE RECOMMENDED.


**BATTERY ELIMINATOR:** USES 9-VOLT BATTERY ELIMINATOR. POLARITY: CENTER NEGATIVE (-). 300MA MAXIMUM. DANELECTRO "ZERO HUM" BATTERY ELIMINATORS ARE RECOMMENDED.

This product complies with FCC Part 15 rules. Operation of this product is permitted in USA provided this product does not cause harmful interference and provided this product accepts interference from other devices, even if that interference is detrimental to performance of this product.

EEC Agent:  
John Hornby Skewes & Co., Ltd.  
Salem House, Parkinson Approach,  
Garforth, Leeds LS25 2HR UK



© EC 2010 Printed in China

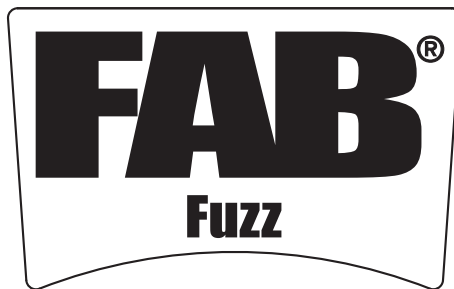

# INSTRUCTIONS