

iTrans DU-TR-22A

USB A to Dante Transceiver

Thanks for choosing our iTrans DU-TR-22A, this guide will take you know how to use this product.

Safety

To ensure reliable use of the equipment and the safety of personnel, please observe the following during installation, use, and maintenance.

1. When installing the equipment, ensure that the earth wire in the power cable is well grounded.
2. Keep the working environment well ventilated so that the heat generated by the equipment during operation can be discharged in time to avoid damage.
3. Turn off the main power supply in a humid and dewy environment or when it is not in use for a long time.
4. Always unplug the AC power cord from the power supply socket before the following operations.
 - A. Remove or reassemble any part of the appliance.
 - B. Disconnect or reconnect any electrical plugs or connections to the appliance.
5. Do not dismantle the appliance without permission from a non-specialist to avoid the risk of electric shock.
6. Do not spill any corrosive chemicals or liquids on or near the appliance.



- ① DANTE network interface
② USB interface

Spec

Model	DU22
Connector	RJ45 x 1 USB A x 1
Power supply	USB
Sampling Rate	48kHz
Bit Depth	24bit
Latency	1, 2 or 5ms Dante Controller Configuration
Network transmission	Dante IP AES67 RTP audio
USB	USB2.0