

GETTING STARTED

 
BOOST - To set up the Level Boost, plug your instrument into the Input Jack (5), and connect the Output Jack (6) to your amplifier, after connecting a +9/+12VDC power supply to the DC IN to the DC IN (7). Turn the boost on using the footswitch (3), making sure the LED (4) is ON (this indicates that the effect is active). Next, adjust the Boost Level slider while toggling the footswitch (3) on and off, comparing the volume of the direct signal with the boosted signal. Match the gain level as closely as you can to the direct signal, then adjust the Level Boost slider to the desired amount of added boost or cut. A suggested use of the boost is to leave it turned off until it's time to solo, then switch it on (3) for a quick level boost when you begin your solo. You can easily apply this to ANY situation where you need two different, quickly accessible playing volumes.

VPF (Variable Pre-shape Filter) - This filter boosts lows and highs, and cuts mids. Some call this kind of effect a scoop, a smiley-shape EQ, or an enhance knob. It's very effective for slap bass, pick playing, and driving eighth-note rock. It's off when it is all the way counterclockwise—we suggest you start in that position and turn the filter up gradually, to hear and understand what it does.

TECHNICAL SPECS

INPUT IMPEDANCE:	1 Mohm / 6 Vpp
OUTPUT IMPEDANCE:	470 ohm / 6 Vpp
BOOST:	0 to +20dB (maximum gain)
POWER REQUIREMENTS- DC INPUT:	+9/+12VDC
DIMENSIONS:	48.4 x 38.2 x 104.2 mm 1.91" x 1.5" x 4.1"
WEIGHT:	174 g 0.38 lbs

BLOCK DIAGRAM



DV MARK™



MADE IN ITALY

DV Mini Boost OWNER'S MANUAL

LIMITED WARRANTY

DV Mark offers an international limited warranty on DV Mark products purchased from any authorized DV Mark dealer, effective from the day of purchase. The terms of this warranty vary from country to country; please contact the DV Mark distributor in your country for details.

Please register this product online at www.dvmark.it to establish the date of purchase. However, please note that you are required to retain a copy of your receipt as proof of purchase in order to receive warranty service.

This warranty does not apply to any damage to the product caused by misuse, mishandling, accident, abuse, alteration, modification or unauthorized repairs. Product appearance and normal wear and tear (worn paint, scratches, etc.) are not covered by this warranty. DV Mark reserves the right to be the sole arbiter regarding the misuse or abuse of this product. DV Mark assumes no liability for any incidental or consequential damages, which may result from the failure of this product. Any warranties implied in fact or by law are limited to the duration of this express limited warranty. Your legal rights related to the warranty will vary depending on the country of purchase.

WARRANTY CARD

This product is guaranteed by the warranty provided in the country of purchase, under the following conditions:

- A - The DV Mark warranty is only applicable if this document been properly completed (here or online) and if the original invoice/bill of sale, mentioning model, serial number and purchase date, is presented together with this document.
- B - The obligations of DV Mark are limited to the repair of defects. Warranty repair eligibility will be decided at the sole discretion of DV Mark or its representatives. Freight, freight insurance costs, and any other costs related to the repair of this product are not covered by this warranty.
- C - All warranty repairs must be made by DV Mark or an authorized DV Mark (PARSEK) service center.
- D - This warranty does not apply in the following instances:
 - if the damage was caused by accident, negligence or modifications; use of non DV Mark spare parts; or improper use, installation or packing;
 - if the serial number on the equipment is illegible;
 - if the damage was caused by lightning, water, fire, incorrect main voltage, insufficient ventilation or any other cause beyond the control of DV Mark.
- E - DV Mark reserves the right to redesign or improve/modify its product at any time without any obligation to modify previously manufactured products.

Parsek srl. - Italy - 66020 San Giovanni Teatino (Ch) - Via Po, 52/A Tel. +39 085 446 37 55 - Fax +39 085 440 77 64 - www.dvmark.it - info@dvmark.it

1. IMPORTANT SAFETY INSTRUCTIONS

- 1) Read these instructions;
- 2) Keep these instructions;
- 3) Heed all warnings;
- 4) Follow all instructions;
- 5) Do not use this apparatus near water;
- 6) Clean only with dry cloth;
- 7) Install in accordance with the manufacturer's instructions;
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatuses (including amplifiers) that produce heat;
- 9) Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus;
- 10) Only use attachments/accessories specified by the manufacturer;
- 11) Unplug this apparatus during lightning storms or when unused for long periods of time;
- 12) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as when the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, or when the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped;
- 13) *Warning: to reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture; and objects filled with liquids, such as vases, should not be placed on this apparatus*;
- 14) The socket outlet shall be installed near the equipment and shall be easily accessible;
- 15) The power cord must be unplugged prior to servicing.



"The Lightning Flash with arrowhead symbol within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product enclosure that may be of sufficient magnitude to constitute a risk of shock to persons."

1. PRÉCAUTIONS D'EMPLOI

- 1) Lire ces instructions;
- 2) Conserver ces instructions;
- 3) Suivre tous les conseils d'utilisations;
- 4) Suivre toutes les instructions;
- 5) Ne pas utiliser cet appareil au bord de l'eau;
- 6) Nettoyer uniquement avec un chiffon humide;
- 7) Ne pas bloquer le système de ventilation. Installer conformément aux instructions du fabricant;
- 8) Ne pas installer l'appareil près d'une source de chaleur tel qu'un radiateur, un fourneau, ou bien un autre appareil qui produit de la chaleur;
- 9) Protéger le cordon d'alimentation afin qu'il ne soit pas piétiné ou écrasé tout particulièrement au niveau des fiches, des prises de courant femelles, et des parties qui sortent de l'appareil;
- 10) Utiliser uniquement les accessoires recommandés par le fabricant;
- 11) Ne pas branché l'appareil en cas d'orage accompagné d'éclairs. Le débrancher en cas de non utilisation prolongée;
- 12) S'adresser à un service assistance agréé si l'appareil a subi des dommages, si le cordon d'alimentation ou la fiche a été endommagé, si un liquide a été renversé sur l'appareil ou bien si un objet est tombé dans l'appareil, si ce dernier a été exposé à la pluie ou à l'humidité, s'il ne fonctionne pas correctement ou s'il est tombé;
- 13) *Avertissement: pour réduire le risque du feu ou de décharge électrique, n'exposez pas cet appareil à la pluie ou l'humidité et les objets remplis de liquides; tels que des vases, ne devraient pas être placés sur cet appareil*;
- 14) La prise de courant doit être installée près de l'appareil et doit être facilement accessible;
- 15) La fiche principale doit être débranchée avant toute opération d'entretien.



"The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product."

MORE INFORMATION

For warranty and service information, please contact your local DV Mark distributor (contact information available at www.dvmark.it). For more technical information, please visit us at www.dvmark.it and fill out the form on the Contact Us page. We hope you enjoy your effect pedal and use it to make great music!

FUNCTIONS OVERVIEW

LEVEL BOOST (1) - This control increases your instrument's volume without changing its sound (from 0dB to 20dB), which is very useful for solos or to boost an amp into overdrive.

VPF FILTER CONTROL (2) - The VPF (Variable Pre-shape Filter) boosts lows (around 35 Hz) and highs (around 10 kHz), and cuts mids at 380 Hz.

BOOST SWITCH* (3) - The LED (4) indicates that the effect pedal is engaged.

*TRUE BYPASS

TRUE BYPASS - When the pedal's controls are 'off', your signal goes directly from the input jack to the output jack without any degradation of audio quality.

5. CONNECTIONS

1/4" INPUT JACK (connects to your instrument) (5) - Make sure that your amp is off and the volume is turned down before making connections. Connect your instrument to the input of the DV Mini Boost and the output of the DV Mini Boost to your amplifier.

1/4" OUTPUT JACK (connects to your amplifier) (6)

DC IN (7) - External power supply connection: +9/+12VDC



WARRANTY CARD

We'd like to thank you for choosing a DV Mark product.

If any problem occurs, please don't hesitate to contact our support team at service@dvmark.it. You can fill out this form and send a copy to DV Mark (Parsek srl, Via Po 52, 66020 San Giovanni Teatino, CHIETI ITALY) or, even better, you can now register your warranty online in a matter of minutes, using our online registration form at www.dvmark.it. Simply print, click and type in your information...and you're done!

Registering your warranty identifies you and your product, in case you are ever in need of warranty service. Please note that in order to qualify for warranty service, you must retain a copy of the sales receipt or bill of delivery as proof of purchase.

The information that you provide here will not be shared with any third parties and will be used for DV Mark internal business purposes only.

PRODUCT INFORMATION

Model _____ Serial Number _____
Date of Purchase _____ (mm/dd/yyyy)

DEALER INFORMATION

Dealer _____ Dealer City _____
Dealer Country _____

PERSONAL INFORMATION

Purchased by: _____ Last Name _____
First Name _____ Address _____
Your Email Address _____ City _____
State/Prov _____ Zip _____
Country _____

Do you want to join our mailing list? YES NO

MORE INFO (* not mandatory)

*Age _____ *Sex _____

WHERE DO YOU PLAY YOUR INSTRUMENT?

Stage / Performing Musician School / Student
 Classroom / Educator Home Studio Recording

WHAT LEVEL OF PLAYER ARE YOU?

Beginner Amateur
 Professional Semi-Professional

PRODUCT PURCHASED VIA:

Internet Retail Store

WHAT MOST INFLUENCED YOUR BUYING DECISION?
