

FEATURES

4 Band EQ.

- PRESENCE : Very high range

TREBLE : High rangeMIDDLE : Mid rangeBASS : Low range

VOLUME: Master output level

CHORUS: Power switch of chorus effect

RATE: It can control speed and depth of effect.

fast : fast and light chorus effect.slow : slow and deep chorus effect.

PHASE: Phase reverse switch to reduce feedback.

* Chorus fuction can consume over ten times of battery power than using 4 band equalizer only.

SPECIFICATION

BATTERY:

9V Battery (6F22 or equivalent)

VOLTAGE RANGE:
Min 7V to Max 12V
INPUT IMPEDANCE:

1Mohm


OUTPUT IMPEDANCE:

1Kohm


Power is OFF when unplugging output jack.

INSTALLATION


- Find the location having the same curve as EDGE EQ on the side of guitar
- 2. Cut out the hole with template

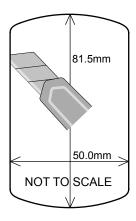

3. Insert EDGE EQ into hole of guitar. (Two clamps must be fully unfastened)

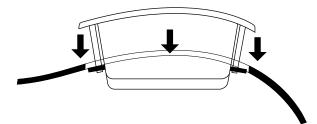

4. Fasten two hex screws properly.

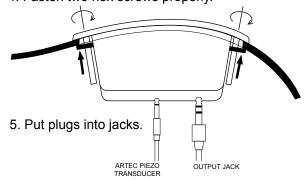

6. Open top cover and insert 9V battery.

