



engineered by
Snap
av

OWNER'S MANUAL



**WIRELESS
SUBWOOFER KIT**

ES-SUB-WIRELESS



Receiver



Transmitter

 
IMPORTANT SAFETY INSTRUCTIONS

WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install according to manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
9. Do not override the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades - one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plug, convenience receptacles, and the point where it exits from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as when the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. DO NOT EXPOSE THIS EQUIPMENT TO DRIPPING OR SPLASHING AND ENSURE THAT NO OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, ARE PLACED ON THE EQUIPMENT.
16. TO COMPLETELY DISCONNECT THIS EQUIPMENT FROM THE AC MAINS, DISCONNECT THE POWER SUPPLY CORD PLUG FROM THE AC RECEPTACLE.
17. THE MAINS PLUG OF THE POWER SUPPLY CORD SHALL REMAIN READILY OPERABLE.



CAUTION: TO REDUCE THE RISK OF ELECTRICAL SHOCK, DO NOT REMOVE COVER. NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

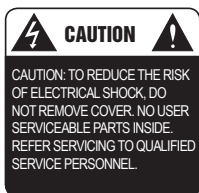

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WELCOME TO EPISODE®

Episode® is one of the most highly-regarded brands of speakers available today. We appreciate your business and we stand committed to providing our customers with the highest degree of quality and service in the industry.

Subwoofer placement can have a large impact on the overall sound quality of low frequencies. This Episode® wireless subwoofer kit gives you the freedom to place the subwoofer anywhere in the room, without running new wires. All you need is a nearby outlet to power the subwoofer. For optimum system performance, we recommend pairing this kit with our acclaimed Episode® subwoofers and loudspeakers.

CONTENTS

- Wireless transmitter
- Wireless receiver
- Two (2) power supplies
- Owner's manual

EPISODE® WIRELESS SUBWOOFER KIT FEATURES

>>2.4 GHz FREQUENCY HOPPING

The latest digital transmission technologies deliver crystal clear signals up to 50 ft.

>>EASY, PERMANENT PAIRING

Initial setup takes only minutes, then the wireless transmitter and receiver are permanently paired. Even if the power goes out, the system will be ready for action when it turns back on.

>>COMPACT RECEIVER

 
Easily tuck the receiver out of sight or use the wall mount slots to hide it behind the subwoofer.

>>GOLD-PLATED AUDIO CONNECTIONS

The purity of gold delivers the cleanest audio signals to and from the kit.

SUBWOOFER PLACEMENT


Subwoofer placement can have an effect on the overall audio performance in your room. All rooms are different, but the strongest output will likely occur if the subwoofer is placed in a corner of the room on the same wall as the front channel speakers. This is known as the boundary effect and will emphasize certain bass frequencies while canceling others. Some listeners will find this to be the best sounding result, while others may find it overly “boomy” or muddy. Once you have paired your wireless kit, you may want to experiment with subwoofer placement to find the location that delivers the best performance.

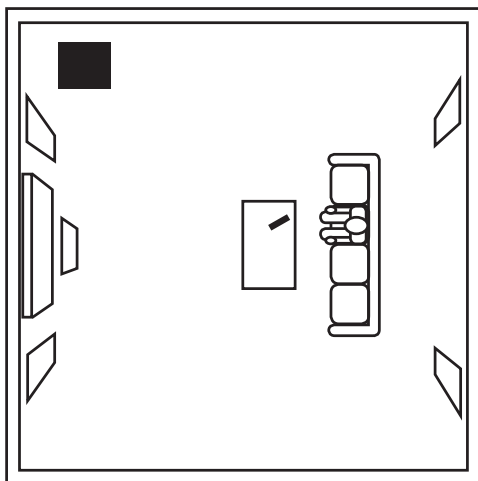

Recommended placement of subwoofer in one of the front corners of the room.

SYSTEM CONNECTIVITY

 For line level connections, use high-quality RCA cables that feature low impedance, shielding and high-quality connectors. The wireless transmitter will be connected to the AV receiver or TV using an RCA cable. A dedicated subwoofer connection (LFE) or left/right preamp output should be used. The wireless receiver is connected at the subwoofer to deliver the audio to the subwoofer. Typically you will connect to the Left or LFE input on the subwoofer. A splitter may also be used to “Y” the signal into both LEFT/RIGHT input for higher volume levels on some subwoofers. For specific information on connecting and setting up your subwoofer, please refer to its owner’s manual.

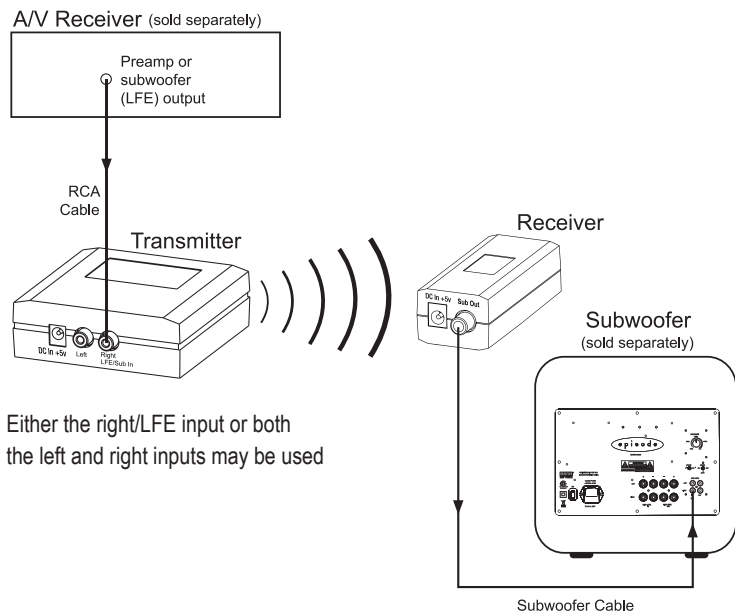

Either the right/LFE input or both the left and right inputs may be used

 
For some subwoofers, best performance may come from using a “Y” adapter to split the subwoofer cable to both left and right inputs

PAIRING YOUR EPISODE® WIRELESS KIT


NOTE: Initial pairing may be performed without the audio signals connected. This may be preferred for easier access to the pairing buttons and power connections. Follow the instructions below to pair wireless transmitter and receiver.

1. Plug in the wireless transmitter. Transmitter's LED will flash blue slowly.
2. Plug in the wireless receiver. Receiver's LED will flash blue slowly.
3. Using a paperclip or other small tool, press and hold the "PAIR" button on transmitter until its LED flashes quickly. Release button.
4. Press and hold the "PAIR" button on receiver until its LED flashes quickly. Release button.
5. After a few seconds both LEDs will stop flashing and turn a solid blue, indicating a permanent wireless link. Should you need to re-perform pairing for any reason, simply repeat the process above.

RECEIVER

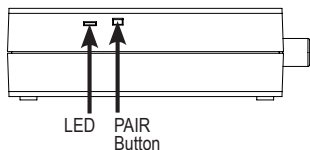

TRANSMITTER

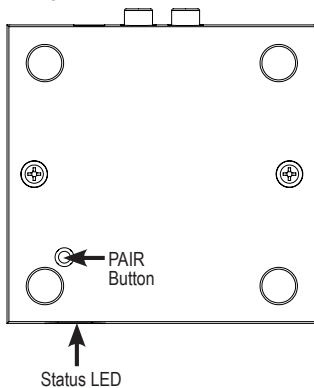 

NOTE: All wireless devices may be susceptible to RF interference from microwave ovens, cordless phones, video game consoles, Wi-Fi networking hardware, Bluetooth® headsets, baby monitors and other devices. Specifically, any devices operating in the 2.4GHz band may cause intermittent wireless connections between the transmitter and receiver in the EPISODE® wireless kit. Similarly, your wireless kit may also affect other devices. The best method for reducing any potential interference and maximizing wireless performance is to physically separate these devices by several feet. If you notice the performance of your wireless kit being affected, check the proximity to other wireless devices and relocate them accordingly. Any signal interference created by microwave ovens or other appliances will subside when those devices are not in use.

SPECIFICATIONS

Modulation	Frequency Hopping; FSK (Frequency Shift Keying) digital radio
Operating Frequency	2405 - 2477 MHz
Frequency Range	20Hz - 1kHz
Channel Width	2 MHz
Latency	less than 13 ms
Typical Range	50 ft. max. (15m)
Transmitter Power	0 dBm

WARRANTY

2-Year Limited Warranty

This Episode® Product has a Two-Year Limited Warranty. This warranty includes parts and labor repairs on all components found to be defective in material or workmanship under normal conditions of use. This warranty shall not apply to products which have been abused, modified or disassembled. Products to be repaired under this warranty must be returned to SnapAV or a designated service center with prior notification and an assigned return authorization number (RA).

For Technical Support: 1.866.838.5052

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radiofrequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

FCC NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

FCC ID: WUO-WTX1010

