




1 WP how to connect to machine.

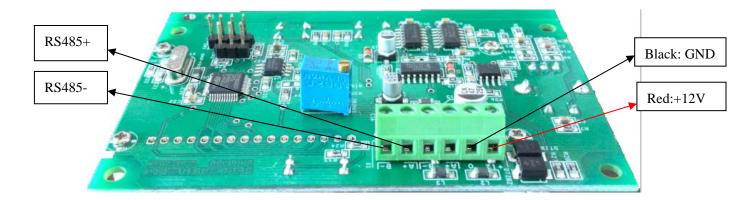

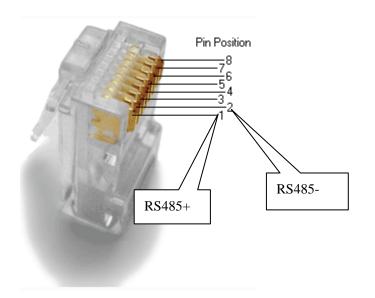





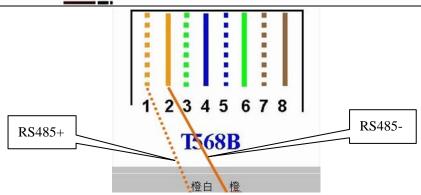

• 2 The ID set to the WP must be the same as present on the machine.

