

Standard display

EM

Change frequency

Sync

Bank . Channel Frequency Name Auto lock

Diversity

Radio frequency level

Squelch

Audio level

Sensitivity

Pilot tone

Mute

Battery

ew100 G3

543.200 MHz

MUTE

SK

SKM

Change frequency

Frequency

Peak hold

Audio level

Sensitivity

Pilot tone

Mute

Battery

ew100 G3

543.200 MHz

MUTE

SK

SKM

Change frequency

Frequency

Peak hold

Audio level

Sensitivity

Pilot tone

Mute

Battery

ew100 G3

543.200 MHz

MUTE

Menu

EM

SET

Main menu "Menu"

Squelch

Easy Setup

Frequency Preset

Name

AF Out

Equalizer

Auto Lock

Advanced Exit

"Easy Setup"

Reset List

Current List

Scan New List

Exit

Extended menu "Advanced Menu"

Tune

Guitar Tuner

Pilot Tone

LCD Contrast

Reset

Software Revision

Exit

SK

SKM

Extended menu "Advanced Menu"

Tune

Mute Mode

Cable Emulation

Pilot Tone

LCD Contrast

Reset

Software Revision

Exit

Multichannel

Bank 1 ... 20; U

Channel 1 ... 12

max. 12 Channels

Bank	Ch.	Bank	Ch.	Bank	Ch.	Bank	Ch.
2	3	2	4	2	5	2	6
1	1	1	2	1	3	1	8
2	3	1	3	4	7	8	9
2	3	2	3	2	3	2	3

Instruction Manual



ew100 G3

Quick Guide | Kurzanleitung | Guide rapide | Guida rapida | Guía de inicio rápido | Guia rápido | Beknopte handleiding | Krótka instrukcja obsługi | Snabbguide | Kort vejledning | Πίκαοήγε | Γρήγορος οδηγός | Kısa Kılavuz | Краткая инструкция | 快速指南 | 快速使用指南 | クイックガイド | 요약 설명서

Battery

1

2

3

Low Battery

ew100 G3

533.875 MHz

AF P

Battery Level	Percentage	Duration
Full	100 %	> 8 h
Medium	70 %	4 - 6 h
Low	30 %	2 - 3 h

LOW BATT

Setup

1

2

3

On

EM

SK/SKM

short

long

on

on/RX mute

on

on/RX mute

Mute

Off

EM/SK/SKM

long

off

Sennheiser electronic GmbH & Co. KG

Am Labor 1, 30900 Wedemark, Germany, www.sennheiser.com
Printed in Germany, Publ. 03/17, 575813/A01

SENNHEISER

New frequency

Squelch

1

Menu
Squelch
Low

High
Middle
Low

40
25
10
RF

Change frequency

2 SKM/SK off!

3 Easy Setup EM

Menu
Easy Setup
SET

Easy Setup
Scan New List
SET

Scan New List
734...776 MHz
WAIT
30s

Easy Setup
Bank 1...20
Free: 0...12
SET

Easy Setup
B.Ch: 1...12
Sync 758.200 MHz
SET

Frequency Preset
EM, SK, SKM
B.Ch: 1.1
SET

Frequency Preset
B.Ch: 15.6
767.900 MHz
SET

Frequency Preset
B.Ch: 15.6
767.900 MHz
SET

Stored

No frequency → 1 Squelch: Middle ...

Instruction Manual

Sensitivity

5

Menu
Sensitivity
-24 dB
AF

-48 dB...0 dB

-60 dB...0 dB

AF PEAK

Sync

4

sync

sync

OR

sync

Instruction Manual

AF out

6

Menu
AF Out
+18 dB

LEVEL

Auto lock

EM

1

Locked Unlock?

2

3

SET

SKM

1

Locked Unlock?

2

3

SET

SK

1

Locked Unlock?

2

3

SET

10 s

Auto lock

Instruction Manual

SKM

ME 2 | ME 4

25 cm (10")

ME 2

ME 3-II

2...3 cm (1")

ME 4

Mute

RF Mute On?

RF Mute Off?

SET

Menu
Advanced
SET

Advanced
Mute Mode
AF On/Off
SET

Mute Mode
AF On/Off
SET

Mute Mode
RF On/Off
SET

RF On
AF Off

RF Off

543.200 MHz
ew100 G3
MUTE

543.200 MHz
ew100 G3
MUTE

RF Mute On?

RF Mute Off?

SET

RF On
AF Off

RF Off

Reset → Factory default

Instruction Manual