 
 


产品界面



 
产品特点

- 新颖流线型外观，独具艺术气质。
- 使用滚轮调节参数，调节更便捷。
- 自动关机功能：5分钟无操作，本机将自动关机。
- 关机自动保存当前设置。

操作流程

- 1、长按④键开关机。
- 2、上电开机，默认为节拍模式。
- 3、长按⑦键，节拍模式⇌定音模式。


A)节拍模式操作

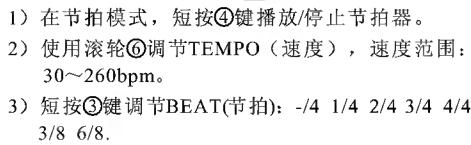

- 4) 短按⑤键调节RHYTHM(节奏型):
- 5) 长按⑤键调节PREB(预备拍):1~3
- 6) 短按⑦选择发音类型:
- 7) 播放节拍时, 强拍亮红灯, 弱拍亮绿灯。

Metronome	Tempos
Largo	40-60
Larghetto	60-66
Adagio	66-76
Andante	76-108
Moderato	108-120
Allegro	120-168
Presto	168-208
Prestissimo	208-260

 B)定音模式操作




技术规格

- 节拍误差<1%
- 定音误差<1‰
- 功耗：节拍状态电流<50mA
定音状态电流<60mA
- 外形尺寸：135(L)x80(W)x50(H)mm
- 重量：150g

电池更换

当LCD变暗时，请及时更换电池，如下图所示：

- 1.如图一按箭头所指方向打开电池门。
- 2.如图二放入4节AAA号电池，放入时请注意电池正负极。
- 3.如图三按箭头方向关闭电池门。

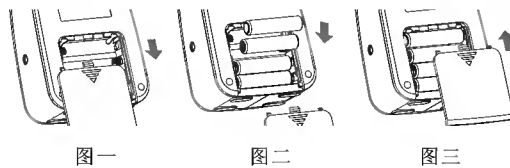

注意事项

- 使用环境：
 - 1、避免在高温、潮湿、零下等恶劣的环境中使用。
 - 2、避免在强光下使用。
- 请勿自行拆卸本机。
- 请保存好本手册以便以后查阅。


随机附件

- 操作说明书 ●产品合格证 ●4xAAA 电池


WSM-288 METRO TONE Owner's manual

Thank you and congratulations on your purchase of the cherub metronome WSM-288. Please take the time to read through this manual to ensure you get the best from your product.

PRODUCT INTERFACE

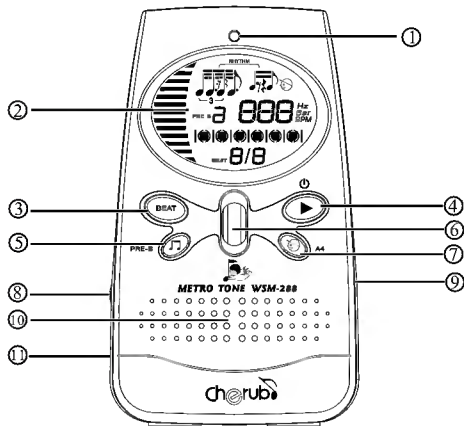

- ① Downbeat indicator
- ② LCD screen
- ③ Time signature
- ④ POWER/PLAY
- ⑤ PRE-BEAT/RHYTHM select
- ⑥ Parameter Adjust
- ⑦ Voice mode select
- ⑧ Volume control
- ⑨ Headphone jack
- ⑩ Speaker
- ⑪ DC in jack

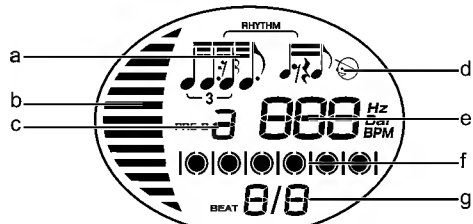

a) rhythm type b) beat demonstration c) pre-beat (up beat)
d) voice select e) tempo / A4 f) measure indicator
g) time signature

FEATURES

- Rolling wheel makes the operation simpler and faster.
- Auto-off function. The machine will automatically turn off if there is no operation for 5 minutes.
- Will save the settings after power-off.

OPERATION

1. Press and hold ④ to turn on/off.
2. Metronome is the default mode.
3. Press and hold ⑦ to choose between metronome and tone generator

A) Metronome mode




1. Press ④ quickly to start/stop metronome
2. Roll ⑥ to adjust tempo. Tempo range: 30 ~ 260 bpm
3. Press ③ quickly to adjust BEAT (Time signature): -/4 1/4 2/4 3/4 4/4 3/8 6/8.
4. Press ⑤ quickly to select RHYTHM:



5. Press and hold ③ to select PRE-BEAT.
6. Press ⑦ quickly to select the voice type: human voice, woodblock.
7. The red LED indicates the downbeat. The green LED indicates the on/off beats.

Metronome	Tempos
Largo	40-60
Larghetto	60-66
Adagio	66-76
Andante	76-108
Moderato	108-120
Allegro	120-168
Presto	168-208
Prestissimo	208-260

B) Tone generator

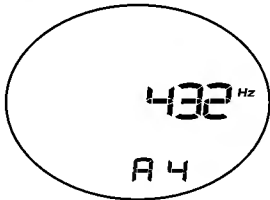

1. When in metronome mode, press ⑦ to enter A4 tone generator mode
2. Press ④ quickly to start/stop tone generator
3. Roll ⑥ to set the A4 range: 420 ~ 460 Hz.


SPECIFICATIONS

- Metronome tolerance: <1%
- Tone generator tolerance: <1%
- Consumption: Metronome mode: <50mA
Generator mode: <60mA
- Power: 6V(4xAAA)
- Dimension: 135(L)x80(W)x50(H)mm
- Weight: 150g

INSTALLING THE BATTERIES

When the LCD display becomes dim, please replace the batteries promptly as follows:

1. Please open the battery door as the arrow shows
2. Install 4 AAA batteries. Please pay attention to polarity.
3. Replace the battery door.

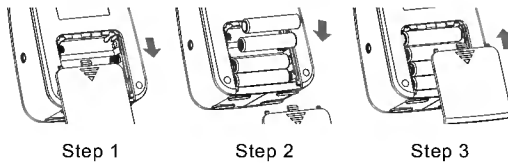

REMARKS

The device will turn off automatically when not in use for 5 minutes. If you want to turn on the device again, press ④ for 2 seconds.

ACCESSORIES

- Owner's manual
- QC mark
- 4 x AAA batteries

IMPORTANT NOTICE TO CONSUMERS

This product has been manufactured according to strict specifications and voltage requirements that are applicable in the country in which it is intended that this product should be used. If you have purchased this product via the internet, through mail order, and/or via a telephone sale, you must verify that this product is intended to be used in the country in which you reside.

WARNING: Use of this product in any country other than that for which it is intended could be dangerous and could invalidate the manufacturer's or distributor's warranty.

Please also retain your receipt as proof of purchase otherwise your product may be disqualified from the manufacturer's or distributor's warranty.

NOTIFICATIONS

CE mark for European Harmonized Standards

CE mark which is attached to our company's products of AC mains operated apparatus until December 31, 1996 means it conforms to EMC Directive (89/336/EEC) and CE mark And, CE mark which is attached after January 1, 1997 means it conforms to EMC Directive (89/336/EEC), CE mark Directive (93/68/EEC) and Low Voltage Directive (73/23/EEC).

Also, CE mark which is attached to our company's products of Battery operated apparatus means it conforms to EMC Directive (89/336/EEC) and CE mark Directive (93/68/EEC).

折法图



 
步骤一



步骤二



步骤三

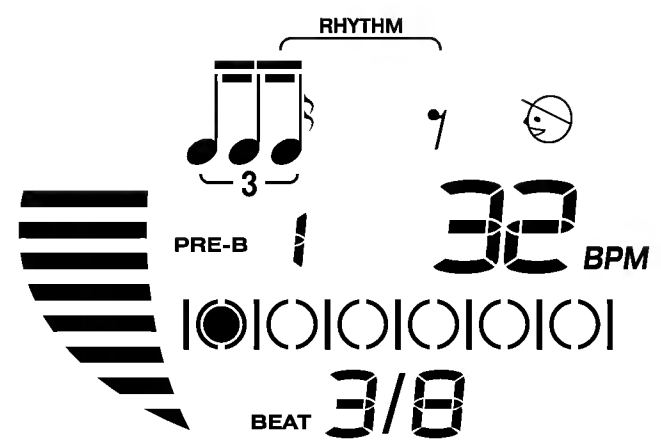

This file was downloaded from the site
mans.io

Instruction manuals and user guides

[Samsung](#)

[Pioneer](#)

[Alpine](#)

[LG](#)

[Dell](#)

[Sharp](#)

[Sony](#)

[Philips](#)

[Epson](#)

[Netgear](#)