


G-TONE Owner's Manual


Acoustic Guitar Preamp

www.cherubtechnology.com

GS-3 Acoustic Guitar Preamp

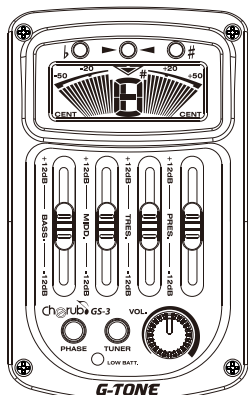

*Download Installation Guide&Cut-out Template From www.cherubtechnology.com

1. When the output line is connected to GS-3, it will start automatically. When the output line is pulled out, it will shut down automatically.
2. GS-3 has 4-band equalizer. Push BASS to adjust low frequency. Push MIDD to adjust middle frequency. Push TREB. to adjust high frequency. Push PRES. to adjust ultrahigh frequency. Push VOL. to adjust main volume.
3. Press PHASE to turn on/off phase function.
4. Press TUNER to turn on/off tuner. Output muted when turn on the tuner.
5. When turn on the tuner and play either string,  will indicate the tuning result.



A# sharp




A# flat




A# in tune

6. When the BATT. lights, please replace the batteries as soon as possible.

GS-3 箱琴EQ系列

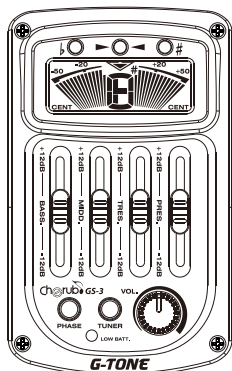

* 安装说明和切口模板
请到www.cherub.cn下载

- 1、当将输出线连接好后GS-3自动启动，输出线拔出后GS-3自动关闭。
- 2、GS-3有四段EQ均衡器，BASS推钮调节低频；MIDD推钮调节中频；TREB.推钮调节高频；PRES.推钮调节超高频；VOL.旋钮调节总音量。
- 3、按PHASE按键开启或关闭PHASE功能。
- 4、按TUNER按键开启或关闭校音器。当校音器打开时，输出静音。
- 5、校音器开启后，拨任意弦LCD液晶屏  将显示校音状态。



A# 音偏高



A# 音偏低



A# 音准

- 6、BATT.灯亮时表示电池电量不足，请尽快更换新电池。