


WST-930 扫弦夹式校音器 使用说明书

必不可少的好帮手

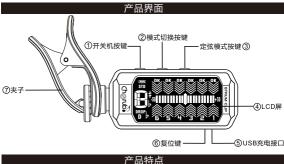

- 夹式校音器,体积轻巧,方便携带。
- ●复音检测功能,同时监测吉他6根弦的音准状态,快速准确。
- ●彩色LED屏幕显示。
- ●USB充电。

操作说明

- 1. 开关机键
- 长按打开和关闭校音器。
- 2. 模式切换键 按AUTO/CHRO键可切换十二平均律模式与自动识别模式。 定弦模式切换键 按MODE键可在多弦模式下切换三种定弦模式

自动识别模式

 多弦校音

 a)按①电源键开机,默认进入自动识别多弦校音模式

 (如右图所示)



b)一次拨动6根弦,界面将实时显示6根弦的音准状态

注:数字6-1表示弦序; 中间的白色竖线表示此弦有信号; 红色箭头表示音偏高; 黄色箭头表示音偏低; 沒有箭头并出现OK表示音已校准。

c)当某根弦没有信号时,只显示弦序的数字,竖线不 显示。







	6	5	4	3	2	1
STD	E	Α	D	G	В	E
DROP D	D	Α	D	G	В	Е
Ь	E⊦	A⊧	D⊧	G⊦	В⊧	E⊦





单弦校音 a) 在自动识别模式下,只拨动单根弦,将 自动转为单弦模式(如右图所示)。

注:字母表示音名,白色竖线表现音高状

态。



-50

音偏低

音偏高

平均律模式

按②AUTO/CHRO模式切换按键可将自动识别模式切换成十二平均律模式,在此模式下只

直弦校音,显示方法与自动识别模式的单弦校音-一样 ▲ 注意: 如果本机出现死机或其它异常情况,请短按复位键,进行复位操作。

电池充电

本机内置锂电池, 当显示屏出现 图标时,请进行充电操作:

▲ 注意:为了保证电池的使用寿命 和安全,请使用随机附带 的USB充电线充电。



技术规格

●校音模式:自动识别模式与十2 平均律模式 ●校音范围:A₀(27.5Hz)- C₀(4186.0Hz)

●定弦模式:STD, DROP D, ▶ ●校音精度:

单弦模式: ±3音分 多弦模式:±5音分

●功耗:60mA

●电源:内置锂电池,Micro USB充电接口

●体积:67(L)x 45(W)x 32(H)mm

●重量:46g

*技术规格如有变更,恕不另行通知。

使用环境:

零下等恶劣的环境中使用。 1.避免在高温、 2.避免在高温、潮湿、
 2.避免在强光下使用。

注意事项

请勿自行拆卸本机。请保存好本手册以便以后查阅。

随机附件 ●操作说明书 ●USB充电线

▲ 注意: 我们的产品使用的是聚合物锂电池,在使用产品前,请先行给本产品充电;若长时间不使用,超过三个月后给本产品充电一次或激活.

亲爱的 小えぼ 用户

在您使用小头碰产品时,请仔细参阅产品说明书,当您有疑问和困难时,请拨打售 后服务热线: 400-990-9866

一周内出现质量问题可退货退款 ■ 一年内出现质量问题可免费维修 一月内出现质量问题可调换 ■ 终身享有咨询和维修服务 ■ 一周内出现质量问题可退货退款

质量承诺

[请向销售商索取有效购买凭证并予以保存]

换修政策

包换政策:

在正常使用情况下,出现非人为的产品性能故 1.消费者自购机之日起1个月之内 障,且产品外观及包装保持完好的可向所购机的经销商换机。

2.消费者在换机时应出示由经销商开出的购机收据及保修卡,否则经销商可以不予更 换。

保修政策:


产品在购买之日起1年内,可免费享有维修服务;对于超过1年的产品及人为或不可抗 力因素造成损坏的产品,我司可提供有偿维修服务。

广东省珠海市金鼎镇科技九路10号 珠海市蔚科科技开发有限公司 售后服务部 邮编:519085



WST-930 Strum-Clip Tuner Owner's Manual

Thank you for selecting the Cherub WST-930 Strum-Clip Tuner. After years of research, Cherub's engineers finally conquered the difficult problem of identifying the polyphonic signal by vibration. The result is the WST-930, which is the first strum-clip tuner in the world. Just strum all the strings, and you will know if each string is in tune. WST-930 is your best friend to help your practice and performance.

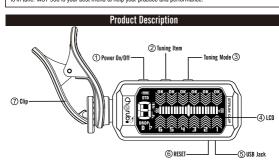

Features

- · Clip-on tuner, light and portable Polyphonic detection, can detect all 6 strings at the same time, fast and accurate
- USB rechargeable battery.

Operation Instruction

1. POWER ON/OFF

er on/off button to turn on/off.

2. AUTO/CHRO
Press@AUTO/CHRO button to switch tuning item: CHROMATIC and AUTO. 3. MODE

In pol

Auto

Polyphonic mode
 Press to turn on, the default mode is polyphonic mode.



b) Strum all 6 strings at one time, the d all 6 strings.

NOTE: Number 6 to 1 are the orders of strings. The white vertical bar in middle means the related string has signal in. When it is sharp, it shows by red arrow; when it is flat, it shows by yellow arrow; an when it is in tune, it displays OK without any arrow.



c) When a string has no signal input, it only displays the number of the string, but do not display the vertical bar.



ss (3) MODE button to adjust the tuning

 d) In polyphonic mode, pres modes: STD, DROP D, ♭. 6 STD DROP D D



Single string mode
 If you play a single string, it will chan automatically.





·ĬIJĬIJĬ**Ţ**ĬIJĬIJĬ

.9|||||||||||||||||+S



Chromatic

Press@AUTO/CHRO button to switch AUTO to CHROMATIC. In this mode you can only tune the strings one by one, and it displays as same as the single string mode of AUTO mode.

About Battery

WST-930 can be recharged through Micro USB in icon" ", please recharge it as soon as possible NOTE: To ensure the battery life and safety, please use the attached USB cable to recharge the unit.



Specifications

- Tuning Item: AUTO. Chromatic
 Tuning range: A₍27.5H2)- C₃(4186H2)
 Tuning mode: STD, DROP D, b
 Accuracy:
 Single string mode: ±3 cent
 Polyphonic mode: ±5 cent
 Power: built-in lithium battery, recharge by USB
 Dimensions: 67 (L)x 45 (W)x 32 (H)mm
 Weight: 46g
 Specification may change without notice.

Accessories

- Precautions
- PEnvironment:

 1.Do NOT use the tuner in high temperature, or high humidity, or subzero environments.

 2.Do NOT use the tuner in the direct sunlight.
- Please do NOT disassemble the tuner by yourself

Please keep this manual for future reference. ▲ NOTE: Our product uses Li-polymer battery, before using the product, please charge the battery first. When not using for a long period, charge or activate it in 3 months.

THE FCC REGULATION WARNING (for U.S.A.) This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by

- determined by turning the equipment off and on, the user is enco one or more of the following measures:
- Reorient or relocate the receiving an
- Increase the separation between the equipment and receive
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connect.

Consult the dealer or an experienced radio/TV technician for help.

CE mark for European Harmonized Standards CE Mark which is attached to our company's products of Battery mains the product is in fully conformity with the harmonized standard(s) EN 61000-6-3:2007-A1:2011 & EN 61000-6-1:2007 Under the Council Directive 2004/108/

© 2015 Cherub Technology-All rights reserved. No part of this publication may be reproduced in any form without prior written permission of Cherub Technology.

