


S·xover

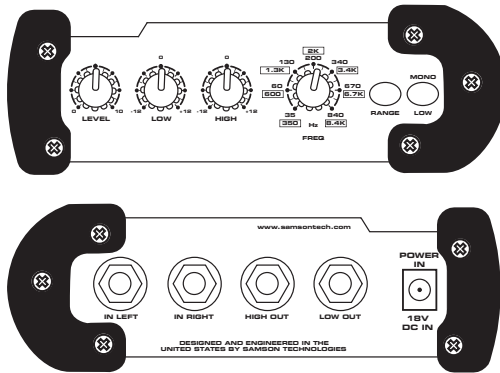

Stereo Two-way Electronic Crossover

Owners Manual

SAMSON[®]
A U D I O

Table Of Contents

Introduction and Features	3
Front and Rear Panel Layout	4
Operating the S xover	
Setting Up the S xover	5-6
Mono Sub Set-up	7
Wiring Guide	8
Specifications	8

Copyright 2004, Samson Technologies Corp.

Printed June 2004

Samson Technologies Corp.
575 Underhill Blvd.
P.O. Box 9031
Syosset, NY 11791-9031
Phone: 1-800-3-SAMSON (1-800-372-6766)
Fax: 516-364-3888
www.samsontech.com

^A **K-TEAM**
PRODUCTION

S xover Introduction and Features

Introduction

Congratulations on your purchase of the S xover by Samson Audio! The S xover is a full featured, stereo, two-way electronic crossover perfect for a variety of bi-amp speaker applications in studio monitoring, live sound and fixed installations. With individual controls for Input Level, as well as High and Low Frequency outputs, the S xover is small, but not short on features. For expanded control, the S xover provides a Range switch allowing you to adjust crossover frequency by ten times so you can configure a speaker system with drivers from subs to tweets. The S xover, with its Mono Low switch, is a perfect complement if you're adding a subwoofer to a studio monitor or PA system when using a common subwoofer with stereo satellite speakers. Whatever your exact situation, the S xover will provide high quality and reliable performance thanks to its solid build construction based around the extruded aluminum chassis and oversized rubber bumper feet.


In this manual, you'll find a more detailed description of the features of the S xover, as well as a guided tour through the front and rear panels, step-by-step instructions for using the S xover, and full specifications. You'll also find a warranty card enclosed—please don't forget to fill it out and mail it so that you can receive online technical support and so we can send you updated information about other Samson products in the future.

S xover Features

- Two-way Stereo Electronic Crossover
- Adjustable Crossover frequency control.
- High and Low Level Outputs.
- Input Level Control.
- Range control covering frequencies from subs to tweeters.
- Mono Low switch for operating sub satellite system woofers.
- Large rubber bumper feet.
- Three year extended warranty.


S xover Front and Rear Panel Layout

Front Panel Layout

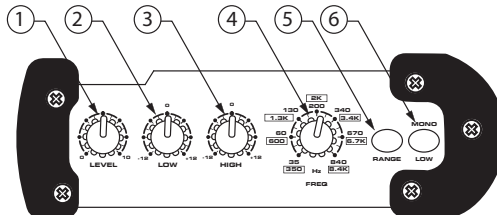

- 1 **LEVEL**- Used to adjust the input gain from -00 to +0dB.
- 2 **LOW** - Adjusts the output gain of the Low frequency bands from -12 to +12dB.
- 3 **HIGH** - Adjusts the output gain of the High frequency bands from -12 to +12dB.
- 4 **FREQUENCY CONTROL**- This control that sets the crossover point dividing the frequency bands.
- 5 **RANGE SWITCH** - Selects the range at which the frequency control operates, either normal or times 10.
- 6 **MONO LOW** - Selects mono operation for the low output.

Rear Panel Layout

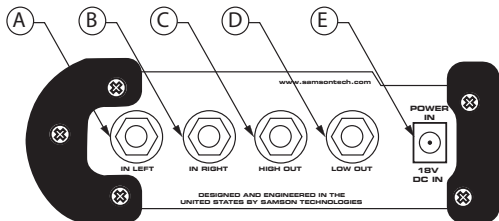


- A **IN LEFT** - 1/4-inch line level input for the Left channel.
- B **IN RIGHT** - 1/4-inch line level input for the Right channel.
- C **HIGH OUT** - TRS connector with Left and Right High frequency line outputs.
- D **LOW OUTPUT** - TRS connector with Left and Right Low frequency line outputs.
- E **POWER IN DC INLET** - Connect the supplied power adapter here.

Operating the S xover

Setting Up the S xover

The basic procedure for setting up and using your S xover is simple and takes only a few minutes. Remove all packing materials (save them in case of need for future service).

There are many different ways to use the S xover, however the basic connection is the same in most installations and applications. The following example details a typical 2-way stereo sound system for using a bi-amp power arrangement. Follow the steps below to connect your bi-amp system.

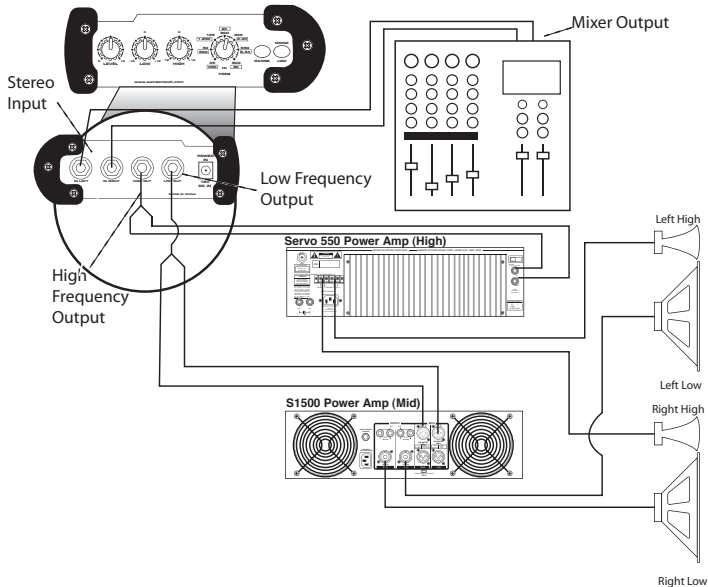

- Connect the AC/DC power adapter to the DC inlet, but don't plug the AC/DC power adapter in just yet.

Operating the S xover

Setting Up the S xover

- Set the LEVEL, LOW and HIGH Output controls all the way down by turning them fully counter clockwise.
- Using two standard 1/4-inch phone cables, connect the your mixer's left and right output to the S xover's LEFT and RIGHT INPUT.
- Use a "Y" cable with a 1/4-inch TRS (TIP RING SLEEVE) to two 1/4-inch TS (TIP SLEEVE) to connect the Left and Right LOW Output to the power amp connected to the low frequency drivers. *For a detailed wiring diagram for the 1/4-inch TRS "Y" cable see page 8 in this manual.*
- Use a second "Y" cable with a 1/4-inch TRS (TIP RING SLEEVE) to two 1/4-inch TS (TIP SLEEVE) to connect the Left and Right HIGH Output to the power amp connected to the high frequency drivers.
- At this point connect the power amplifiers to the low and high frequency speakers following the manufacturers recommended procedures outlined in their individual owner manuals.
- Set the position of the RANGE switch so that the FREQ control is operating in the desired frequency range. The Range control operates from 35 Hz to 800 Hz when the RANGE switch is out, but with the RANGE switch in the frequency is multiplied by 10 times so the range becomes 350 Hz to 8 kHz.
- Once the RANGE switch is properly set, use the FREQ control to set the crossover point between the low and high frequency driver. Be sure to check with the speaker manufacturer's recommended operating range for the individual drivers to avoid any serious damage that may result.
- Now, plug in the AC/DC adapter while applying the "Golden Rule of Audio" to power up your system.

IMPORTANT NOTE: The "Golden Rule of Audio" - LAST ON / FIRST OFF


When running a loudspeaker system with one or multiple power amplifiers, it is highly recommended that you follow the LAST ON / FIRST OFF rule. When powering up your sound system, turn your power amplifier on last. When you power down your system, turn your power amplifiers off first. This will prevent any switching spikes you may get from other gear in your system, and help prevent unnecessary pops that can sometimes cause speaker damage.

- Run a signal from your mixer(like from a CD or MP3 player) and adjust the output level so a good signal is sent to the S xover. Now adjust the LEVEL control to about half way up.
- Finally, set the LOW and HIGH controls to about half-way and adjust the levels with an RTA (REAL TIME ANALYZER), like a Samson D1500, or use your ears to dial in the blend between the low and high drivers.

S cover Sub System Set-up


Typical Set-up for Satellite systems with Mono Sub

The diagram below shows a typical set-up for using the S cover with a sub woofer for PA application using full range speakers in stereo along with a common sub running in mono. You can use the same type of hook-up for connecting a sub woofer to full range studio monitors in recording set-ups. Set the RANGE switch out and the Mono switch in and follow the diagram below to connect your system.

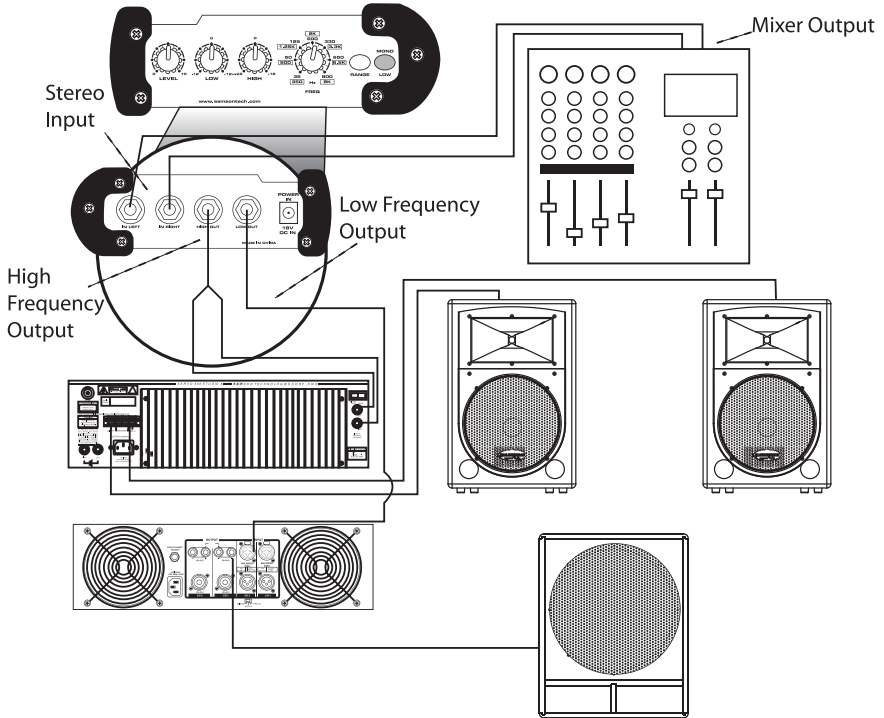

S xover Specifications

1/4-inch TRS (TIP RING SLEEVE) to two 1/4-inch TS (TIP SLEEVE) INSERT Y CABLE Wiring Diagram

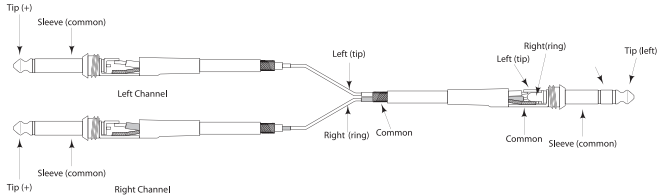

Frequency Response

10Hz to 160kHz, -1dB

Dynamic Range

>95dB

Noise Level

-80dBu

THD

.003% typical, 1% at +15dBu out

Maximum Output Level

+15 dBu

Max Input Level

+22 dBu

Input Impedance

10k Ohm

Output Impedance

100 Ohm

Dimensions

5.65" L x 4.13" W x 2" H (144mm L x 105mm
W x 51mm H)

Weight

16.5 oz., 419 gm.

Samson Technologies Corp.

575 Underhill Blvd.

P.O. Box 9031

Syosset, NY 11791-9031

Phone: 1-800-3-SAMSON (1-800-372-6766)

Fax: 516-364-3888

www.samsontech.com