



Fzone Music Technology Co.,Ltd

www.fzonetechnology.com

Chromatic/Guitar/Bass/Violin/Ukulele Tuner

FT-8001

User's Manual

Thank you for using FZONE Color Display tuner! The frequency range detected by the FT-8001 is optimized for all instruments by Chromatic/Guitar/Bass/Violin/Ukulele. Tuner sense the vibrations of the instrument it is attached to.


ATTACHING THE TUNER TO YOUR INSTRUMENT

Use the clamp to attach the tuner to your instrument. Take care to avoid damaging the finish of your instruments. Do not attach the tuner to your instrument if any of the rubber pads are broken or missing,

For guitars, attach the clamp to the headstock (placing the body of the tuner either in front of or behind the headstock). For other instruments, find the location that allows best pick up of sound while allowing you to view the display easily.

After attaching the tuner to your instrument, adjust the arm that connects the tuner to the clamp for optimum viewing of the tuner's color display.

APPEARANCE AND SKETCH

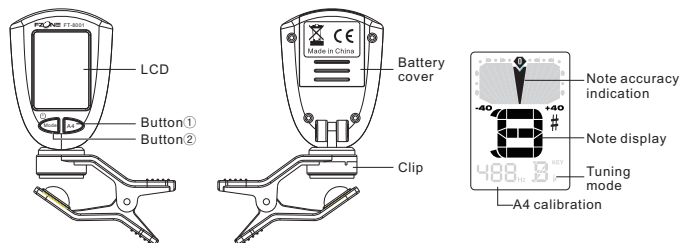

POWER UP

Once you have attached the tuner to your instrument or music stand, turn it on by pressing the power switch longer on the face of the tuner.

The tuner defaults to the tuning reference of A4-440Hz. To set to another tuning reference, push the "A4" button on the front of the tuner and press the button again to choose a new tuning reference. The pitch reference can be set anywhere from 430Hz—450Hz. To press the power switch off, the tuner will record A4 which u choose automatically. Take off the battery to reset the tuner to A-440Hz.

尺寸：100*160MM

材质：80g速写纸

正反面印

TUNING

The tuner is now ready to help you tune your instrument. As soon as you play a note, the tuner's needle display will indicate the note you are playing and how close to pitch you are by different colors. When the needle point to the left side of the display with yellow color indicated flat, while point to the right of the display with red color indicates sharp.

You are in tune if the needle point to the center of meter with blue.

When tuner is under Chromatic mode, you can easily deal with non-standard tuning. It will read any note you play.

POWER SAVE FEATURE

If no notes are detected for 3 minutes, the tuner will shut off automatically.

SPECIFICATIONS

1. Tuning mode: Chromtic/Guitar/Bass/Violin/Ukulele
2. A4 calibration: 430Hz—450Hz
3. Tolerance: ± 1 cents
4. Power: 3V CR2032 battery (one piece)

BATTERY REPLACEMENT

Please pay attention to the positive and negative of the battery, when open the battery cover and put in a CR2032 battery. If there are some phenomenons like system halted and no use to the power key, please take out the battery and re-put in and then the problems will be solved.

CAUTION

Leaving the tuner attached permanently to the instrument for a long time period could cause marring of the finish. We recommend you remove the tuner from the instrument after you finish playing.



Fzone Music Technology Co.,Ltd

[www. fzonetechnology. com](http://www.fzonetechnology.com)