

# **ClearOne®**

**COLLABORATE® Live 600**

Quick-Start Guide




## COLLABORATE LIVE 600

### COMPONENTS INCLUDED

| COLLABORATE Live 600  |   |
|---|---|
|  | COLLABORATE Live 600 codec with power supply and COLLABORATE Remote control with dongle   |
|  | 910-2100-003<br>UNITE 200 PTZ camera, power supply, HDMI cable and RS232 Serial Control cable<br><br><i>Note: The remote control inside the camera box is only for any advanced configuration in the camera, if required.</i><br><br><i>For the camera's control, use the COLLABORATE Codec Appliance's remote control.</i> |
|  | 910-156-200-00<br>CHATAttach 150, cables and power supply.  |

## MAKING THE CONNECTIONS

Connect the CHATAAttach 150, the UNITE 200 camera, Ethernet, and monitor(s) to the COLLABORATE Live 600 codec as shown.

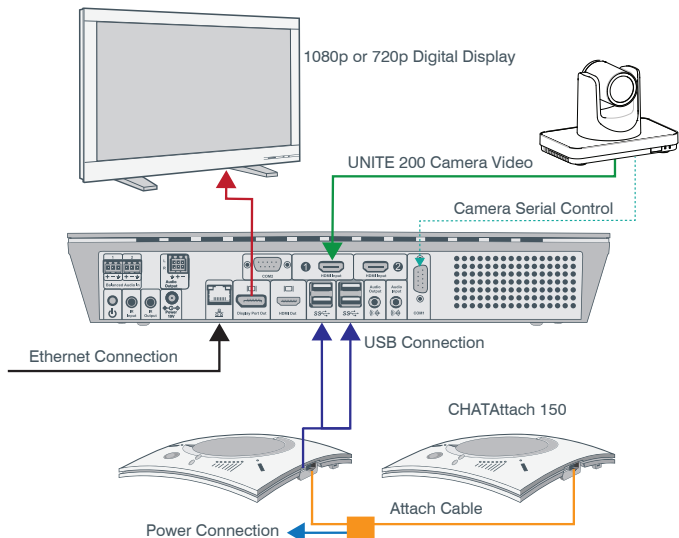

Note: Audio and power connections not shown.

## COLLABORATE LIVE 600

### CONNECTING THE REMOTE CONTROL DONGLE


The Remote Control includes a dongle that plugs into the FRONT USB port on the codec.



## AUDIO OUTPUT OPTIONS

There are three audio output options, accessed from the back of the COLLABORATE Live 600, for connecting the audio.

1. Balanced Audio output to an amplifier that is connected to speakers
2. Line output to powered speakers
3. HDMI output to the primary monitor

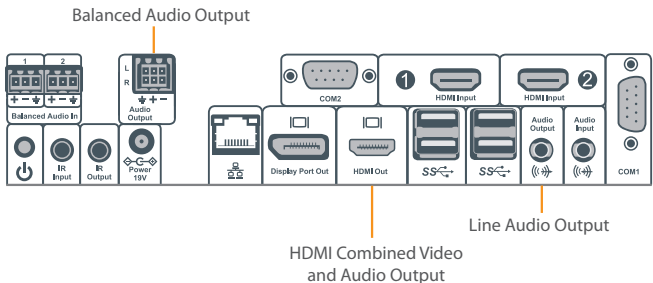

## COLLABORATE LIVE 600


### CONFIGURING DISPLAY SETTINGS

After all peripherals are connected to the unit, turn the unit on.

Once COLLABORATE Live is loaded – you will see your local camera video on your screen.

Using the remote control, navigate to the display settings:

#### Settings > Advanced > Display

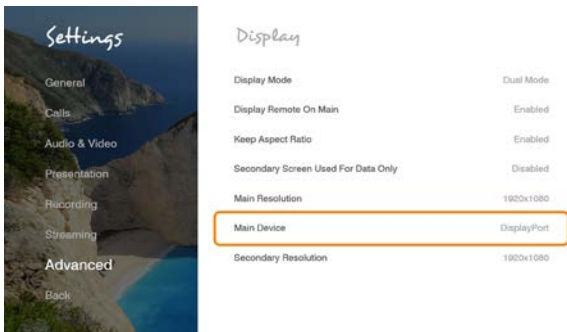


According to your monitor capabilities, set to the maximum supported resolution. If 2 monitors are connected to the unit, the display mode is automatically changed to dual mode and you can set both monitors' resolutions.

## CONFIGURING AUDIO SETTINGS

The COLLABORATE Live 600 audio input is CHAT 150 and audio output is set to the Balanced Audio Output.

Verify this in COLLABORATE **Settings > Audio & Video**

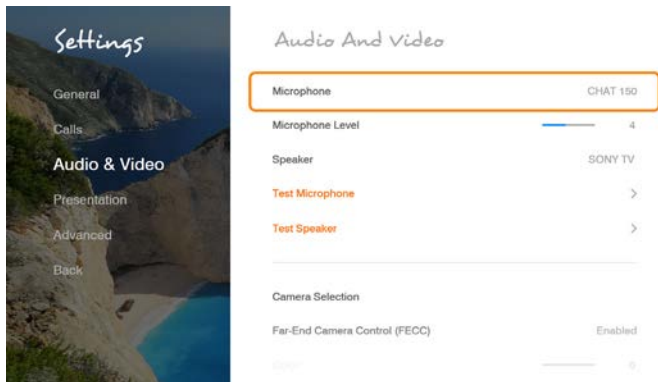


Note: It is recommended to use the CHATAAttach 150.

## COLLABORATE LIVE 600

### CONFIGURING NETWORK SETTINGS

Using your remote control, navigate into the network settings:

**Settings > Advanced > Network**

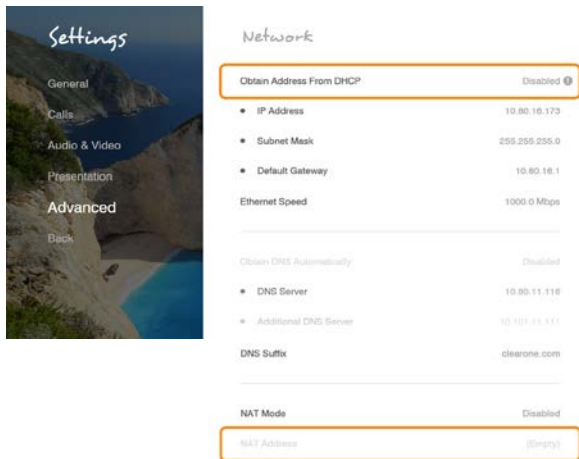

The COLLABORATE Live 600 obtains its IP automatically by default from the DHCP server.

Set “Obtain Address From DHCP” to “Disabled” to manually configure network settings.



### CLEARONE CONTACTS

#### Headquarters

5225 Wiley Post Way  
Suite 500  
Salt Lake City, UT 84116

#### US & Canada

**Tel:** 801.975.7200  
**TollFree:** 800.945.7730  
**Fax:** 801.303.5711

#### International

**Tel:** +1.801.975.7200  
**e-mail:** [global@clearone.com](mailto:global@clearone.com)

#### Sales

**Tel:** 801.975.7200  
**e-mail:** [sales@clearone.com](mailto:sales@clearone.com)

#### TechSupport

**Tel:** 801.974.3760  
**e-mail:** [collaborate.support@clearone.com](mailto:collaborate.support@clearone.com)

#### Website

[www.clearone.com](http://www.clearone.com)

© 2019 ClearOne, Inc. All rights reserved.

Information in this document is subject to change without notice. QSG-0072-001 Revision 1.0 February 2019