
 



BSSD-L10-18/14

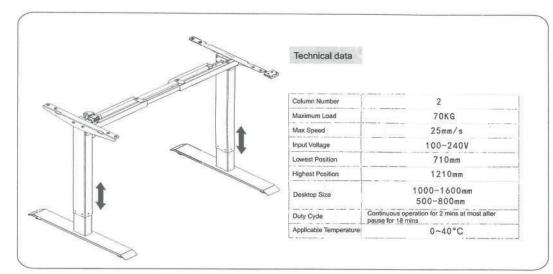



Accessory list


Attention: The drawings below are only for reference which might be slightly different from the actual object, please in kind prevail. Any tools missing or installation problems, please contact the customer service firstly.




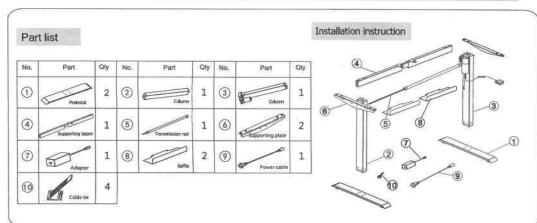


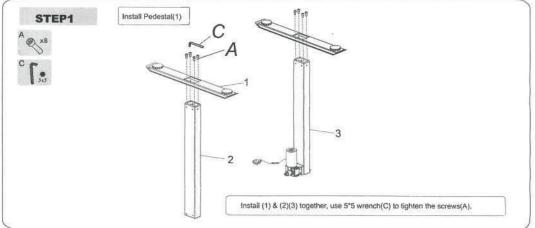

 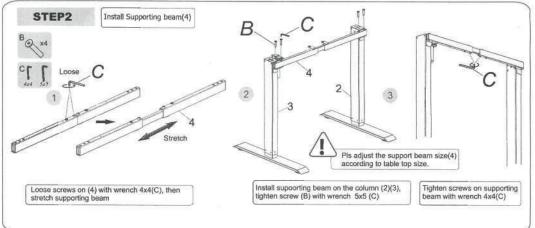


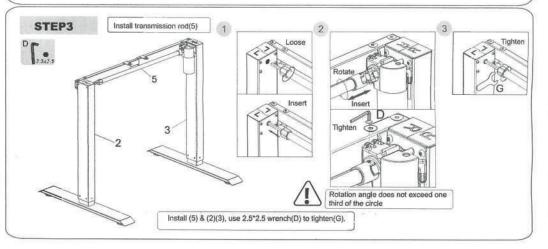

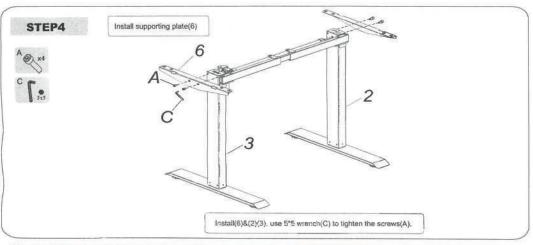

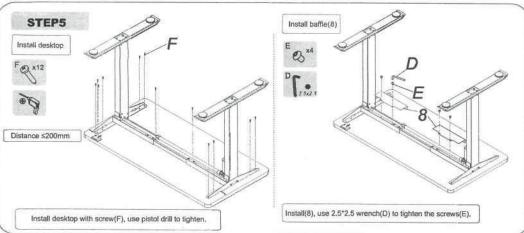





Instruction

Press the UP button or DOWN button to lift or lower the height of desk surface.

Common fault treatment

The following tips will help you detected and eliminate the common fault and error. If the fault you met is not listed below, please contact with your supplier. Only the manufacturer and professionals are capable for investigating and correcting those fault and error.

Fault phenomenon	Method
No response while long pressing down arrow after connected with a power supply	Check if all the cables be connected well
	2 Contact your supplier or dealer
The desklop could not be lifted	1.Check if overloaded, max loading: 70kg;
	Z. Contact your supplier or dealer
Overwork (Duty cycle:Max 2min on/30min OFF)	Restart it after suspend for 30mins for the working time is too long
	2.Contact your supplier or dealer

Button






- Power supply: AC100V-240V,50/60HZ
 Service Environment: 0-40°C
- 2. Service Environment, U-4.U. 3. Venue the description of the service environment of the description of the service environment, be careful not to let the drops into the internal parts, not toose the connector. 4. The elactric, be careful not to let the drops into the internal parts, not loose the connector in the service environmental legislation, not the general household it in accordance with each country's environmental legislation, not the general household

- waste.

 5. Check carefully to ensure correct and complete assembly before using.

 6. Be familiar with all functions and program sellings of the product before first use.

 7. Children are forbidden to play on the product because of unforeseen action when playing, so any dangerous consequences caused by this improper action will not be on
- Slight noise caused by the V-ribbed belt or brake system due to structure will not have any effect on the use of the equipment. Corrosive or abrasive materials are forbidden to clean the equipment. Must ensure that the
- cleaner used will not pollute the environment
- 10. Please make sure there is no hazard sources in your operating environment, e.g., do not litter the tools around. Always be careful to treat the packaging materials in order to avoid any possible danger, e.g. plastic bag may lead to choking hazard to children. 11. Keep the original package of the equipment if necessary in case of the future use in
- 12, The following tips will help you detected and eliminate the common fault and error. If the fault you met is not listed below, please contact with your supplier. Only the manufacturer and professionals are capable for investigating and correcting those fault and error,

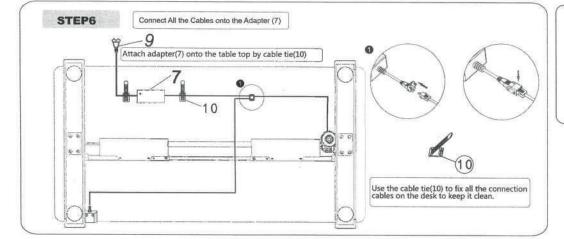

Waste disposal







This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.