# Titan™

## **OPERATING MANUAL AND USER GUIDE**

Titan™ 8 Passive

Titan™ I2 Passive Titan™ I5 Passive Titan™ 8 Active MKII Titan™ I2D Titan™ I5D

Titan™ Sub Al2 Titan™ Sub I5A MKII





### **IMPORTANT WARNINGS & SAFETY INSTRUCTIONS**

- 1. Read these instructions
- 2. Follow all instructions
- 3. Keep these instructions
- 4. Heed all warnings
- 5. Do not use this apparatus near water
- 6. Clean only with dry cloth.
- 7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9. Do not defeat the safety purpose of the polarised or grounding plug. A polarised plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10. Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.
- 11. Only use attachments/accessories specified by the manufacturer.
- 12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart and apparatus combination to avoid injury from tip-over.



- 13. Unplug the apparatus during lightning storms or when unused for long periods of time.
- 14. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way including but not limited to power supply cord or plug damage, liquid ingress, foreign objects in the chassis, exposure to rain/moisture or impact damage. In addition the unit must be serviced when you experience any abnormal operation.
- 15. CAUTION: These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not attempt to perform any servicing other than that contained in the operating instructions unless you are qualified to do so. In addition opening the casing will result in your warranty becoming null and void.
- 16. Do not install this apparatus in a confined space such as a book case or similar unit. Good ventilation should be maintained around the apparatus and any vents, air-inlets or fans should not be obstructed by objects such as paper, table-cloths, curtains etc.
- 17. WARNING: To reduce the risk of fire or electric shock, do not expose the apparatus to rain or moisture. The apparatus should not be exposed to dripping or splashing and objects filled with liquids, such as vases, should not be placed on the apparatus.
- 18. WARNING: The mains plug/appliance coupler is used as a disconnect device, the disconnect device shall remain readily operable.



- 19. This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.
  - Warning: To reduce the risk of electric shock, do not remove the cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.
  - The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.
- 20. (Protective earthing terminal) The apparatus should be connected to a mains socket outlet with a protective earthing connection.
- 21. Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use local return and collection systems or contact the retailer where the product was purchased. They can take this product for safe environmentally friendly recycling.

## **TABLE OF CONTENTS**

1	Important Warnings & Safety Instructions
2	Important Safety Information Powered Products
4	Introduction / About the Titan™ Series
4	Titan series overview
5	Features
6	Qubit
7	Setting up / Speaker Placement
7	Connections / Wiring - Passive
8	Rear Panel Layout - Passive
8	Connection Diagram - Passive
11	Rear Panel Layout - Active
14	Connection Diagram - Active
15	Rear Panel Layout - Sub A12
16	Connection Diagram - Sub A12
18	Rear Panel Layout - Sub 15A MKII
19	Connection Diagram - Sub 15A MKII
21	Specifications - Titan™ Passive
22	Specifications - Titan™ Active
24	Specifications - Titan™ Subwoofers
25	Dimensional Drawings - Titan™ 8 / 12
26	Dimensional Drawings - Titan™ 15 / 8A MKII
27	Dimensional Drawings - Titan™ 12D / 15D
28	Dimensional Drawings - Titan™ Sub A12 / 15A MKII
29	Warranty

#### INTRODUCTION

Wharfedale Pro Titan™ Series is the result of many years of experience in the use, design and manufacturing of professional loudspeaker products. We take great pride in engineering and building every Wharfedale Pro loudspeaker and wish to thank you for entrusting us with your sound.

From the time Gilbert Briggs built his first loudspeaker in 1932, to the present, Wharfedale Loudspeakers have maintained the same standard of quality in components, workmanship and performance. Wharfedale are one of the few present day manufacturers that design, engineer and build all of our own transducers.

Please take a few minutes to read this manual completely in order to ensure that you get the most out of your Titan™ Series Loudspeaker system.

### TITAN™ SERIES OVERVIEW

The Titan Series are powerful, accurate, high quality loudspeaker systems with low distortion that are designed to deliver oustanding performance at a cost effective price point. An Elliptical Wave Guide (EWG) is perfectly matched to the custom designed HF drivers and provides smooth dispersion in both the horizontal and vertical planes.

The road tough, gas-assist injection moulded polypropylene enclosures are ultra lightweight and include rubberised handles and cable management to make Titan the most user-friendly portable speaker on the market. Threaded rigging points mean that Titan is equally suited to flown applications; a comprehensive range of Wharfedale Pro wall mounting options are also available as optional extras.

Active models feature rear panel power LED's and a throat mounted LED to make you aware of AC power supply from both the front and rear of the unit. Active models also feature a horn LED defeat switch for less obtrusive aesthetics in applications such as conferencing and A/V presentations. The BRO™ (Bass Response Optimizer) circuit on the 12D and 15D models helps counteract loss of bass at low levels, similar to a loudness switch on home HiFi amplifiers. In addition our "D" models feature Qubit™ 24-bit 192kHz DSP Processing.

#### **FEATURES**

#### **Titan Passive**

- ♦ 2-way full range loudspeakers
- ♦ Low distortion, high power moisture proof woofers
- ♦ HF compression drivers
- ♦ 90° x 60° Elliptical Wave Guide (EWG)
- ◆ DTF™ Dynamic Thermal Filament HF protection
- ♦ Lightweight, high strength gas-assist injection moulded polypropylene enclosures
- ♦ Ergonomic rubberised handles
- ♦ Integral lockable 35mm (1¾") pole mount socket
- ♦ M6 / M8 rigging points
- Speakon™ and ¼" jack inputs

#### **Titan Active**

- ♦ Bi-amplified full range loudspeakers
- ♦ Low distortion, high power moisture proof woofers
- ♦ HF compression drivers
- ♦ Qubit™ 24-bit 192kHz DSP processing
- ♦ Independent LF & HF adaptive dynamics and signal limiting
- Per channel volume controls (Master only on 8A MKII)
- ♦ 2 Band EQ
- 90° x 60° elliptical Wave Guide (EWG)
- BRO™ Bass Response Optimizer (12D & 15D only)
- ♦ Horn LED defeat switch
- Balanced XLR output for parallel wiring
- ♦ XLR / ¼" jack combo inputs
- Mic / line level input selector
- ♦ 2 mixable inputs (12D & 15D only)
- ♦ Stereo RCA inputs (12D & 15D only)
- ♦ Lightweight, high strength gas-assist injection moulded polypropylene enclosures
- ♦ Ergonomic rubberized handles
- ♦ Integral lockable 35mm (1¾") pole mount socket
- M6 / M8 rigging points
- ♦ IEC AC receptacle

#### **Subwoofer**

- Low distortion, high power woofers
- ♦ 2x balanced XLR HPF outputs
- ♦ 2x summed XLR / 1/4" jack combo inputs
- ♦ Built in signal limiting
- Adjustable crossover frequency
- -∞ to +6dB trim control
- ♦ 0° / 180° switch
- Ergonomic handles
- ♦ Pole mount socket
- ♦ IEC AC receptacle

## QUBIT™

Qubit brings the power and precision of 24-bit 192kHz DSP processing to the next generation of Wharfedale Pro Products.

With advanced multi-band dynamic processing and filtering Qubit helps fine tune your system to sound natural and open. Qubit processing optimises the loudspeaker to provide smooth digital crossover points that are perfectly aligned. Protection is offered in the form of true independent adaptive LF and HF signal limiting that helps protect against thermal damage and driver over excursion.

Qubit has an extended frequency response that goes way beyond the capabilities of our hearing, providing an extended phase response that remains linear throughout our natural hearing range. A Qubit equipped system can reproduce exceptionally natural and accurate transients due to its phase characteristics and perfect time alignment.

#### **SETTING UP**

- 1. Ensure the speakers power switch is in the off position (Active models only)
- 2. Set the level controls to minimum (Fully anticlockwise) (Active models only)
- 3. Set the EQ controls to 0dB (Active models only)
- 4. Select mic/line input (Active models only)
- 5. Connect all signal cables
- 6. Connect the power cable (Active models only)
- 7. Switch on source equipment, ensuring that the master level is at minimum
- 8. Switch on the Titan Loudspeaker (Active models only)
- 9. Raise the level control on the Titan (Active models only) or external amplifier
- 10. If the limit LED illuminates lower the level control, if more level is required you will need more speakers. Occasional flashes are acceptable. (Active models only)
- 11. When powering down your system ensure that the level control (Active models only) has been lowered to minimum before switching off the power

### **SPEAKER PLACEMENT**

The well behaved dispersion characteristics of the Titan series make speaker placement quick and simple.

As with all full range loudspeakers it is recommended to place a Titan above the head level of the audience, as the human body can absorb a huge amount of high frequency energy. Placing the loudspeaker enclosure higher up also helps improve coverage for more even levels over a greater audience area.

Tripod speaker stands, pole mounts, Wall brackets and rigging hardware can be used to elevate the Titan loudspeaker. Always ensure that any accessories that are used are capable of safely elevating the loudspeaker as incorrect rigging can be dangerous and even fatal. Please refer to the important safety warnings section for more guidelines on rigging and suspending.

Always place your microphones outside the coverage of your front of house speakers to reduce the risk of feedback.

### Titan™ REAR PANEL LAYOUT









#### **CONNECTION DIAGRAM #1**

Titan two channel setup

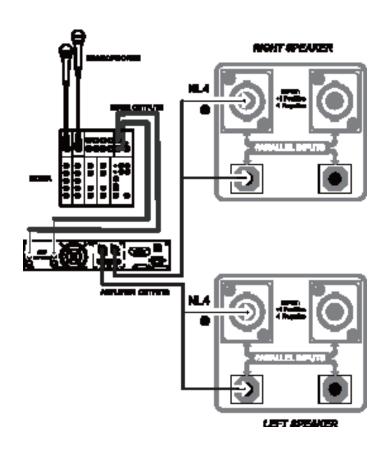

#### **CONNECTION DIAGRAM # 2**


Titan mono front of house+stage monitor setup

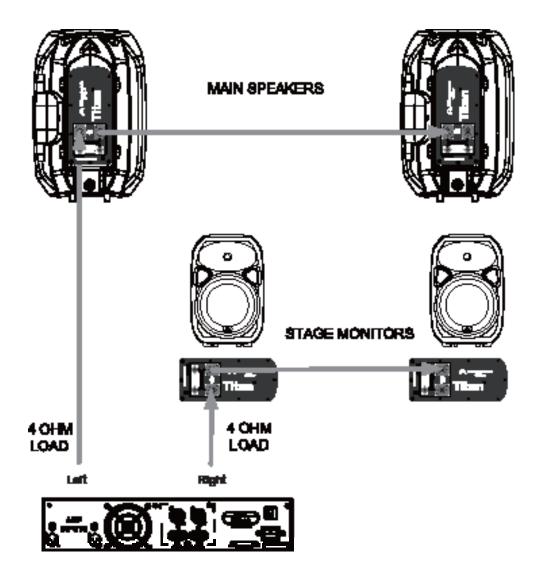

NOTE: This configuration represents a 4 ohm load to each output channel of the amplifier


#### **CONNECTION DIAGRAM #3**

USING THE Titan WITH A PASSIVE SUBWOOFER

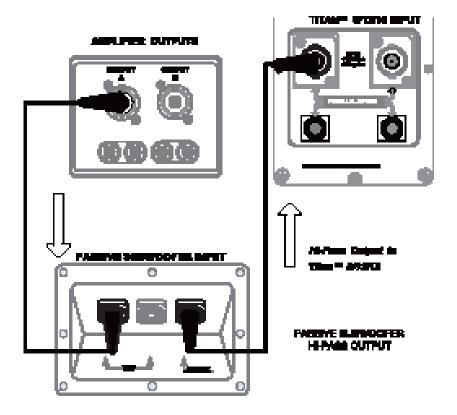

#### CONNECTION DIAGRAM # 4

USING THE Titan™ 8/12/15 IN A BI-AMP SYSTEM

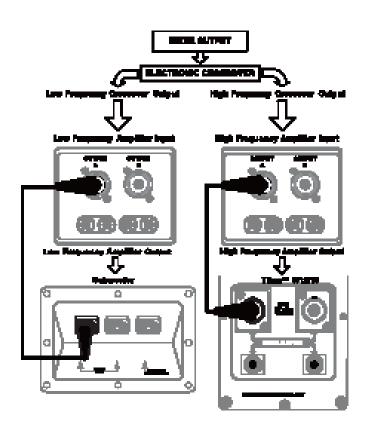


#### Titan™ 8A MKII / Titan™ 12D / Titan™ 15D


#### The Loop / Mix Switch

The LOOP/MIX switch allows you to control the signal content going to the XLR OUTPUT jack. In the "LOOP" mode, this switch routes the signal of INPUT B to the line level XLR OUTPUT jack, bypassing the EQ section and volume control. When in the MIX mode, this switch routes the combined (or "mixed") signals of both INPUT A and INPUT B to the line level XLR OUTPUT jack. This signal can then be sent to additional powered speakers or powered subwoofers.

#### **8A MKII - REAR PANEL FEATURES**

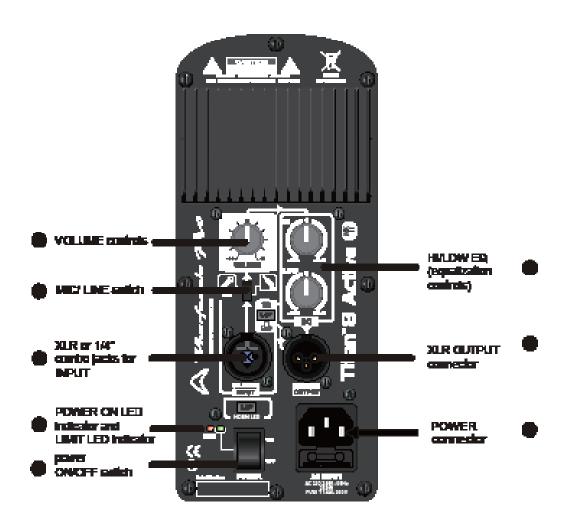

#### Titan™ 12D/15D REAR PANEL LAYOUT

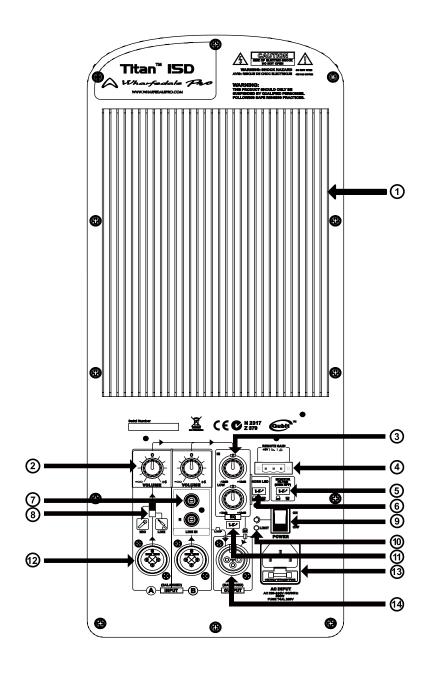


### TITAN™ 8A MKII/12D/15D REAR PANEL FEATURES

- 1. **Heat Sink:** The heat sink allows for dissipation of heat built up from the amplifier via air cooling at the rear of the enclosure. (Titan 8A MKII and 15D only)
- 2. **VOLUME for INPUT A and INPUT B:** These knobs control the level of each input channel (Controls the master volume on the Titan 8A MKII)
- HI and LOW EQ (equalization) controls: These knobs control the equalization of the overall output signal providing +/- 10dB of gain for each band.
- 4. Remote Control: This Pheonix connector can be used to control the volume with an applied voltage.
- 5. 90Hz Monitor Filter switch: Used to reduce bass buildup due to half space loading.
- 6. Horn LED defeat switch: Switches off the horn power LED for discrete applications.
- 7. **RCA L / R (Left and Right) input jacks:** These jacks allow input of a stereo signal (left and right). The signal is actively combined or "summed" providing a mono signal to the amplifier.
- 8. **GAIN selection switch:** This switch selects the proper gain structure for INPUT A. If a microphone is connected to INPUT A, use mic mode (up). If the signal source is anything other than a microphone (playback device, keyboard or mixer output, for instance) use the line mode (down).
- 9 & 10. POWER ON / OFF switch, POWER 'ON' indicator LED and LIMIT indicator LED: The switch: turns the power on and off. The bracketed LED to the left of the POWER switch illuminates when the power switch is in the 'ON' position. The LIMIT LED illuminates when the signal limiter is limiting the level of the signal to prevent distortion and overload.
- 11. **Output source "LOOP / MIX" switch:** In the "LOOP" mode, this switch routes the signal of INPUT B to the line level XLR OUTPUT jack, bypassing the EQ section and volume control. When in the MIX mode, this switch routes the combined (or "mixed") signals of both INPUT A and INPUT B to the line level XLR OUTPUT jack.
- 12. **XLR / ¾" COMBO input jacks for INPUT A and INPUT B:** These convenient jacks allow XLR or ¾" balanced input connections to INPUT A and INPUT B
- 13. **POWER cord receptacle:** This is a receptacle for a standard IEC, three prong, grounded AC electrical connection cord. Be sure that you are plugging into the correct source voltage that matches what is indicated just below the power cord jack.
- 14.**XLR line level OUTPUT jack:** This jack provides a balanced line level output for connection to additional Titan™ ACTIVES, powered subwoofers or amplifiers.


#### Titan™12D / 15D CONNECTION DIAGRAM # 1

Basic microphone / playback hookup

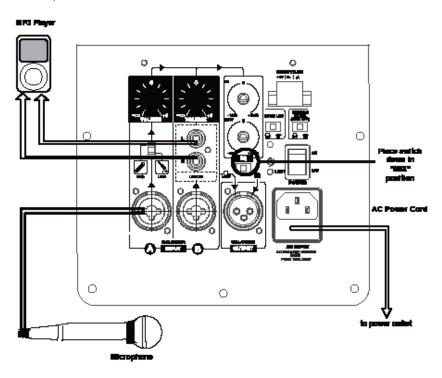

#### Titan™12D / 15D CONNECTION DIAGRAM # 2

Connecting two Titan™ ACTIVE speakers together

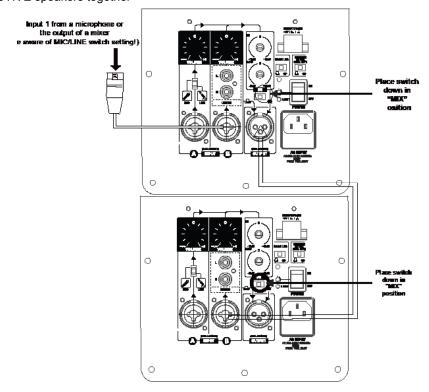

### TITAN™ SUB A12 REAR PANEL FEATURES

**1. HEAT SINK** Cooling fins for amplifier. Do not obstruct.

2. VOLUME CONTROL Adjusts the volume.

3. INPUT L Balanced line level input via a XLR/ ¼" combo connector.

**4. INPUT R** Balanced line level input via a XLR/ ¼" combo connector.

**5. OUTPUT R** Balanced male XLR connector provides output HIGHPASS signal.

**6. OUTPUT L** Balanced male XLR connector provides output HIGHPASS signal.

**7. POWER SOCKET** This is the connection for the IEC AC power connector.

**8. LIMIT LED**LED indicator illuminates when the signal limiting function is activated.

**POWER LED** LED indicator illuminates when the unit is powered up.

**9. POWER SWITCH** Turns the power on and off to the subwoofer amplifier module.

**10. PHASE SWITCH** Selects the polarity of the signal being sent to the subwoofer.


0° selects the signal polarity as it appears at the input.

The 180° selection inverts the polarity of the signal.

**11. CROSSOVER** Adjustable 80Hz/100Hz/120Hz/150Hz/180Hz/200Hz.


**FREQUENCY** 

**CONTROL** 

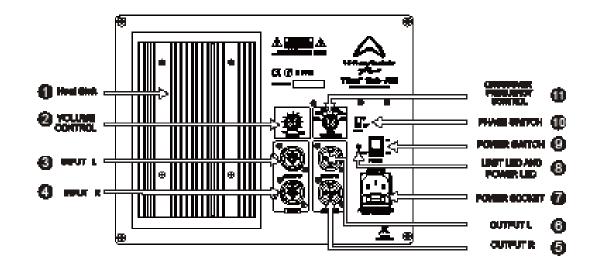


#### Titan™ Sub-A12 CONNECTION DIAGRAM # 1

TWO CHANNEL SYSTEM WITH HIGHPASS OUTPUT

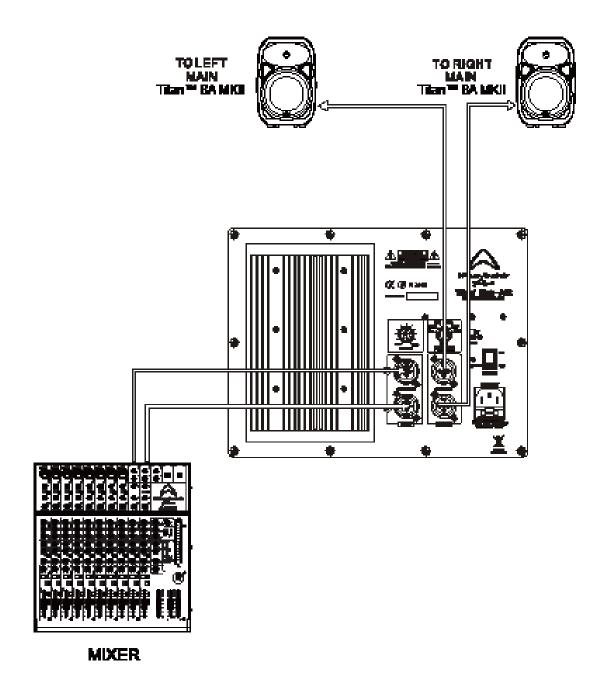


#### Titan™ Sub-A12 CONNECTION DIAGRAM # 2

USING TWO Titan™ Sub-A12 WITH TWO POWER SPEAKERS

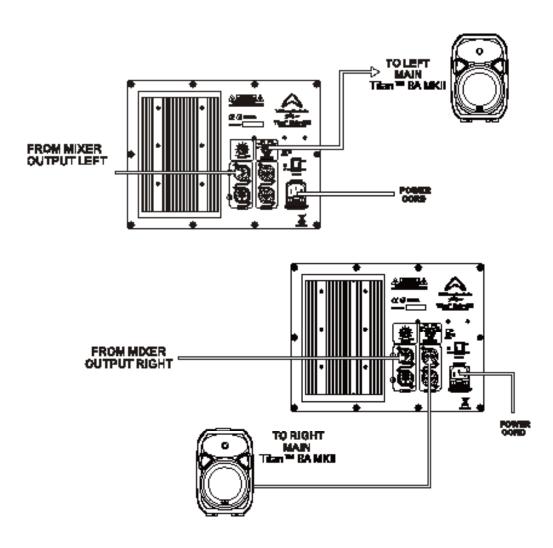


#### Titan™ SUB 15A MKII REAR PANEL FEATURES

- 1. **HEAT SINK:** Cooling fns for amplifier. Do not obstruct.
- 2. **VOLUME CONTROL:** Adjusts the volume
- 3. INPUT A: TRS JACK and MALE XLR balanced for INPUT A.
- 4. INPUT B:TRS JACK and MALE XLR balanced for INPUT B.
- OUTPUT A: Balanced male XLR connector provides output HIGHPASS signal. Selects the signal type that is
  routed to the OUTPUT jack, "THRU" sends the unprocessed signal to the outputs. "HIGH PASS" filters the
  signal at 100Hz to the outputs.
- OUTPUT B: Balanced male XLR connector provides output HIGHPASS signal. Selects the signal that is routed to the OUTPUT jack, "THRU" sends the unprocessed signal to the outputs. "HIGH PASS" filters the signal at 100Hz to the outputs.
- 7. **POWER SOCKETS:** This is the connection for the IEC AC power connector.
- 8. **LIMITED LED:** LED indicator illuminates when the signal limiting function is activated.
- 9. POWERED LED: LED indicator illuminates when the unit is powered up.
- 10. **POWER SWITCH:** Turns the power on and off to the subwoofer amplifier module.
- 11. PHASE SWITCH: Selects the polarity of the signal being sent to the subwoofer.0°selects the signal polarity as it happens at the input.The 180°selection inverts the polarity of the signal.
- 12. **CROSSOVER:** Adjustable 80Hz to 200Hz. **FREQUENCY CONTROL**

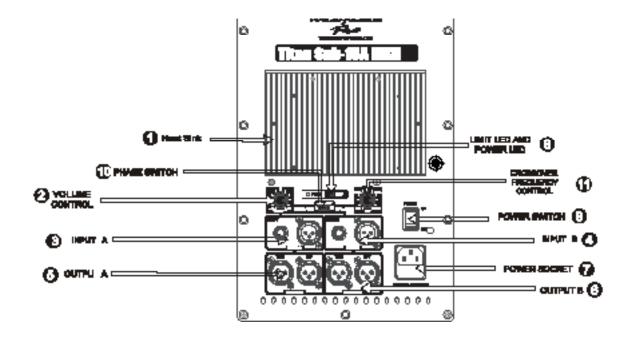


#### Titan™ SUB 15A MKII CONNECTION DIAGRAM#1


## TWO CHANNEL SYSTEM WITH HIGHPASS OUTPUT

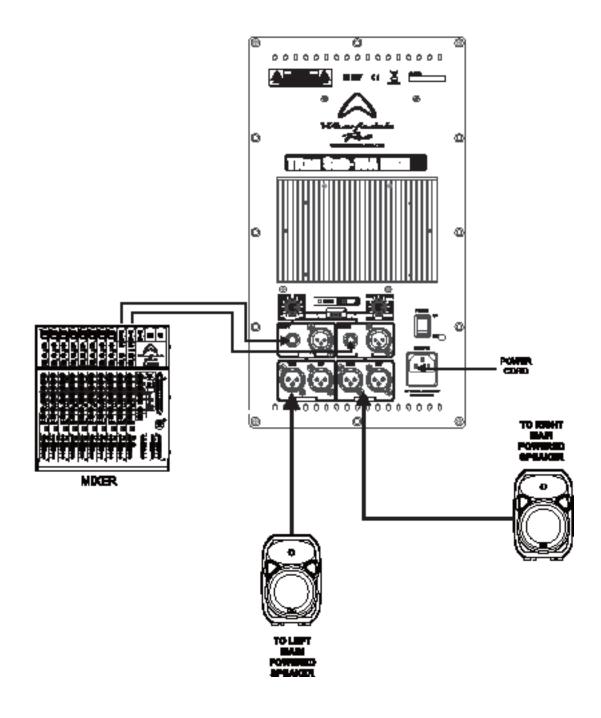

#### CONNECTION DIAGRAM # 2

USING TWO Titan™ SUB 15A MKII's WITH TWO POWERED SPEAKERS

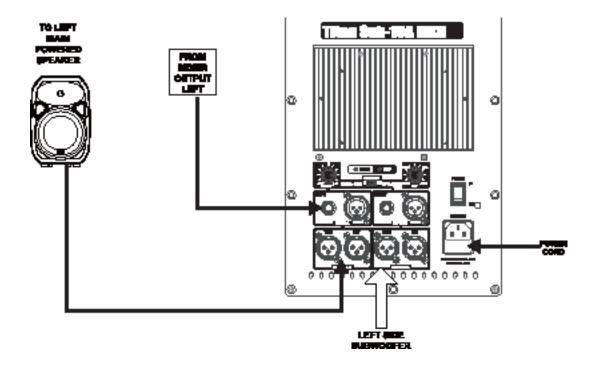

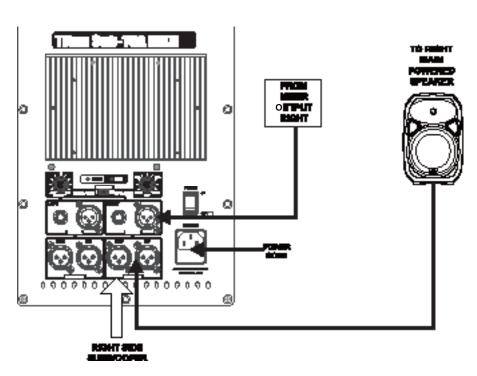

20 \_\_\_\_

## **SPECIFICATIONS - Titan™ PASSIVE SERIES**

Ludgeder lige	F2-ray	12°2-xay	15"2-ray
Response Response (+/-340):	78-286k	55-20Mz	58-20Hz
Control of the Contro	MA-ARRE	984	90
Post SPL:		12h/B	178:B
HF Davesagle (H.s.V):	126E	EF SEF	Free .
in sensepe (no 4). Nation inpulsare:		Solan	Solan
7305E (BAID)	I dim	o-case i	-
Positioner:		2000	_
	1500		
	3400	501	
Pesic LF DENER		10 D	1207
Li- Carrier			
	Zim/5	3/5mm/12*	#firm/15"
Duit Bioe:	38.86mm / 1.55*	6429mm/ 2.5"	75mm/3.F
HF CONVEY HOUSE	Companies Dident	Companion Orien	Composition Dileor
Dail Bine:	Zem/l*	4400(175	51==420*
Enit Size:	38rm/1.2*	25/T	25/T
Cicyleagle Statemat		Thrian	Titation
HF Oriver Punication:	Pain .	ETF Operate Thornest Filterent	PHP Dynamic Thomas Hismant
Log Hore EQ Congruenties	RA.	3:2 hard (lang-land)/ Flat	MFA
		(near-field)	
Ham Type:	EMS"-Eliptical libroguido	ENG"-ENplical Wavequille	BHG" - Bilpitical identication
Head live	Zera/1*	25mm/T	25 <b>/</b> T
- 1 - 1/1 = -			
Type file years of the c	2-vay 2/601z/ Unitediz May	2-ray 2.375tz / United 2.58by	2-ray 1.994z / Unitelliz#Bay
s -80, 18			
Mageri Malerial:	Trapszekkii Polypusyskow	Tapanitai Polypopyima	Topodisi/ Pdypopylos
Highling:	PA Michaechal rigging patris	(and high generated refilling lamps:	(M) With residui rigging pairis
	+ (4) 1/6 Oreschol rigging points	+ (4) Yes gassapat ujilipi bajap	+ 6d Yap gassagan njiliya hayas
	cu bottom in Combrand?	on inflore in Combount?	on indicate Contract?
	388 type dodprist + Speakerpole-	60:0-type textpolet a Specier	68.0-type thotpoint a Specier
	mount receptable with lock scene	pole-manut raceptado sello trata	pole-mount receptable with book
	+1 init in cary lands +Optional	scow a Optional wall-mount	score a Optional real-mount
	wall-mount bracket +-{Optional	hadet + (Optional dual-milt	hadat +{Optionaldeal unit
	del will may specimental	array speaker shand harde and	array species stand hards and
	tentrers)		
TOLERAN	Say or Marker White	Gray or Black or White	Gray or Black or Milita
		Gray or Black or White 2a 1/4° jacks + 2 a MA	GrayorBacker iPMa 2a I/AF jacks+2 a PMA
	Sayar Matarithia		
the second	Sayar Matarithia		
CLEVE COMESCON CHESTON/WHO PR Video	Sayar Matter 1966 2 s L/T jacks + 2 x M.A	2a I/F jada+2aMA	2a IAF Jacks + 2 a MA
	Saya Baka Mila 2x I/P jada + 2x M.A Say/12/1bs	2a 1/F jada + 2 a MA 12bg / 26/Ma	2a 1/F jacks + 2 a MA Zhg / 46Aks

## **SPECIFICATIONS - Titan™ ACTIVE SERIES**


System Type:	Active & Zony Bl-Arquited	Active 12°2-way 68-Amplified	Achie 15° 2-wy 81-Awylliei
Programmy Designation (47/2003)	70-20Mz	55-200-b	50-300-le
Low Programsy Mairon (magin.)	205mm / IP	355mm/12*	381nm / 15*
High Programy Mairor	Compression Other	Tilerian Compression Odes	Tilerian Corquestion Odes
Pait Sire (nos / inches)	30mm / 1.2*	Sen/f	Sen/f
Hisponius (H x V)	90° e 90°	ST x ST	ST x ST
Anglifera.			
Low Programsy (Chase II)	Rafai 1997 cuiteana, 3077 Peak	Raini 2017 continuos, 9007 Peak	Rafei 3500 confrance, 7006 Peak
High Property (Class C)	Railes 300 continuos, 6000 Pents	Rafei SOW confirment, 18500 Peak	Rafesi 70W confirmum, 140W Peak
Herbrain Common.	246 per orine Urbaile filter	McChaine Littale filey	Mattheway Lintarie Filtry
Common Brayers,	24Hz	2.36/E	1.864z
<del>Carolination</del>	High (e Mail) 10ki iz (huhing	High (±10xH) 10bHz (hubbay	High (±10xH) 10bHz (hehing
	Low (e Malif) 1000 to Shelving	Las (4549) 100Hz (Febby	Lan (±10:05) 1001-12 (freiding
Salamin Filter	30Hz, (Jecond-order Mer	30-iz, वैकामा - कांक सिंह	30-lz, Čessai - unicrilic
Augiliar Protection			
Pener de	Rever switch on / of swite	Roser suitch au / all reute	Roser selfch as / all muic
	Amplifier strationes, suito reset	Armyllics stratistics, unio reset	Amplifier stratitions, unto reset
Low Line Yellagie Mind Coron	× BOAC	67% Houston Iroc volume	1275 House of the voltage
Bries Pertention	hisporied LF and HF United	Interview LF and HF Indian	Interview LF and HF Indies
BC Pedralina	To	Yes	Yes
Short Protection	Tes	Yes	Yes
Cip Limiter:	Term on appear 15000 colorid	Tera on appear 250% calpul	Tera on appear 350% calpai
الشائد المثالات	RedLED	RelLED	RelLED
Pener Infirates	Garra LED	Green LED	Brown LED


## **SPECIFICATIONS - Titan™ ACTIVE**


<u></u>			
ingent A — type:	Spails inside inside cost of core free	(iniciatic interest aic or for	Cofficial interest sale or tre
	lend input	land Irput	locitud
light Schrödig	Mic:-47/Eu (-49.2/Ev cr	Mc-486u (42.36ro	Mic -IMBs (42.2dBy or
	3.4mMmm)	7.79mVirms)	7.75mMmm)
	Line: BilBu (-2.3dB+or 0.775Viss)		Line: BilBu (-2.2xB+ or 0.7754ma)
Harinan lagat Lavel	+72/81	+23dBu	+535134
<del>lipit Carrolla</del>	ELR-1AT Comin jurk	JUR- OF Controjeck	XLR- OF Camin jack
inget imprisons:	Balancet 200-	Balancet: 1000-	Britanni: 100-
	Untailunced: 1000	<del>(100 in 100 in </del>	( <del>Informati)</del> ; <del>214</del>
Serious legal Level	+77.":	+23dBu	+100 Eu
input II — type:	MMA.	Line level loyal	Line lead input
	NO.	JUR-14 Combo jude (422	XLR- OF Casio jud: 0:8a (-22
		dBe or 0.7754mm)	dille or 0.775Arm)
legal Scarifolly		RD4: BdBs (-2.268vor	RC% BiBu (-2.2dBy or
		1775Vano	6.775Wrm)
Harines layer Layer	+77.	+23dBu	+7.56%
legat Connector o	Coming justs 197-31.9.	Carairo jude: 1/4"-18LR / (Saraire d	Cambo jude 1/4" - IELR#
		dani RCA jarda	Current deal RCA Justo
line Output	Smithate LOCP / MIX	Buildwide LOCP / MDL Buildwell	Onficialis LCESP / MEX Balances
	Balanced Male 20.R. Connector	Marie XLR	Male XLR
Ingestione:	Balancel: 1kolon Uninforcel:	Balancel: 200 of m   University	Brimset 200 ohn Unfohrent
	500 das	100 of m	100 ohm
<del>n-nii-it,</del>	DaBin (-2.248)r or 0.779(4mm)	8dBu (-2.2dBy or 0.775Vmm)	DiBu (-2.3dBy or 0.775/mm)
AC Prover details			
Person Supply	High Efficiency Quiliting Mode	High Efficiency Building block	High Elikiersy Şulkidry blode
	Finance (Supply)	Rouge Supply	Raner-Bupply
AC Prover Spaces		AC100-128V / 220-248 V, 50 /	AC100-120V / 220-340 V, 50 /
	AC100-340V, 50 / E0Hz		FOR Its
Percer Co Indicator	Gerra LED	Epon LEO	GreenLED
Higging / Bracket / Housing	SME firested basels techning 4	10 AB formated transferinding	10 MB freniel track intellig
مستعيد	LIS formied	4 NB treated	4 MB Tremier
	territ en tellen is Constitued	tracis or infinite Confident	Investo on testimo in Constituent
	30.0-type technical	ELD-figur timbet A	62.0-fgpe-temfyririt
	Pale-manual acceptance with lank	Rife-mount receptorie with tech	Rie mani receptate with teck
	200	-	
	1 carp harates	2 carry handles (see on each	2 cary handles (see an each
			mide)
	Ophonical materials	Cyclored and annual breaked	Optional and mand bracket
Barbany: Makaid	irjedice Marklet Rigorophere	hjedno bladded Robjecyjene	hjedon klasilai Rigospylara
Calence	Geroratic which	Berk	Back
inim Istal po	35 (26 (221	551341312	70L3 x 477.8 x 401.8
Lincoln Be Wall fot	156 x 105 x 8.7	21.9 x 15.1 x 12.3	27.5° e 18.6° x 15.8
Red Weight (by) They	6.23p/13.79bs	12.0g / 27.290s	22 Sta / 52 36ths
Green Weight (by / But)	8.15kg* 17.55km	15.9ag / 34.8as	277g / 12390kg
	0.13	13.30g / 39.50h	27.4


## **SPECIFICATIONS - Titan™ SUB SERIES**


System Type	متناه ماسسات 13 سنت پالستان	ماسوات مالات
Programs (1/2012)	45-200-b	65-290Hz
Burdanus Melleriell	16 P <del>yrassi</del>	15
Series Color	Swy or Black	Gray or Black
Reserve sectional	ated forms	and from
Alice (com/instant)	361/16"	35 / 1T
Cuit tile (con / instes)	4 kapar 2.5"	64.26mm / 2.6"
lagaritan :	4 chm	4 olen
Specials Pole Adapter	~	Yes
hyalo A & II - Type / Connection	TIS MAX I BALE TOR	Released live level impate via
Colput A & B Type / Consestina	Referenced count FERMALE STAR.	Balanced live level inputs via
		——————
legat tirmilirily	4.7769	D.37Y
High Pass Programy Beleation	100Hz	1/301x
Place Initch Relection	4F/184F	07/100°
Communication Français (FEC)		BOJ 100/ 120/ 150/ 100/ 200
برسم ومستوعة مستوعة	UT 80-2001-(	and said and and said and
	UT DI-ZINTO[	(- <del>[</del> )
Augilier Power: Confirmen	-	
		<del>(</del>
Augilia Pares: Carlinos	40007	(
Auglific Proc. Confessor Auglific Proc. Park	-EDGET	(
Auglifier Power: Confinence Auglifier Power: Peak Power die Indicator Power die Poulestien Themsel Poulestien	4DOM EDGM LED	(Alignostic) 25000 60000 LED Person which on / off main Angellier shutchess, main reset
Augilier Power, Confinence Augilier Power, Profe Power des Indicator Power des Poulection Theomat Poulection Law Line Vallagie (Stat. Bown	400F BOOF LED Form mitch on / off mate	(migratelia) 25000 60000 LED Person switch on / off mate Angellian shutchess, mate resort 60% Planning line subtege
Auglifier Proces: Confinence Auglifier Proces: Peak Proces de Indicator Proces de Podestion Unessel Podestion Law Line Voltagie (Not. Brown Union Prodestion	ADOM  BOOM  LED  Former maitch can / off sents  Amplifier absoluters, carto reset	(Alignostic) 25000 60000 LED Person which on / off main Angellier shutchess, main reset
Auglifier Proces: Confinence Auglifier Proces: Peak Proces de Indicator Proces de Podestion Unesal Protection Law Line Voltage West Boron Drives Protection Of Protection	40007 LED Former mitch on / off rents Amplifier shothlows, early rent 10% Homised line vallage	(migratelia) 25000 60000 LED Person switch on / off mate Angellian shutchess, mate resort 60% Planning line subtege
Auglifier Protes: Confinents Auglifier Protes: Peak Protes die Indicator Protes die Protestion Themsel Protestion Law Line Vollagie Work Boron Briton Protestion DC Protestion Statt Protestion	40007 10007 10007 10007 Promer mitch on f off water Amplifier shathows, early reset 100% Homised line vallage Independent UF Emisses	(officially) 25800 50800 LED Person sorich on / off custs Angelfier destriction, units count 60% Remixed line subleys Independent Ut limites
Auglifier Power Confinence Auglifier Power Peak Power de Indicator Power de Podection Themat Podection Law Line Wallagie Clad Bown Brites Podection Of Podection Clast Podection Clip Limiter:	40007 10007 100 Power mitch on / off rests Amplifier shotblows, arts rest 10% Housind line voltage Independent Ufficience Tex	(office this) 25000 60000 LED Person which on / off cuts Angellier destriction, note cont 60% Manifest lies whops Independent IF limites Tex
Augilier Proce: Confinence Augilier Proce: Peak Proce de Inficator Proce de Podection Remail Podection Las Line Voltage Chal. Brown Brites Protection Of Protection Clip Limiter: Limiter Inficator	4000V 1000V 100 Power mitch on / off rests Amplifier shouldown, early reset 10% Housined line voltage bedrawedown UF limites Yes Yes	(adjustable) 25000 60000 LED Person switch on / off union Angelfier destriction, units reset 60% Planning line unitage belopment of Ferritan Yes
Augilier Proce: Confinence Augilier Proce: Peak Proce do Inficator Proce do Protection Themal Protection Law Line Voltage What Hown Thins Protection Of Protection Clip Limiter: Limiter Inficator Proces Inficator	40007 LED Former mitch on / off wate Amplifier shouldown, early reset 15% Homized line vallege Independent LF limites Yes The	(adjustable) 25000 60000 LEO Perror switch on / off mate Angelfier deathfrom, mate reset 60% Planning line willoge Independent UF limites Ten
Auglifier Peres: Confinence Auglifier Peres: Peak Peres: the Indicator Peres: the Peakerline Unested Peakerline Law Line Voltestion Union Peakerline Union U	40000 LED Power mitch on / off rests Amplifier shotblows, early rests 16%; Homised San vallege Independent LF Sainten Yes Yes Terror on oppose 40000 output Bell LED	(aljustable) 25900 60000 LED Person switch on / off mate Angellier deathborn, mate reset 60% Remined lies whope Independent UF limites You You Lean on appear 25000 culput Red LED
Augilier Pouer Confinence Augilier Pouer Peak Pouer de Indicate Pouer de Podestion Remail Podestion Law Line Vollegie Med. Bown Brites Podestion Of Podestion Cip Limiter: Limiter Indicater Pouer Indicater	40007 LED Power mitch on / off rests Amplifier shotblows, weto reset RSS, Homised line vallage Independent UF limites Yes Terror on oppose 40007 cutput Bull LED Genera LED	(ofjectable) 258W 608W LED Person switch on / off mate Angellian destriction, mate reset 60% Remind line vallage Independent UF limites Yes Yes Tess on appear 258W output Bed UED Green LED

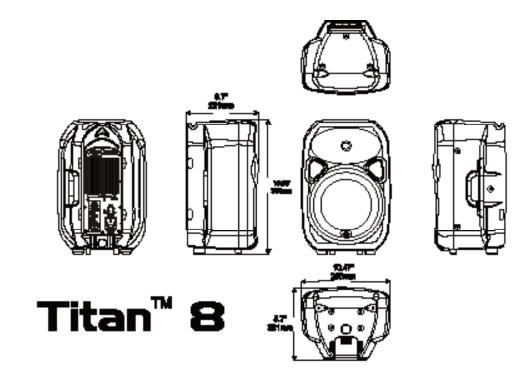


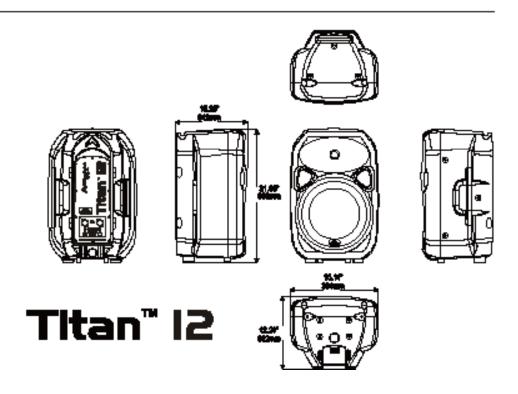

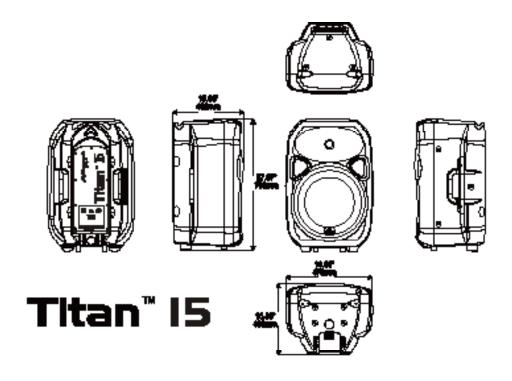


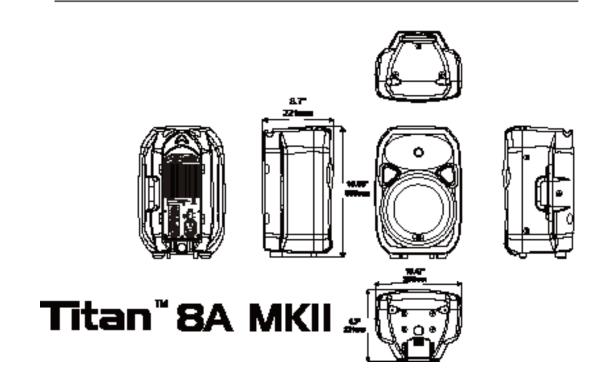


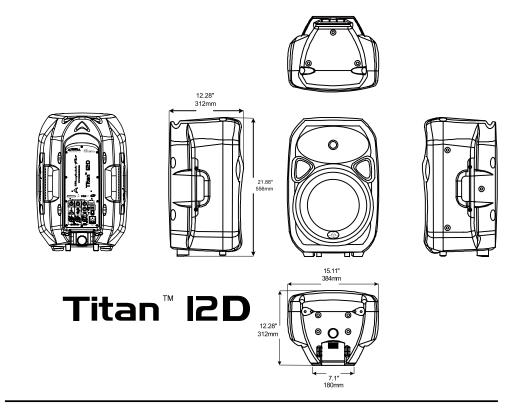

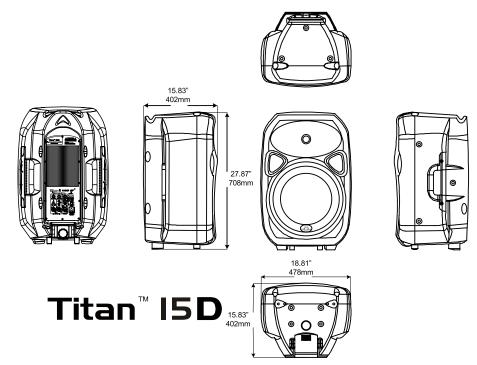

## Titan™ SUB AI2

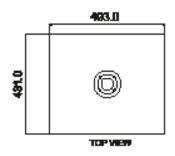

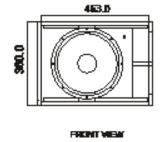








## Titan™ SUB ISA MKII



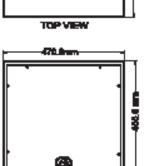

FRONT VIEW

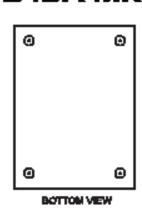

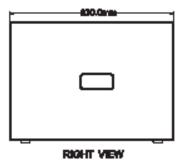



28 ===

#### **WHARFEDALE PRO LIMITED WARRANTY**

Wharfedale Pro products are warranted of manufacturing or material defects for a period of one year from the original date of purchase. In the event of malfunction, contact your authorized Wharfedale Pro dealer or distributor for information.

\*Be aware that warranty details may differ from country to country. Contact your dealers or distributor for information. These terms do not infringe your statutory rights.



## Wharfedale Professional IAG House 13/14 Glebe Road Huntingdon Cambridgeshire PE29 7DL, England

#### www.wharfedalepro.com

Wharfedale Professional reserves the right to alter or improve specifications without notice.

All rights reserved © 2013 Wharfedale Pro. Wharfedale Pro is a member of the International Audio Group (IAG).