



1- TAP • PULSAR • APPUYER • TIPPEN
 Ambient Mode On/Off
 Modo de ambiente activado/desactivado
 Activer/désactiver le mode ambient
 Ambient-Modus Ein/Aus



2- TAPS • VARIAS PULSACIONES • APPUYER • TIPPEN
 Previous Track
 Pista anterior
 Morceau précédent
 Vorheriger Track



3- TAPS • VARIAS PULSACIONES • APPUYER • TIPPEN
 ANC/Wind Reduction/Off
 ANC/reducción de ruidos/desactivado
 ANC/Réduction du bruit du vent/Désactivé
 ANC/Wind Reduzierung/Aus



HOLD • MANTENER PULSADO • MAINTENIR • HALTEN
 Volume Down
 Reducir volumen
 Baisser le volume
 Lautstärke verringern



1- TAP • PULSAR • APPUYER • TIPPEN
 Pause/Play/Answer Calls
 Pausa/Reproducción/contestar llamada
 Pause/Lecture/Répondre à un appel
 Pause/Abspielen/Anruf annehmen



2- TAPS • VARIAS PULSACIONES • APPUYER • TIPPEN
 Next Track/End/Ignore Phone Calls
 Siguiete pista/Terminar/ignorar llamadas de teléfono
 Morceau suivant/Raccrocher/Ignorer un appel
 Nächster Track/Ende/Anruf ignorieren



3- TAPS • VARIAS PULSACIONES • APPUYER • TIPPEN
 Voice Assistant
 Asistente de voz
 Assistance vocale
 Sprachassistent



HOLD • MANTENER PULSADO • MAINTENIR • HALTEN
 Volume Up
 Aumentar volumen
 Monter le volume
 Lautstärke erhöhen