TM20

THUNDERX3 User Manual

Chapter One : Interface

Profile Selection
Save up to 3 profiles

Information Window
Displays current settings on this mouse

Action Window
Choose and assign an action

Save as
Save settings

Language Selection
Choose a language

ThunderX3 Website
Hyperlink to official website

Load File
Load saved settings

Restore
Restore current profile only

Apply
Confirmation of change

Reset All
Reset all profiles

Chapter Two : Button

Function: Mouse Event

1. Select from one of the three profiles
2. Click "Button"
3. Select a main function.
   For example：Mouse Event
4. Choose an action for that function.
   For example：Mouse Left Click

Click an action and drag the action box to a key of your preference.

※To reselect or cancel, press the right mouse click.

Press left mouse click to swap to the new action.

Click "Apply" to confirm the change.

You can repeat the steps to assign other fuctions or actions for other keys.

Function: Keyboard Event (to execute a keyboard action with a mouse click)

1. Select "Keyboard Event"
2. Choose a preset action from the list or record your own.

Double click on
"Double Click Start Recording Hotkey"
Type in a key for a combination of keys.
For example: an "A" or "Ctrl+__(any letter)"

Keys that can be recorded are shown below

(1) F1~F12
(2) Shift
(3) Ctrl
(4) Ctrl+
(5) Win
(6) Alt
(7) Number key
(8) Word key

Click the action and drag the action box to a key of your preference.

Press left mouse click to swap to the new action.

Click "Apply" to confirm the change.

※To reselect or cancel, press the right mouse click.

Function: Fire key

1. Select "Fire Key"
2. Assign fire key position/s
3. Assign a keystroke action to the mouse
4. Set the repeat times per mouse click
5. Set the delay time between each click

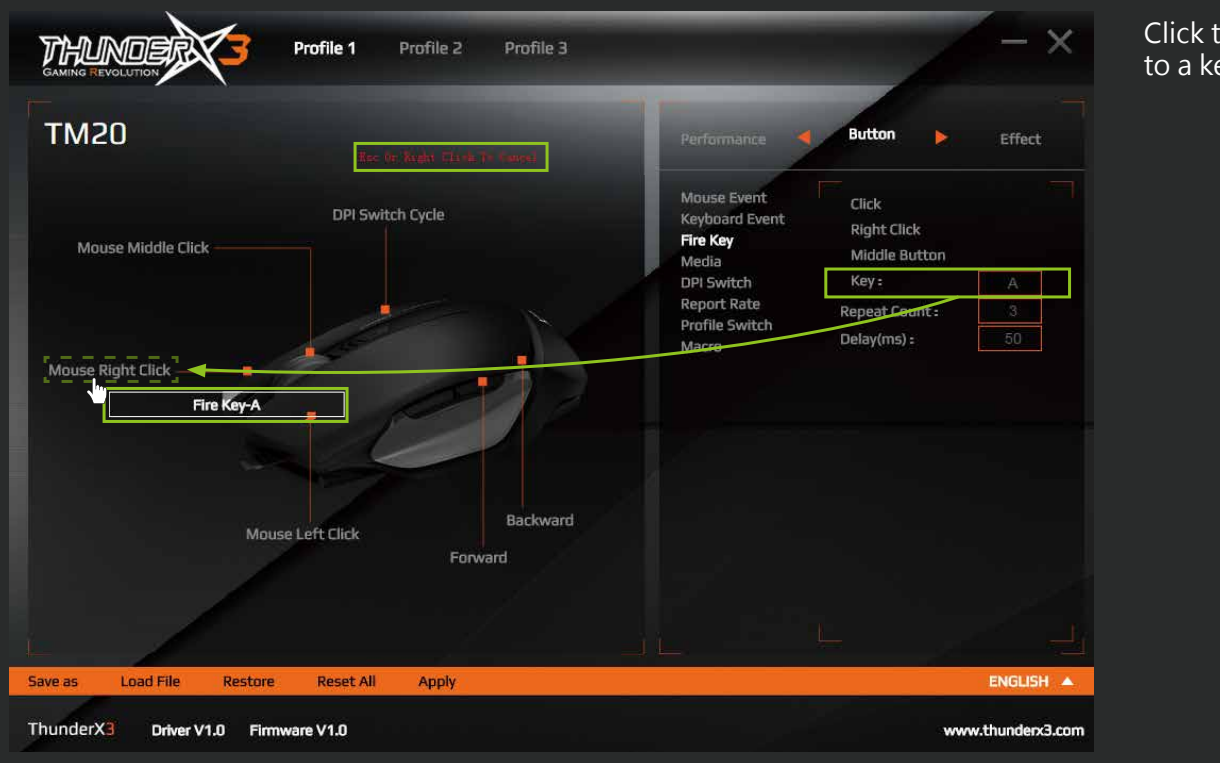

Click the action and drag the action box to a key of your preference.

Function: Macro

1. Select "Macro"
2. Choose "Macro Settings"

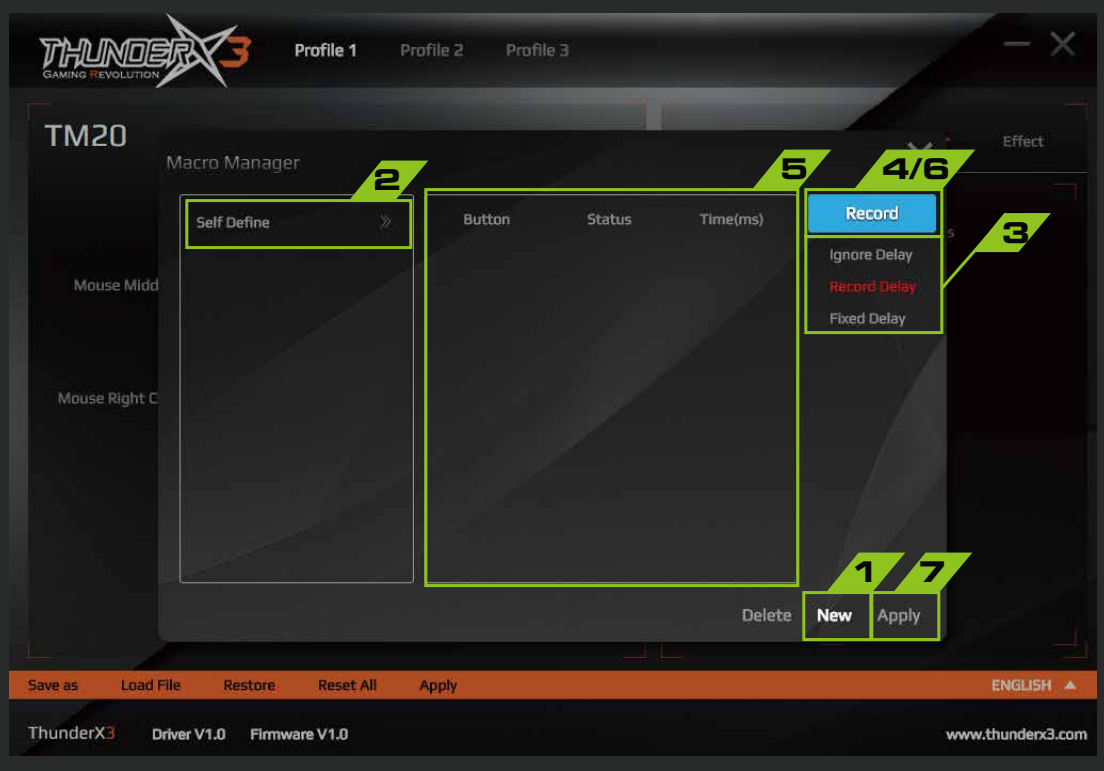

1. Click "New" to create a new Macro
2. Click to name the new Macro
3. You have the options to choose delay times between each key stroke:
   * to ignore delay
   * to record delay time between each key stroke
   * set a fixed delay time between each key stroke
4. Click "Record" to start recording
5. Press the desired keys on the leyboard to record into a Macro
6. Press "Record" again to stop recording
7. Click "Apply" to confirm the setting

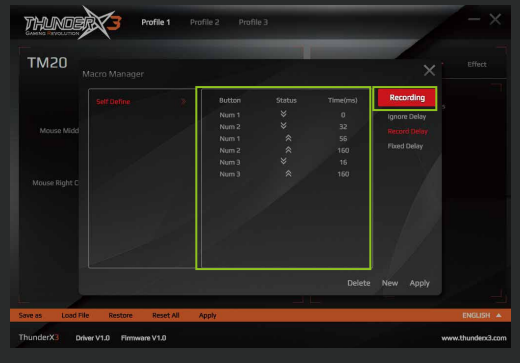

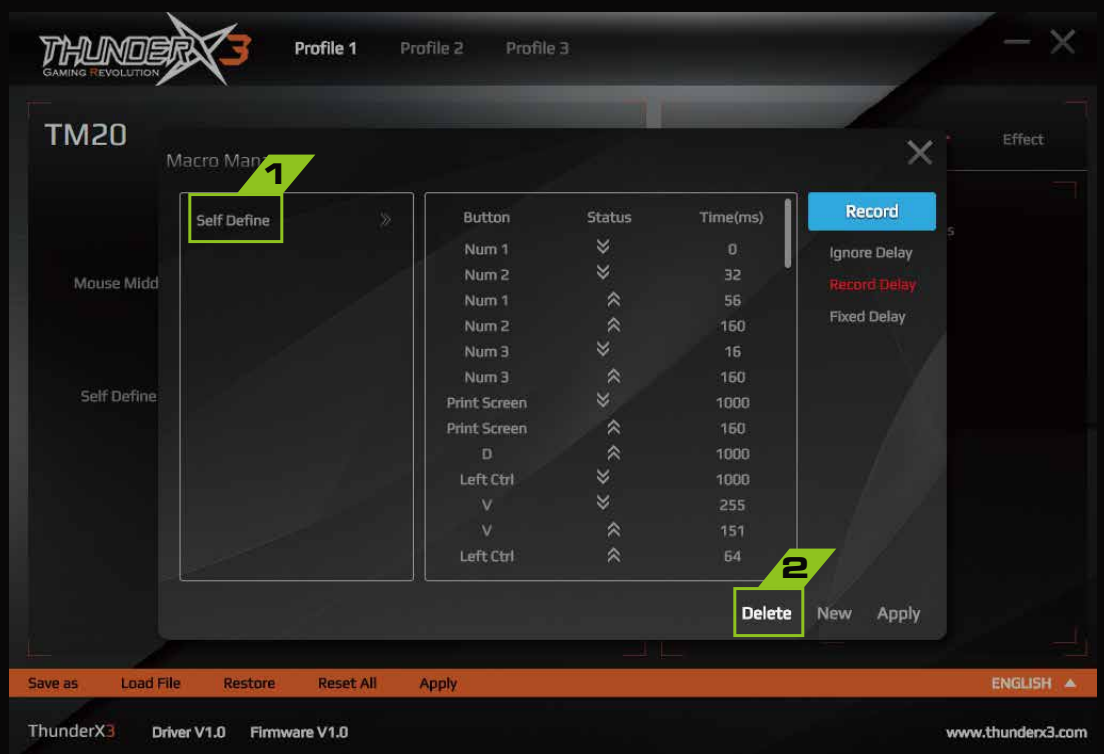

To delete a Macro

1. Select the Macro name
2. Click "Delete"

To assign a Macro to a mouse key

Click the newly set Macro and drag the box to a key of your preference.

※To reselect or cancel, press the right mouse click.

Press left mouse click to swap to the new Macro.

Click "Apply" to confirm the change.

You can repeat the steps to create as many Macros as you like.

※When clicking on Restore or Reset all, Macros will not be deleted. Macros will have to be deleted from within the Macro setting dialog window.

Chapter Three : Effect

1. Select from one of the three profiles
2. Click "Effect"
3. Select "Constant" or "Breathing"
4. Select flash tempo Slow / Medium / Fast
5. Select light brightness Dim / Medium / Bright
6. Click "Apply" to confirm the change.

Chapter Four : Performance

1. Select from one of the three profiles
2. Click "Performance"
3. Set your preferred DPI setting
4. Set the report rate
5. Set the acceleration speed
6. Set the scrolling speed of the scroller
7. Click "Apply" to confirm the change.

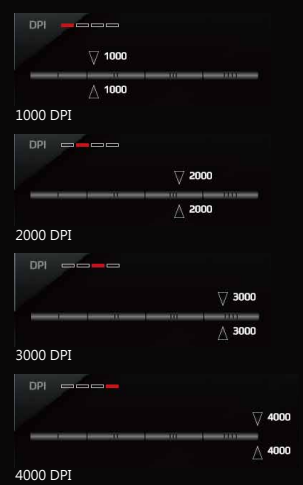

1. Click "DPI Settings"
2. DPI setting window shows four existing DPI settings.

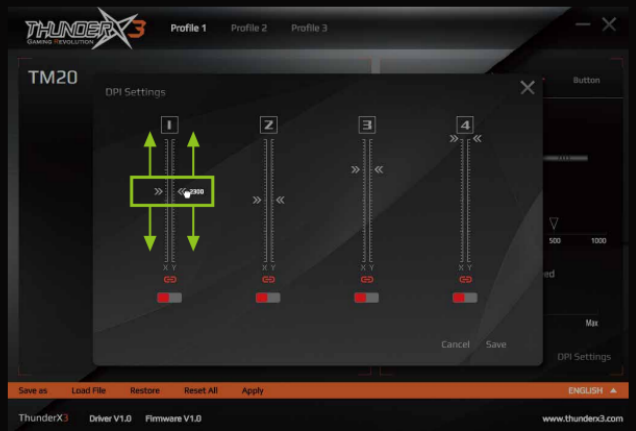

1. Adjust X and Y axes simultaneously.

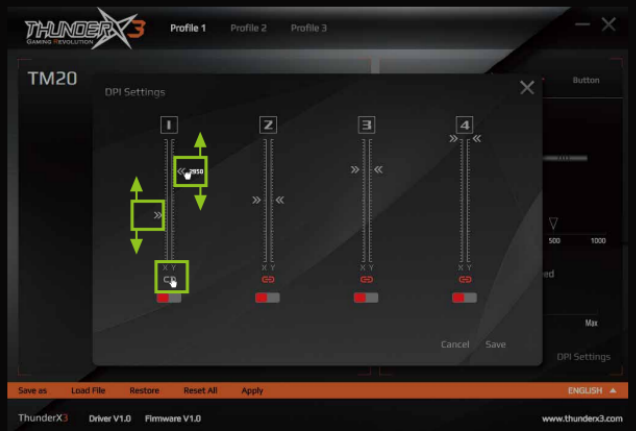

2. Click to disconnect X and Y relation.

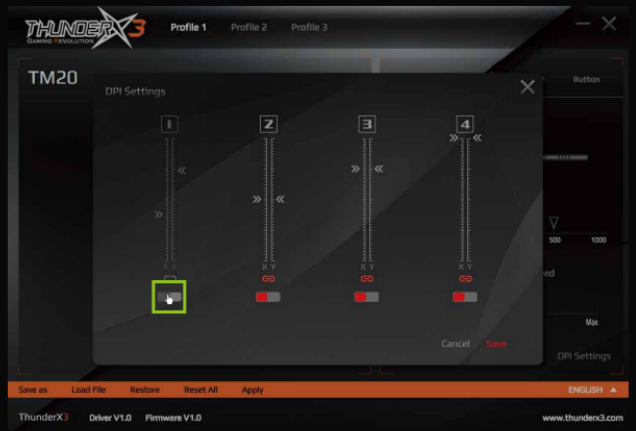

3. Click to shut off this DPI channel.

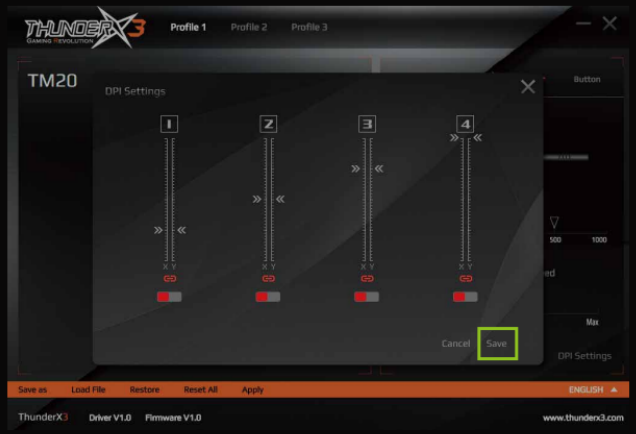

4. Click "Save" to save settings.