


ABKONCORE™


COOLSTORM T405W SPECTRUM EASY MANUAL

COOLSTORM T405W SPECTRUM


Component

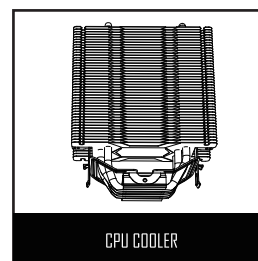


CPU COOLER

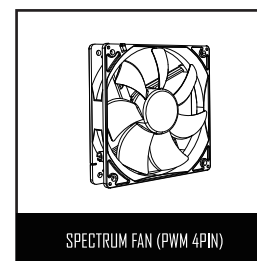


SPECTRUM FAN (PWM 4PIN)

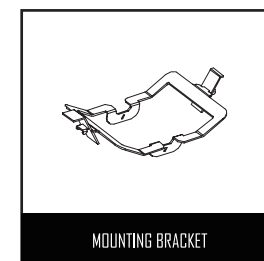


MOUNTING BRACKET

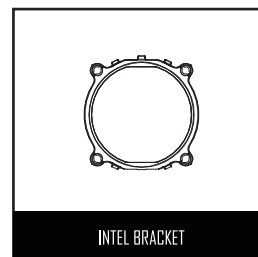


INTEL BRACKET

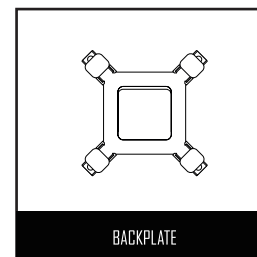


BACKPLATE

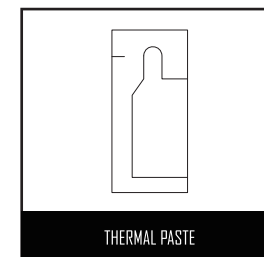


THERMAL PASTE

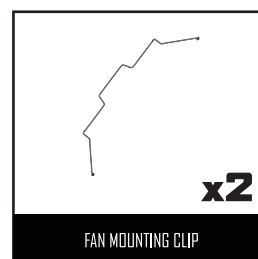

FAN MOUNTING CLIP

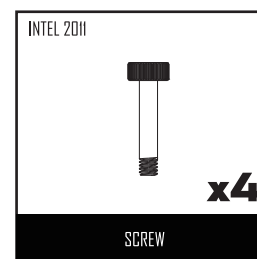


SCREW

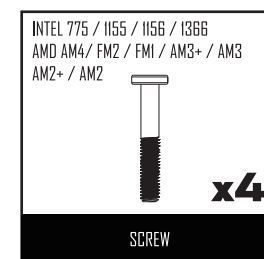


SCREW

INTEL 775 / 1155 / 1156 / 1366 / 2011


Easy Manual

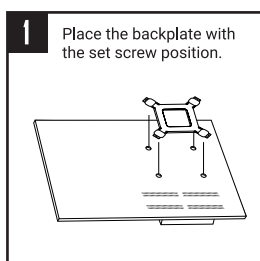

1 Place the backplate with the set screw position.

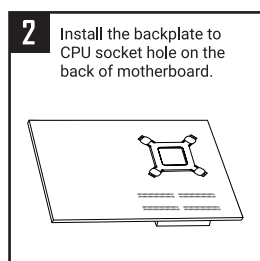


2 Install the backplate to CPU socket hole on the back of motherboard.

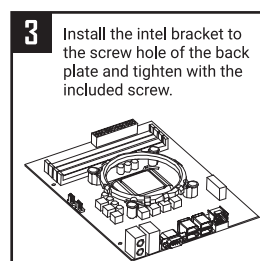


3 Install the intel bracket to the screw hole of the back plate and tighten with the included screw.


*It is convenient to remove one fan and install it when it is already installed on the motherboard.

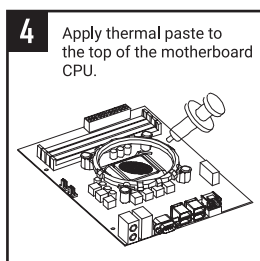


4 Apply thermal paste to the top of the motherboard CPU.

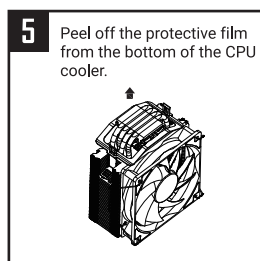

5 Peel off the protective film from the bottom of the CPU cooler.

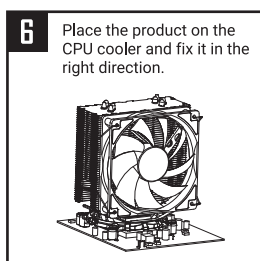


6 Place the product on the CPU cooler and fix it in the right direction.

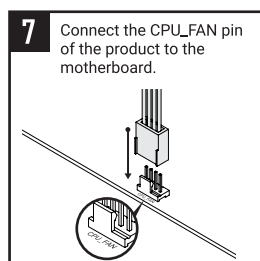


7 Connect the CPU_FAN pin of the product to the motherboard.

AMD AM4/ FM2 / FM1 / AM3+ / AM3 / AM2+ / AM2


Easy Manual

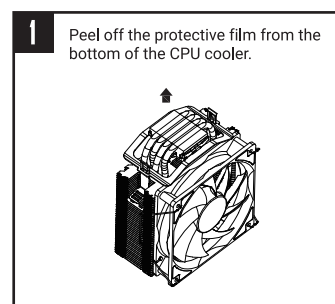


1 Peel off the protective film from the bottom of the CPU cooler.

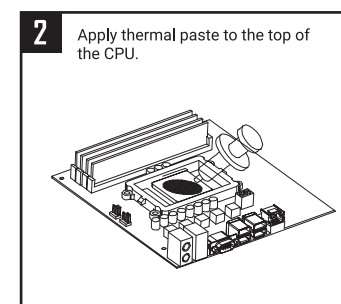

2 Apply thermal paste to the top of the CPU.

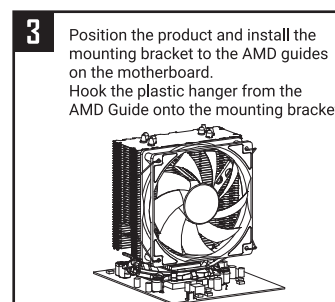

3 Position the product and install the mounting bracket to the AMD guides on the motherboard. Hook the plastic hanger from the AMD Guide onto the mounting bracket.

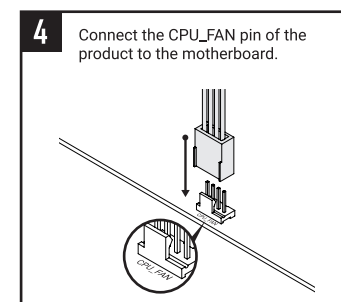

4 Connect the CPU_FAN pin of the product to the motherboard.

* Mount the heatsink base and the CPU surface are in exact contact with each other

Head office 159 3F, Wonhyo Ro 2Ga, Yongsan Gu, Seoul, Korea (TEL: +82. 2. 749. 1311)

China branch Rm202, Mei Dong Electronics Building, Tie Shan He Street, San Dong Road, Hua Shan Town, Hua Du District, Guang Zhou, China (TEL: +86. 20. 36969919)

Contact us support@abkoncore.com

www.abkoncore.com