




Make sure it is level  
Use a pen to mark of the locations

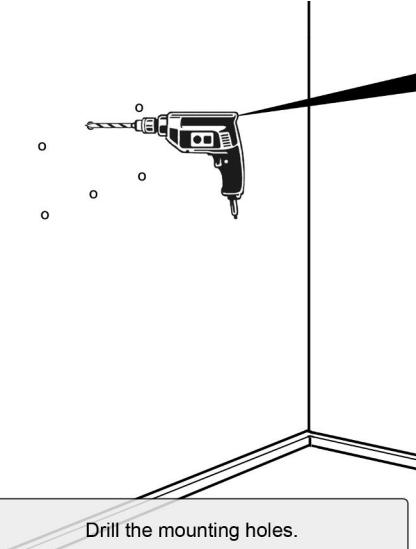


Drill the mounting holes.

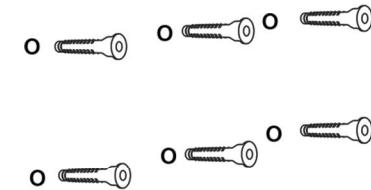


Insert the wall anchors\* to the wall and tap them flush with a hammer.  
\* Never use wall anchors on drywall

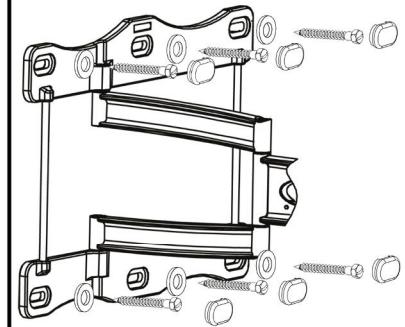

Fix the plate to the wall.

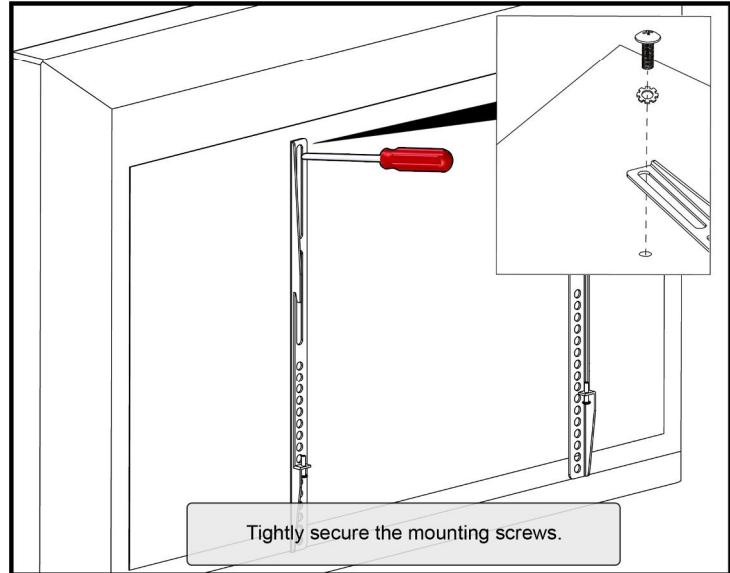


Tightly secure the mounting screws.

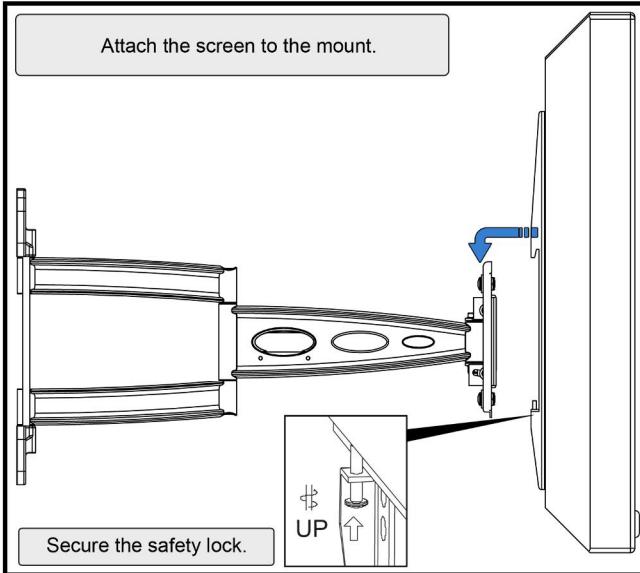


Secure the safety lock.

Attach the screen to the mount.

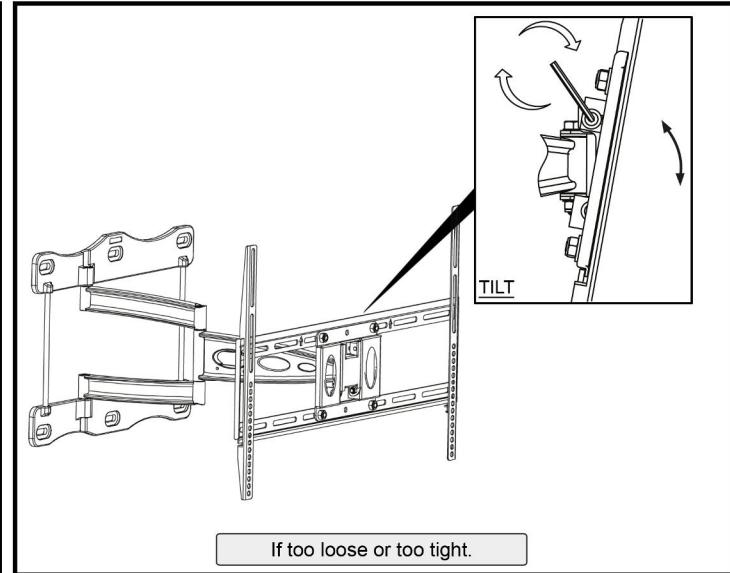

If too loose or too tight.

#### HARDWARE KIT



x6



x6



x6



x4



M6 x4



x6



x1



x4



M8 x4

 **SONOROUS®**  
SOUND AND VISION IN STYLE