

**Maximum Load Capacity:
600 lb (272.1 kg)**

Read instruction sheet before you start installation and assembly.


⚠ WARNING

- Set screw (AA) is self tapping and may be hard to get started but is essential to this installation.
- Failure to install this screw can cause the mount to fall.

Multi-Display System for Jumbo 2000® Mounts pages 2-3

Multi-Display System for Plasma Mounts pages 2, 4-5

**CIRCULAR MULTI-DISPLAY™ SYSTEM
FOR JUMBO 2000® MOUNTS**

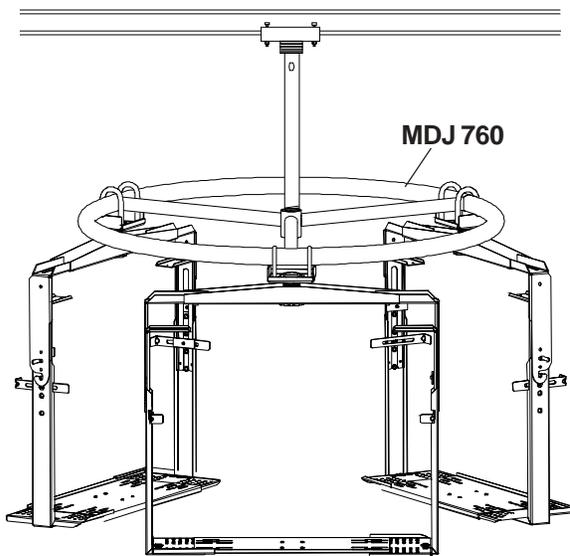

Additional models required


- †Ceiling Decoupler (DCT 600)
- Multi-Display Interface Bracket (ACC 600)
- Fixed Length Extension Columns
- Jumbo 2000 mount (JM2640 , JM2650 or JM2660)
or PLCM-2 plasma mount

Optional Accessories Kits

- Adjustable Extension Columns
(For more information call customer service)

†Other ceiling decouplers may be used if mounted to a structure other than an I-Beam (Call Customer Service for more information).


**CIRCULAR MULTI-DISPLAY SYSTEM FOR
PLASMA MOUNTS**

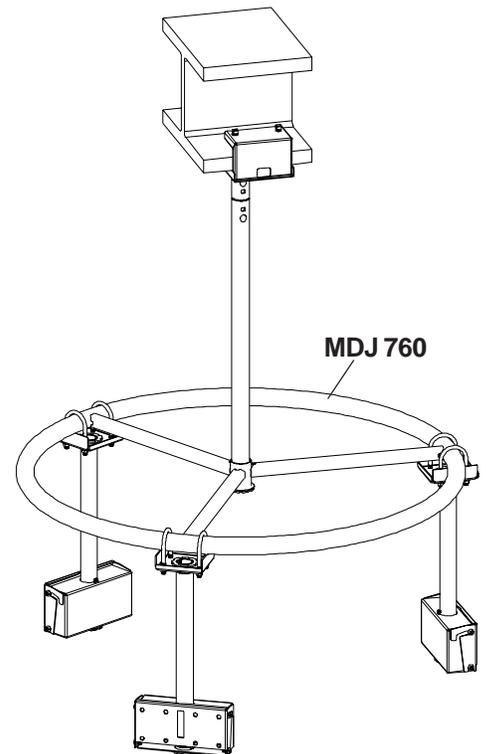


Parts List

Description	Qty.	Part #
A circular pipe	1	139-1076
B retaining collar	1	1800-375
C fiber washer	1	540-9432
D M5 x 0.8 x 10 mm pan head self-tapping phillips screw	1	520-9250

Note: Some parts may appear slightly different than illustrated.

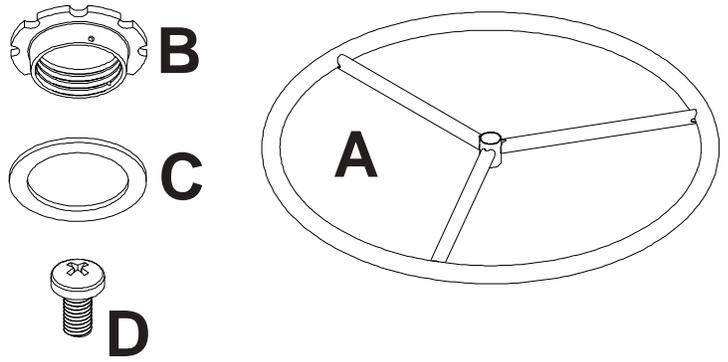


JUMBO QTY.	MODEL #	JUMBO SIZE	PIPE DIAMETER	COLUMNS REQ	ACC 600 REQ	ACC 600 Approx. spacing (center to center for Jumbos)
3	MDJ 760	JM2640	48"	1	3	End of one ring extender pipe
	MDJ 760	JM2640	48"	1	3	
	MDJ 760	JM2660	48"	1	3	
4	MDJ 760	JM2640	48"	1	4	90° / 36"
	MDJ 760	JM2650	48"	1	4	

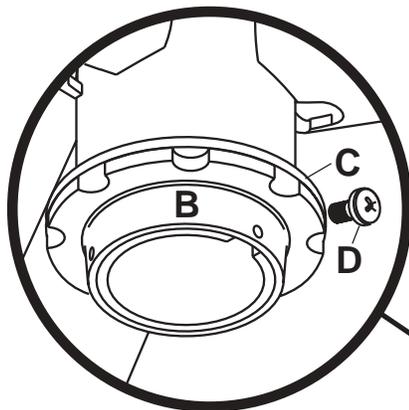

DETAIL 1


Slide circular pipe (A) and fiber washer (C) over end of extension column (sold separately). Thread retaining collar (B) onto threaded end of extension column. Tighten four or five complete turns. Insert and securely tighten one M5 x .8 x 10 mm self-tapping phillips screw (D) as shown in **detail 1**.

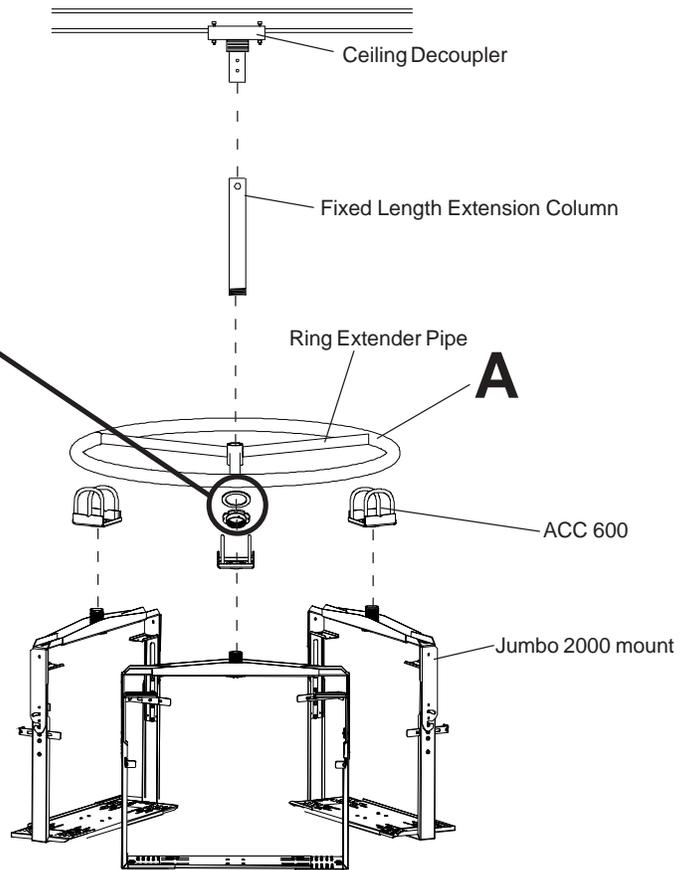

⚠ WARNING


- The M5 self-tapping phillips screw is essential for safety. Be sure to lock retaining collar into place with this screw.

MDJ 760

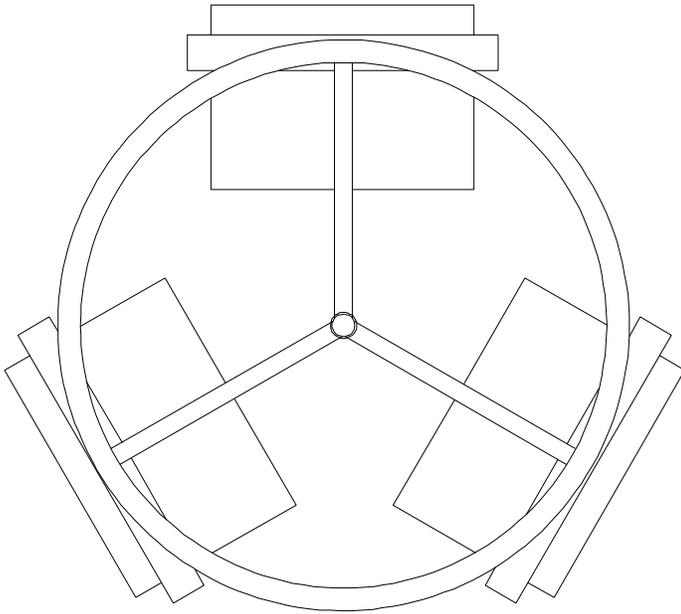

(3) JM2640, JM2650 or JM2660
(1) COLUMN

MDJ 760

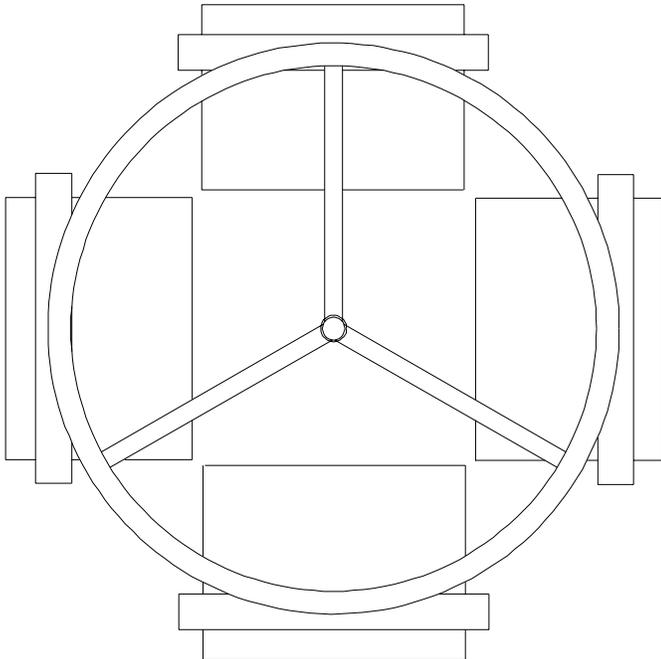


(4) JM2640 or JM2650
(1) COLUMN

PLASMA QTY.	MODEL #	PLASMA SCREEN SIZE	PLCM-2 QTY.	PIPE DIAMETER	*ADD COLUMNS REQ.	**EXT / ADJ COLUMNS REQ.	CEILING DECOUPLERS	ACC 600 REQ.	ACC 600 Approx. spacing (center to center for plasmas)
3	MDJ 760	32" (approx. width - 30")	3	48"	1	3	1	3	End of one ring extender pipe
	MDJ 760	40" (approx. width - 38")	3	48"	1	3	1	3	
	MDJ 760	42" (approx. width - 40")	3	48"	1	3	1	3	
	MDJ 760	50" (approx. width - 48")	3	48"	1	3	1	3	
4	MDJ 760	32" (approx. width - 30")	4	48"	1	4	1	4	90° / 36"
	MDJ 760	40" (approx. width - 38")	4	48"	1	4	1	4	
	MDJ 760	42" (approx. width - 40")	4	48"	1	4	1	4	

*ADD columns are used for attachment to ceiling decouplers only.

**EXT and ADJ columns are used for attachment to PLCM-2.

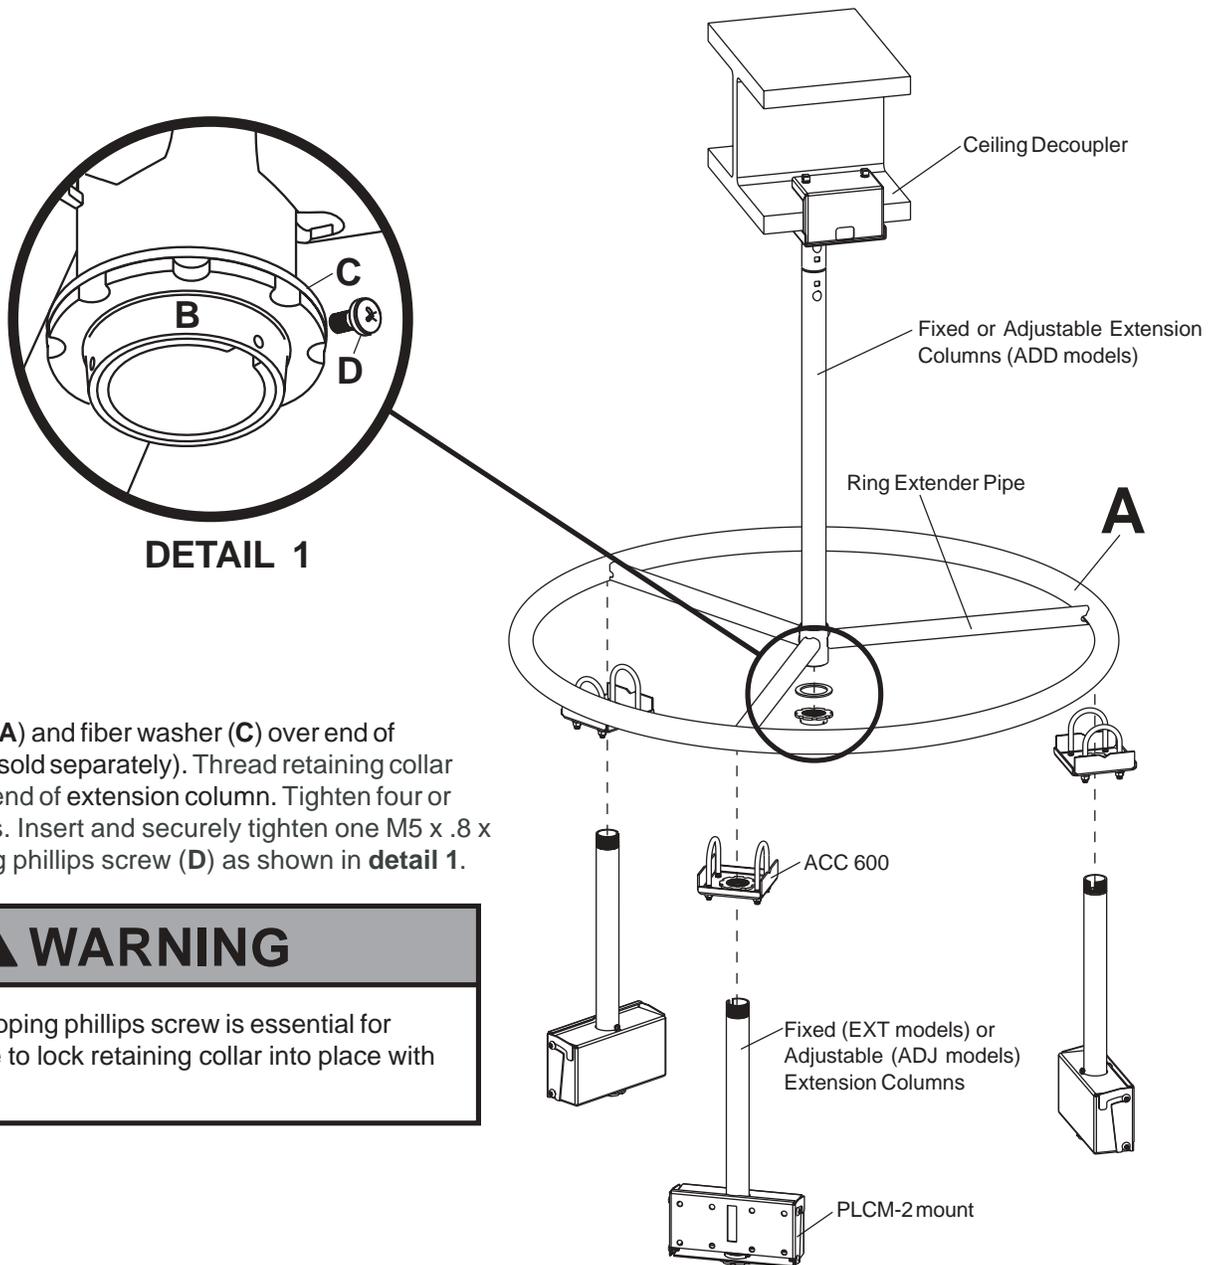


Slide circular pipe (A) and fiber washer (C) over end of extension column (sold separately). Thread retaining collar (B) onto threaded end of extension column. Tighten four or five complete turns. Insert and securely tighten one M5 x .8 x 10 mm self-tapping phillips screw (D) as shown in **detail 1**.

⚠ WARNING


- The M5 self-tapping phillips screw is essential for safety. Be sure to lock retaining collar into place with this screw.

MDJ 760

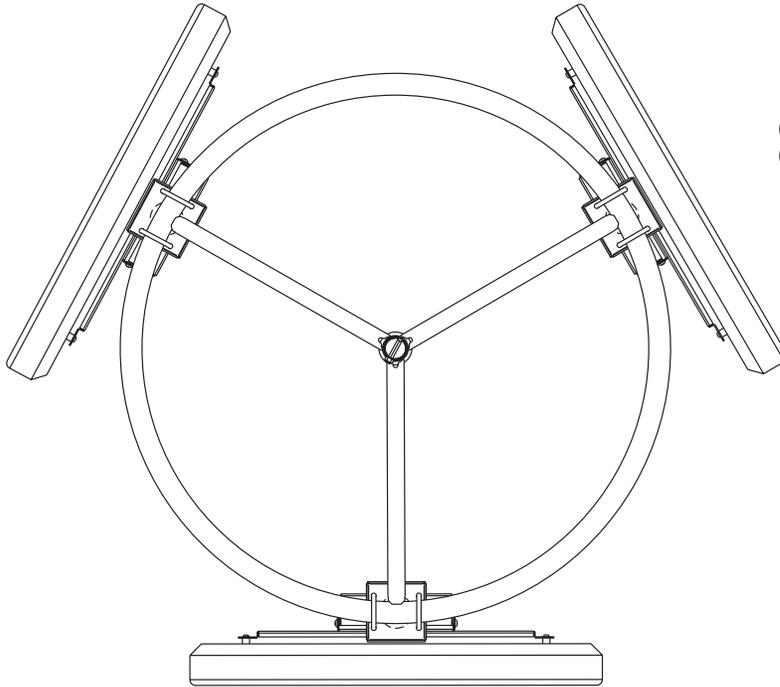

(3) 32", 40", 42", or 50" PLASMA SCREENS
(1) ADD COLUMN

MDJ 760

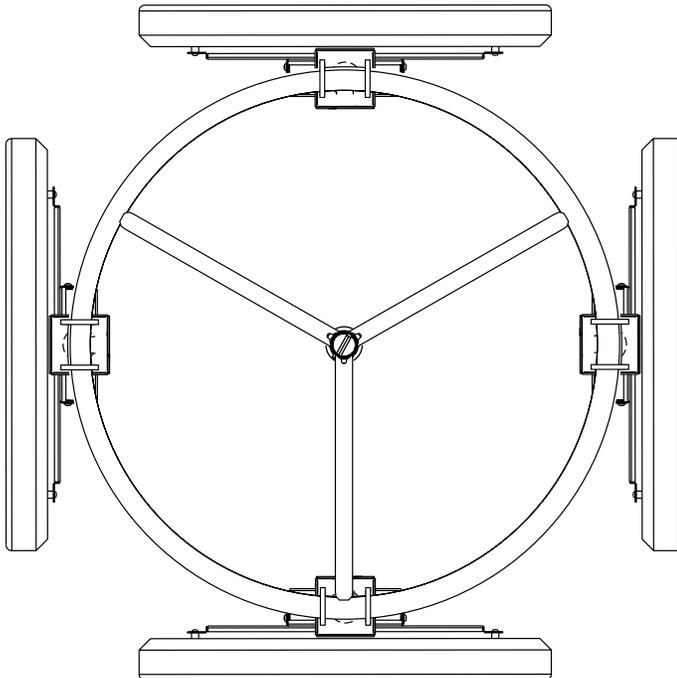

(4) 32", 40", or 42" PLASMA SCREENS
(1) ADD COLUMN