



OWNER'S MANUAL

IW525 / IW550 LCR Inwall Speakers

SPEAKER PLACEMENT

LCR In-Wall Speakers can be used in any position of a home theater speaker system. A single LCR In-Wall Speaker can be used for the front center channel, or a pair can be used for left and right in the front or rear of the system. Because the LCR In-Wall Speakers are magnetically shielded, it is safe to place them close to the television.

Using as a Center Channel Speaker

LCR In-Wall Speakers have been designed to blend seamlessly with all Proficient wall and ceiling speakers. Install the LCR In-Wall Speaker horizontally into the wall as close to the screen as possible. This most often means it will need to be installed just above or below the television. Vertically lining it up with the left and right speakers while not necessary, will improve the performance. **(Diagram 1)**

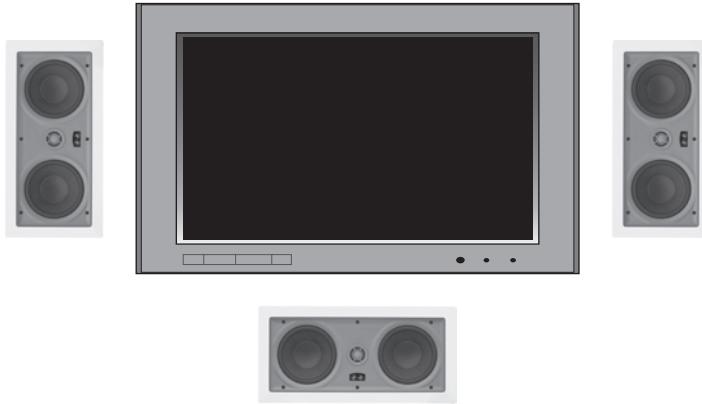


Diagram 1

Using as Front Left and Right Speakers

When using LCR In-Wall Speakers for front left and right speakers, position them vertically with the tweeter towards the screen. **(Diagram 1)**

The speakers should be placed so that they form an equilateral triangle. **(Diagram 2)** If the speakers are positioned far away from the primary listening area, adjust the pivoting tweeters so they are pointed toward the primary listening area. **Note:** To avoid possible damage to the pivoting tweeters, read the section entitled "**SPEAKER ADJUSTMENTS**" in this manual prior to performing the tweeter adjustment.

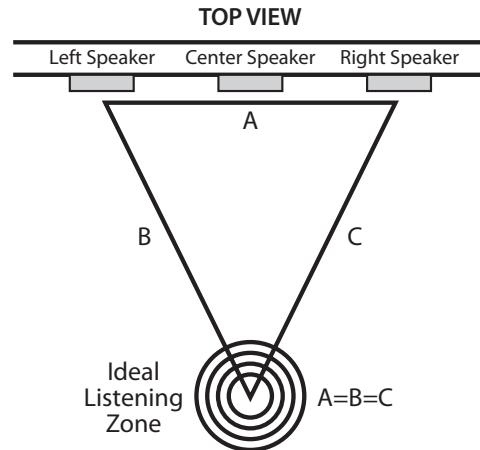


Diagram 2

INSTALLATION CONSIDERATIONS

Before installing your speakers into the wall, you should consider the placement carefully, taking into account the location of electrical, plumbing and other fixtures.

If you are not sure of the best location in your particular room environment, contact your Proficient dealer for assistance.

MOUNTING SURFACE PREPARATION

New Construction - Unfinished Walls

A Pre-Construction Bracket, available from your Proficient dealer, may be installed prior to drywall application across studs (up to 16" on-center) where a speaker will be located. After the hole is cut and the drywall is installed, the speakers are then easily installed following the instructions for mounting in "Finished Walls" below.

Finished Walls

Prior to the actual installation of the speakers, it will be necessary to run 2-conductor speaker wire to the speaker locations. After the speaker wire has been properly installed, you are ready to mount the speakers. Following the simple steps listed below will result in a professional looking installation:

1. Determine the best area to mount your speakers. This area of the wall should be free of obstructions such as electrical conduit, HVAC ducts, or water lines. This can best be determined by noting the placement of fixtures and gaining access to an attic or crawl space for further analysis of the location of such obstacles.

2. Find the studs nearest the desired speaker mounting location. We highly recommend using a good stud-finder tool for this procedure. If you are lining up the speakers to some other object or molding in the room, make sure you consider the size of the baffle flange which extends beyond the mounting hole on all four sides.

3. Mark the hole. A template for setting the hole is provided in the box (along with two paint mask inserts for use when painting). Position the template in the desired position and pencil an outline on the wall.

4. Cutting the hole. **CAUTION: This is the most important part of the entire installation.** If you are not certain whether any obstructions exist behind the desired mounting area, you should start by cutting a small hole in the center of your penciled mounting hole with a drywall saw. Cut at a 45° angle towards the inside of the hole (**Diagram 3**). Cutting the small hole at this angle will make drywall repair much easier as the piece cut out can be installed neatly back into the hole. Once you have determined there aren't any obstructions in your desired mounting location, start cutting the finished hole at a 90° angle to the wall surface.

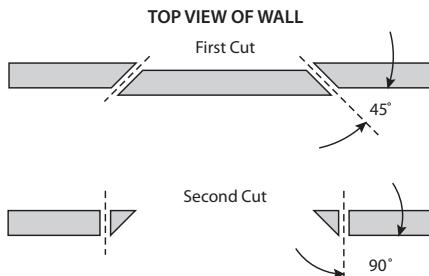


Diagram 3

5. Add insulation. If the area in the wall is not already insulated, add an adequate amount of insulation material to fill the cavity. If the insulation material used is faced with foil or paper, position the foil or paper away from the speaker.

SPEAKER INSTALLATION

The integrated six foot mounting system incorporated into each LCR In-Wall Speaker allows for a quick installation by following these easy steps:

1. Remove the grille. It may be necessary to push one or two of the mounting screws and its attached foot towards the baffle and against the inside surface of the grille to force the grille out of its retaining groove.

2. Attach the speaker wire (observing the proper polarity with your amplifier, + to + and – to –). Make sure the left channel of the amplifier is connected to the left speaker, and the right channel is connected to the right speaker.

3. Make sure the mounting feet are turned inward to clear the opening, and insert the speaker into the wall. Position the speaker into the hole. **Note:** The flange of the speaker is designed to flex and conform to any small imperfections in the wall's surface. Tighten the six screws on the front of the baffle only enough to make the flange become snug against the wall. As you tighten the screws, the feet will automatically flip into an outward position (**Diagram 4**), thereby clamping the drywall between the feet and the flange. **CAUTION: Over tightening may torque the baffle, crack the wall, cause the white bezel to distort, and make the grille difficult to seat into the grille grooves.**

4. Push the grille firmly into the slot in the speaker baffle.



Diagram 4

SPEAKER ADJUSTMENTS

Pivoting Tweeter Adjustment

Your LCR In-Wall Speaker comes with the tweeter facing straight out from the baffle. This will result in the overall smoothest response. However, depending on your particular primary area, room acoustics, ceiling height, or personal preference, you may find the sound more pleasing by pointing the tweeters in a particular direction. If additional treble is desired in the primary listening area, point the tweeter towards that area. Push gently at the edge of the tweeter to point it in the desired direction.

(Diagram 5) CAUTION: Avoid touching the tweeter dome as damage WILL occur on metal dome tweeters.

For home theater use, we recommend the following tips:

- If the LCR In-Wall Speaker is being used as a main front channel, the tweeter should be angled towards the listener.
- If the LCR In-Wall Speaker is being used for a rear surround channel, you may wish to pivot the tweeter away from the listener to achieve a more diffused sound.

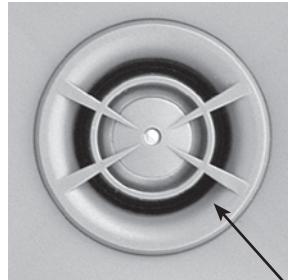


Diagram 5

Treble Adjustment:

The switch labeled TREBLE allows for $\pm 3\text{dB}$ of treble adjustment. Your speakers were shipped with the treble switch in the middle position, providing the most linear frequency response. If you desire more treble, move the switch to the "+" position, and the tweeter will play 3dB higher. If you desire less treble, move the switch to the "-" position, and the tweeter will play 3dB lower. To return to the neutral setting, push the switch back to the middle position. (See Diagram 6)

Bass Adjustment:

The switch labeled BASS allows for $\pm 3\text{dB}$ of bass adjustment. Your speakers were shipped with the bass set to the middle position. This setting provides the flattest bass frequency response. If you desire more bass, push the switch to the "+" position and the bass will play 3dB higher. If you desire less bass, push the switch to the "-" position and the bass will play 3dB lower. To return to the neutral setting, push the switch back to the middle position. (See Diagram 6)

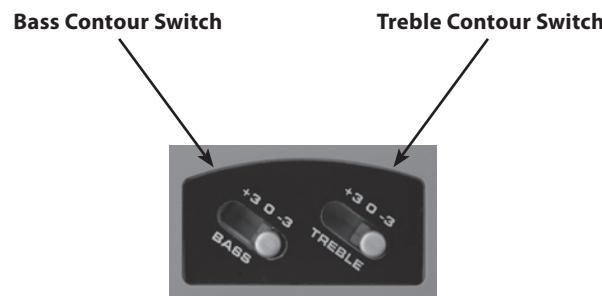


Diagram 6

PAINTING THE SPEAKERS

If you plan to paint your speakers, we recommend that it be done prior to installation. If you plan to paint your speakers sometime in the future, it is best to remove them by simply reversing the steps for "SPEAKER INSTALLATION" on page 2.

If it is necessary to paint the speakers when they are in the wall, the paint masks provided in the carton must be installed between the grille and flange while they are being painted with the wall.

Before painting your speakers, remove the white acoustic blanket under the grilles. Once the speaker grille has been painted, return the acoustic blanket back into place.

Great care should be taken not to clog the holes of the grille, as this will reduce the sound quality of the speakers.

Proficient recommends only light spray painting using 5 parts thinning agent to 1 part paint.

SPEAKER SPECIFICATIONS

	IW525	IW550
Speaker Type:	2-Way In-Wall LCR	2-Way In-Wall LCR
Woofers:	Two 5½" Graphite Cones with Butyl Rubber Surrounds	Two 5½" Kevlar Cones with Butyl Rubber Surrounds
Tweeter:	Pivoting 1" Aluminum Dome	Pivoting 1" Aluminum Dome
Impedance:	8 Ω	8 Ω
Sensitivity:	88dB 1W/1m	88dB 1W/1m
Contour Switches:	Front-Mounted 3-Position ±3dB Bass & Treble Switches	Front-Mounted 3-Position ±3dB Bass & Treble Switches
Frequency Response:	45Hz - 20kHz	40Hz - 20kHz
Power Handling:	100 watts	125 watts
Dimensions (H x W x D):	8" x 15½" x 3⅜"	8" x 15½" x 3⅜"
Wall Cut Out (H x W):	6¾" x 14½"	6¾" x 14½"

Features and specifications are subject to change without notice.

LIMITED TEN-YEAR WARRANTY

Proficient Audio Systems warrants to the original retail purchaser **only** that this product will be free from defects in materials and workmanship for a period of ten years, provided the speaker was purchased from a Proficient Audio Systems Authorized Dealer.

Defective products must be shipped, prepaid and insured, together with proof of purchase, to the Proficient Audio Systems Authorized Dealer from whom they were purchased, or to Proficient Audio Systems at the address listed on this installation instruction manual. Freight collect shipments will be refused. It is preferable to ship this product in the original shipping container to lessen the chance of transit damage. In any case, the risk of loss or damage in transit is to be borne by the purchaser.

If, upon examination at the Factory or Proficient Audio Systems Authorized Dealer, it is determined that the unit was defective in materials or workmanship at any time during this warranty period, Proficient Audio Systems or the Proficient Audio Systems Authorized Dealer will, at its option, repair or replace this product at no additional charge, except as set forth below. If this model is no longer available and can not be repaired effectively, Proficient Audio Systems, at its sole option, may replace the unit with a current model of equal or greater value. In some cases where a new model is substituted, a modification to the mounting surface may be required. If mounting surface modification is required, Proficient Audio Systems assumes no responsibility or liability for such modification. All replaced parts and product become the property of Proficient Audio Systems. Products replaced or repaired under this Warranty will be returned to the original retail purchaser, within a reasonable time, freight prepaid.

For technical inquiries please call 800.448.0976 or email us at techsupport@proficientaudio.com. We are available to assist you every weekday, except holidays, between the hours of 7:00 a.m. and 5:00 p.m. PST.

This Warranty does not include service or parts to repair damage caused by accident, disaster, misuse, abuse, negligence, inadequate packing or shipping procedures, commercial use, voltage inputs in excess of the rated maximum of the unit, or service, repair or modification of the product which has not been authorized or approved by Proficient Audio Systems. This Warranty also excludes normal cosmetic deterioration caused by environmental conditions. This warranty will be void if the Serial Number on the product has been removed, tampered with or defaced.

This Warranty is in lieu of all other expressed warranties. If the product is defective in materials or workmanship as warranted above, the purchaser's sole remedy shall be repair or replacement as provided above. In no event will Proficient Audio Systems be liable for any incidental or consequential damages arising out of the use or inability to use the product, even if Proficient Audio Systems, or a Proficient Audio Systems Authorized Dealer has been advised of the possibility of such damages, or for any claim by any other party. Some states do not allow the exclusion or limitation of consequential damages, so the above limitation and exclusion may not apply.

All implied warranties on the product are limited to the duration of this expressed Warranty. Some states do not allow limitation on the length of an implied warranty. If the original retail purchaser resides in such a state, this limitation does not apply.

