

User Manual

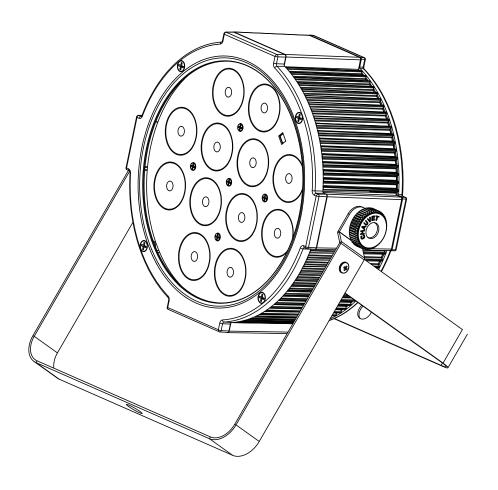






TABLE OF CONTENTS

Before You Begin	1
What Is Included	1
Unpacking Instructions	1
Claims	1
Text Conventions	1
Symbols	1
Disclaimer	1
Product at a Glance	2
Safety Notes	2
Introduction	3
	3
	4
	5
	5
	5
	5
	6
	6
	6
Oneration	7
Control Panel Operation	7
	7
·	8
	8
D-Fi USB Connectivity	8
D-Fi USB Connectivity	8
Configuration (D-Fi USB)	8
DMX Personality and Starting Address	9
DMX Channel Assignments and Values	9
9-CH	9
	10
Configuration (Standalone)	10
Automatic Programs	10
Auto-Program Speed	10
Sound-Active Mode	11
	11
•	
Dimmer Speed Mode	11
Mostor/Clave Mode (Wired)	12
Moster/Clave Mode (D. F. LICD)	13
	14
Technical Specifications	15
Returns	16
Contact Us	17
	What Is Included Unpacking Instructions Claims Text Conventions Symbols Disclaimer Product at a Glance Safety Notes Introduction Product Overview Product Dimensions Setup AC Power Fuse Replacement Power Linking Mounting Orientation Rigging Operation Control Panel Operation Menu Map DMX Linking Configuration (DMX) D-Fi USB Connectivity Configuration (D-Fi USB) DMX Personality and Starting Address DMX Personality and Starting Address DMX Channel Assignments and Values 9-CH 4-CH Configuration (Standalone) Auto-Program Speed Sound-Active Mode Sound-Active Mode Sound Sensitivity Preset Color Mode Custom Color Mixing Dimmer Speed Mode IRC-6 Operation Master/Slave Mode (Vired) Master/Slave Mode (D-Fi USB) Maintenance Product Maintenance Technical Specifications



1. BEFORE YOU BEGIN

What Is Included

- SlimPAR Q12 USB
- Power Cord

- Warranty Card
- Quick Reference Guide

Unpacking Instructions

Carefully unpack the product immediately and check the container to make sure all the parts are in the package and are in good condition.

Claims

If the box or the contents (the product and included accessories) appear damaged from shipping, or show signs of mishandling, notify the carrier immediately, not Chauvet. Failure to report damage to the carrier immediately may invalidate your claim. In addition, keep the box and contents for inspection.

For other issues, such as missing components or parts, damage not related to shipping, or concealed damage, file a claim with Chauvet within 7 days of delivery.

Text Conventions

CONVENTION	MEANING
1–512	A range of values
50/60	A set of values of which only one can be chosen
Settings	A menu option not to be modified
Menu Settings	A sequence of menu options to be followed
<enter></enter>	A key to be pressed on the product's control panel
ON	A value to be entered or selected

Symbols

SYMBOL	MEANING
4	Electrical warning. Not following these instructions may cause electrical damage to the product, accessories, or the user.
<u> </u>	Critical installation, configuration, or operation information. Not following these instructions may make the product not work, cause damage to the product, or cause harm to the operator.
(i)	Important installation or configuration information. The product may not function correctly if this information is not used.
	Useful information.

Disclaimer

Chauvet believes that the information contained in this manual is accurate in all respects. However, Chauvet assumes no responsibility and specifically disclaims any and all liability to any party for any loss, damage or disruption caused by any errors or omissions in this document, whether such errors or omissions result from negligence, accident or any other cause. Chauvet reserves the right to revise the content of this document without any obligation to notify any person or company of such revision, however, Chauvet has no obligation to make, and does not commit to make, any such revisions. Download the latest version from ______

The works of authorship contained in this manual, including, but not limited to, all design, text and images are owned by Chauvet.

© Copyright 2017 Chauvet & Sons, LLC. All rights reserved.

Electronically published by Chauvet in the United States of America.

CHAUVET, the Chauvet logo, D-Fi USB, and SlimPAR Q12 USB are registered trademarks or trademarks of Chauvet & Sons LLC (d/b/a Chauvet and Chauvet Lighting) in the United States and other countries. Other company and product names and logos referred to herein may be trademarks of their respective companies.



Product at a Glance

Use on Dimmer	\Diamond	Auto Programs	~
Outdoor Use	0	Auto-ranging Power Supply	~
Sound-Active	~	Replaceable Fuse	~
DMX	~	User-Serviceable	0
Master/Slave	~		

Safety Notes

- Always connect the product to a grounded circuit to avoid the risk of electrocution.
- Always disconnect the product from the power source before cleaning or replacing the fuse.
- Avoid direct eye exposure to the light source while the product is on.



- Avoid direct eye exposure to the light source while the product is on
 Make sure the power cord is not crimped or damaged.
- Never disconnect the product from power cord by pulling or tugging on the cord.
- If mounting the product overhead, always secure to a fastening device using a safety cable.
- Make sure there are no flammable materials close to the product when operating.
- Do not touch the product's housing when operating because it may be very hot.
- The product is not intended for permanent installation.
- Always make sure that the voltage of the outlet to which you are connecting the product is within the range stated on the decal or rear panel of the product.
- The product is for indoor use only! (IP20) To prevent risk of fire or shock, do not expose the
 product to rain or moisture.
- Always install the product in a location with adequate ventilation, at least 20 in (50 cm) from adjacent surfaces.
- Be sure that no ventilation slots on the product's housing are blocked.



- Never connect the product to a dimmer.
- Make sure to replace the fuse with another of the same type and rating.
- Never carry the product from the power cord or any moving part. Always use the hanging/ mounting bracket.
- The maximum ambient temperature (Ta) is 104 °F (40 °C). Do not operate the product at higher temperatures.
- In the event of a serious operating problem, stop using the product immediately.
- Never try to repair the product. Repairs carried out by unskilled people can lead to damage or malfunction. Please contact the nearest authorized technical assistance center.
- To eliminate unnecessary wear and improve its lifespan, during periods of non-use completely disconnect the product from power via breaker or by unplugging it.





Keep this User Manual for future use. If you sell the product to someone else, be sure that they also receive this document.



2. Introduction

Product Overview

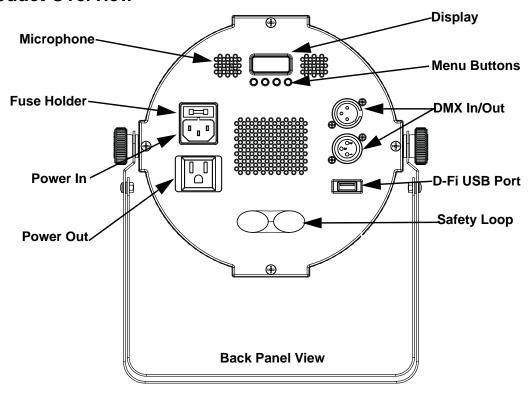

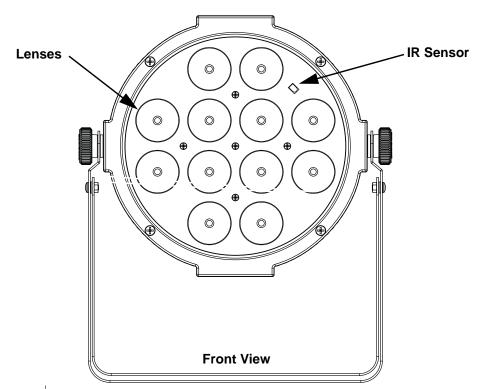





Electrical warning. Not following these instructions may cause electrical damage to the product, accessories, or the user.



Product Dimensions

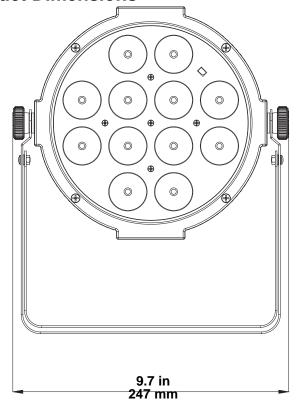

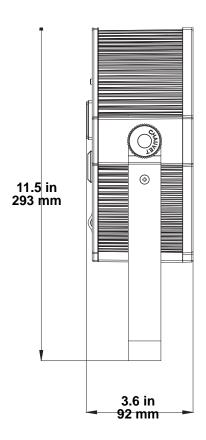



3. SETUP

AC Power

The SlimPAR Q12 USB has an auto-ranging power supply and it can work with an input voltage range of 100 to 240 VAC, 50/60 Hz. To determine the product's power requirements (circuit breaker, power outlet, and wiring), use the current value listed on the label affixed to the product's back panel, or refer to the product's specifications chart. The listed current rating indicates the product's average current draw under normal conditions.




- Always connect the product to a protected circuit (a circuit breaker or fuse).
 Make sure the product has an appropriate electrical ground to avoid the risk of electrocution or fire.
- To eliminate unnecessary wear and improve its lifespan, during periods of nonuse completely disconnect the product from power via breaker or by unplugging it.



Never connect the product to a rheostat (variable resistor) or dimmer circuit, even if the rheostat or dimmer channel serves only as a 0 to 100% switch.

Fuse Replacement

- 1. Wedge the tip of a flat-head screwdriver into the slot of the fuse holder.
- Pry the fuse holder out of the housing.
- 3. Remove the blown fuse from the holder and replace with a fuse of the exact same type and rating.
- 4. Insert the fuse holder back in place and reconnect power.

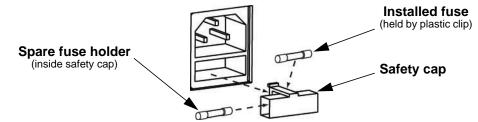




Disconnect the product from the power outlet before replacing the fuse.

Power Linking

The product provides power linking via the Edison outlet located in the back of the product. Please see the diagram below for further explanation.

Power Linking Diagram

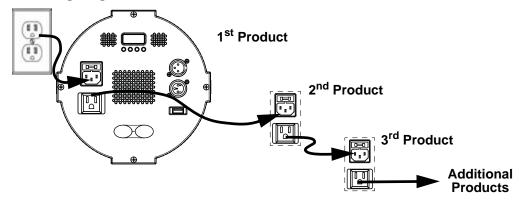



You can power link up to 12 SlimPAR Q12 USB products on 120 VAC or up to 21 SlimPAR Q12 USB products on 230 VAC.



The power linking diagram corresponds to the North American version of the product ONLY! If using the product in other markets, you must consult with the local Chauvet distributor as power linking connectors and requirements may differ in your country or region.



Mounting

Before mounting the product, read and follow the safety recommendations indicated in the Safety Notes.


Orientation

The SlimPAR Q12 USB may be mounted in any position; however, make sure adequate ventilation is provided around the product.

Rigging

- Before deciding on a location, always make sure there is easy access to the product for maintenance and programming purposes.
- Make sure that the structure or surface onto which you are mounting the product can support the product's weight. (see the <u>Technical Specifications</u>)
- When mounting the product overhead, always use a safety cable. Mount the product securely to a rigging point, whether an elevated platform or a truss.
- When rigging the product onto a truss, use a mounting clamp of appropriate weight capacity.
- When power linking multiple products, mount the products close enough for power linking cables to reach.
- The bracket adjustment knobs allow for directional adjustment when aiming the product to the
 desired angle. Only loosen or tighten the bracket knobs manually. Using tools could damage the
 knobs.

Mounting Diagram

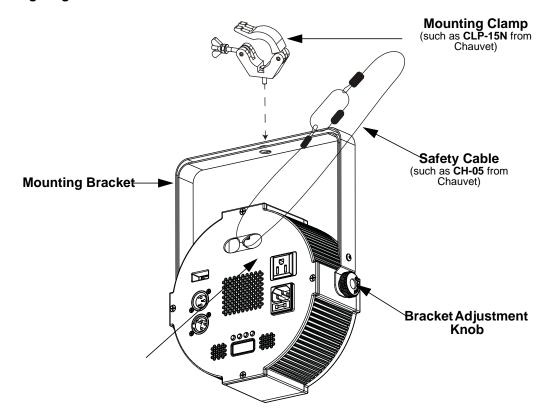



4. OPERATION

Control Panel Operation

To access the control panel functions, use the four buttons located underneath the display. Please refer to the Product Overview to see the button locations on the control panel.

Button	FUNCTION
<menu></menu>	Press to find an operation mode or to back out of the current menu option
<up></up>	Press to scroll up the list of options or to find a higher value
<down></down>	Press to scroll down the list of options or to find a lower value
<enter></enter>	Press to activate a menu option or a selected value

Menu Map

Mode	PROGRAMMING LEVELS	DESCRIPTION	
4-CH	d 1-512	4-channel DMX mode	
9-CH	u 1-312	9-channel DMX mode	
	C1	Static red	
	C2	Static green	
	C3	Static blue	
	C4	Static amber	
	C5	Static cyan	
	C6	Static magenta	
	С7	Static yellow	
	C8	Static orange	
	C 9	Static lime	
(preset colors)	C10	Static lavender	
(ргезет соютз)	C11	Static sky	
	C12	Static hot pink	
	C13	Static sea foam green	
	C14	Static salmon	
	C15	Static pink	
	C16	Static powder blue	
	C17	Static bright yellow	
	C18	Static peach	
	C19	Static white	
	P1	4-color program (snap)	
P	P2	4-color program (pulse)	
(auto program)	P3	19-color program (snap)	
	P4	19-color program (fading)	
S	S1-100	Program speed for P1-P4	
Snd	Snd 1	4-color program (sound-active)	
(sound-active)	Snd 2	19-color program (sound active)	
SenS	u-0-100	Sound Sensitivity Setting	
	r000-255		
U	g000-255	Custom static colors	
(custom colors)	b000-255	Combines red, green, and blue	
	A000-255		
	OFF		
dIM	dIM1	Dimmer speed mode, fast to slow, or off	
Ulivi	dIM2	Diffiller speed friede, fast to slow, or off	
	dIM3		
QE,	ON	ID function on or off	
SEr	OFF	IR function on or off	



DMX Linking

The SlimPAR Q12 USB works with a DMX controller. Information about DMX is in the CHAUVET® DMX Primer, which is available from the Chauvet websit

Configuration (DMX)

Set the product in DMX mode to control with a DMX controller

- Connect the product to a suitable power outlet.
- Connect a DMX cable from the DMX output of the DMX controller to the DMX input socket on the product.

D-Fi USB Connectivity

The SlimPAR Q12 USB is able to become a D-Fi wireless receiver/transmitter with the use of the D-Fi USB from Chauvet DJ. Simply set the product's DMX Personality and DMX Address, set the DIP switch D-Fi receiving/transmitting channel, then plug it into the D-Fi USB port. Press <MENU> repeatedly until 5Ch, 6Ch, 8Ch, 10Ch, 17Ch, 32Ch, or 36Ch shows on the display.

- 3. Press **<ENTER>**.
- Use **<UP>** or **<DOWN>** to select the starting address, from **d 1–512**.
- Press <ENTER>.

D-Fi USB Connectivity

The PN is able to become a D-Fi wireless receiver/transmitter with the use of the D-Fi USB from Chauvet DJ. Simply set the product's DMX Personality and DMX Address, set the DIP switch D-Fi receiving/ transmitting channel, then plug it into the D-Fi USB port.



WARNING! DO NOT plug anything other than a D-Fi USB into the USB port. Doing so may cause damage to the product.



Once plugged in, the D-Fi USB will take over the product. Wired DMX and manual display control / menu buttons will be unavailable until you unplug the D-Fi USB. The priority levels are:

- 1. D-Fi USB
- 3. IRC-6 Remote Control 2. Wired DMX
 - 4. Manual Digital Display/Menu Buttons


Configuration (D-Fi USB)

- Set the DMX Personality and DMX address on the SlimPAR Q12 USB.
- Use the Chart provided to set BOTH:
 - the Channel, and then
 - The Receiving or Transmitting option

NOTE: DIP Switch 5 is for Transmitting OR Receiving, please choose carefully.



D-Fi USB DIP Switch Channels

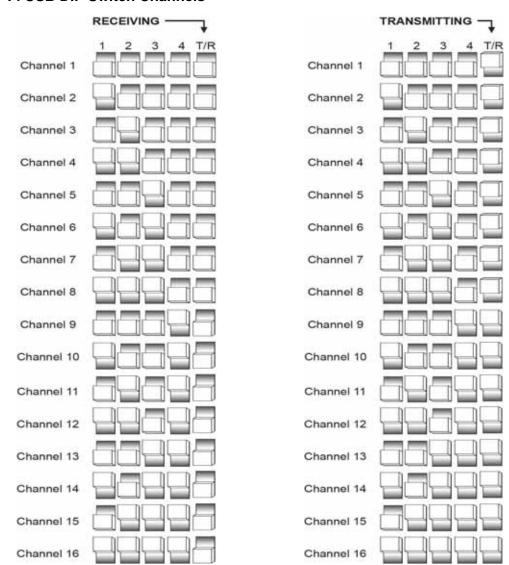

DMX Personality and Starting Address

When selecting a starting DMX address, always consider the number of DMX channels the selected DMX mode uses. If you choose a starting address that is too high, you could restrict the access to some of the product's channels.

The SlimPAR Q12 USB uses up to 9 DMX channels in an 9-CH DMX mode, which defines the highest configurable address to **504**.

If you are not familiar with the DMX protocol, download the DMX Primer from _______To select the starting address, do the following:

- 1. Press <MENU> repeatedly until 4-CH or 9-CH shows on display.
- 2. Press **<ENTER>** and **d--1-d512** will show on the display.
- 3. Use **<UP>** or **<DOWN>** to select the starting address.
- Press **<ENTER>**.

DMX Channel Assignments and Values 9-CH

CHANNEL	Function	VALUE	PERCENT/SETTING
1	Red	000 ⇔ 255	0–100%
2	Green	000 ⇔ 255	0–100%



CHANNEL	FUNCTION	VALUE	PERCENT/SETTING		
3	Blue	000 ⇔ 255	0–100%		
4	Amber	000 ⇔ 255	0–100%		
5	Color Macros	000 ⇔ 015	No function		
3	(Overrides Ch. 1-4)	016 ⇔ 255	Color macros		
	Strobe	000 ⇔ 015	No function		
	(when CH7 is 000-031)	016 ⇔ 255	Slow to fast		
6	Speed (when CH7 is 032-223)	000 ⇔ 255	Slow to fast		
	Sound sensitivity	000 ⇔ 010	Off		
	(when CH7 is 224-255)		Controls the sound sensitivity level		
			No function		
	Mode	032 ⇔ 063	Pulse effect 0-100%	CH1~4 must be	
		064 ⇔ 095	Pulse effect 100%-0	active	
7			Pulse effect 100%-0-100%		
•			Auto fade transition		
			Auto snap transition (4 colors)		
			Auto snap transition (19 colors)		
			Sound active mode		
8	Dimmer	000 ⇔ 255	0–100%		
			Default dimmer speed set from	menu	
		052 ⇔ 101	Dimmer speed mode off		
9	1	102 ⇔ 152	Dimmer speed mode 1 (fast speed)		
		153 ⇔ 203	Dimmer speed mode 2 (medium speed)		
		204 ⇔ 255	Dimmer speed mode 3 (slow speed)		

4-CH

CHANNEL	FUNCTION	VALUE	PERCENT/SETTING
1	Red	000 ⇔ 255	0–100%
2	Green	000 ⇔ 255	0–100%
3	Blue	000 ⇔ 255	0–100%
4	Amber	000 ⇔ 255	0–100%

Configuration (Standalone)

Set the product in one of the standalone modes to control without a DMX controller. Connect the product to a suitable power outlet.



Never connect a product that is operating in any standalone mode to a DMX string connected to a DMX controller. Products in standalone mode may transmit DMX signals that could interfere with the DMX signals from the controller.

Automatic Programs

To run the SlimPAR Q12 USB in automatic mode, follow the instructions below:

- 1. Press <MENU> repeatedly until P-- shows on the display.
- 2. Press <ENTER>.
- 3. Use **<UP>** or **<DOWN>** to select an automatic program, from **P** (1–14).
- 4. Press **<ENTER>**.

Auto-Program Speed

To change the auto-program speed on the SlimPAR Q12 USB, do the following:

- 1. Press **<MENU>** repeatedly until **S--** shows on the display.
- 2. Use **<UP>** or **<DOWN>** to increase or decrease the program speed, from (**S 1–100**).
- 3. Press **<ENTER>**. The product will return to the last selected mode.



Sound-Active Mode

To run the SlimPAR Q12 USB in sound-active mode, follow the instructions below:

- 1. Press <MENU> repeatedly until Snd shows on the display.
- 2. Press <ENTER>
- 3. Use **<UP>** and **<DOWN>** to select a sound active program (**Snd1 or Snd2**)
- Press **<ENTER>**.



The product will only respond to low frequencies of music (bass and drums).

Sound Sensitivity

To set the sound sensitivity on the SlimPAR Q12 USB, do the following:

- 1. Press <MENU> repeatedly until SenS shows on the display.
- 2. Use **<UP>** or **<DOWN>** to increase or decrease the sound sensitivity, from (**u** 0–100).
- 3. Press **<ENTER>**.

Preset Color Mode

To run the SlimPAR Q12 USB on a static color, follow the instructions below:

- 1. Press <MENU> repeatedly until C-- shows on the display.
- 2. Press **<ENTER>**.
- 3. Use **<UP>** or **<DOWN>** to select a static color, from (**C 1–18**).
- 4. Press **<ENTER>**.

Custom Color Mixing

To custom mix a static color, do the following:

- 1. Press **<MENU>** repeatedly until **U--** shows on the display.
- 2. Press **<ENTER>** and one of the following will show on display.
- **r**___ (red)
- **g**___(green)
- **b**___ (blue)
- A___ (amber)
- 3. Press **<ENTER>** to cycle through the color settings.
- When the desired color shows on the display, use <UP> or <DOWN> to increase or decrease the color value.
- 5. Repeat steps 3 and 4 until the product outputs as desired.

Dimmer Speed Mode

To set the dimmer speed mode of the SlimPAR Q12 USB, follow the instructions below:

- 1. Press **<MENU>** repeatedly until **dIM** shows on the display.
- Press **<ENTER>**.
- 3. Use **<UP>** or **<DOWN>** to select:
- dIM1 (fast)
- **dIM2** (medium)
- dIM3 (slow)
- or **OFF**
- 4. Press **<ENTER>**.




IRC-6 Infrared Remote Control

The SlimPAR Q12 USB is compatible with the IRC-6 infrared remote control from Chauvet. To activate IR mode, follow the instructions below:

- 1. Press <MENU> repeatedly until SEr shows on the display.
- Press **<ENTER>** to accept.
- Press **<UP>** or **<DOWN>** to select **ON** or **OFF**.
- Press < ENTER >.

IRC-6 Operation

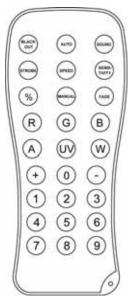

Automatic Mode

Automatic mode will enable you to run the automatic programs on the product. To turn on Automatic mode:

- Press < AUTO > on the IRC-6.
- 2. Press <+> or <-> to choose between the different auto programs.

To adjust the speed of the automatic program:

- 1. Press **<SPEED>** on the IRC-6.
- 2. Press <+> or <-> to increase or decrease the speed of the program.

Sound-Active Mode

Sound-Active mode will enable the product to respond to the music.

To turn on Sound-Active mode:

- 1. Press **<SOUND>** on the IRC-6
- 2. Press <+> or <-> to select Snd1 or Snd2.

To adjust the sound sensitivity in Sound Active mode:

- Press **<SENSITIVITY>** on the IRC-6.
- 2. Press <+> or <-> to increase or decrease the sound sensitivity.

Manual Color Control

To choose a specific color with the IRC-6:

- 1. Press <MANUAL> on the IRC-6
- 2. Press any number between <0>~<9> to choose a preset color

To manually control the RGB percentage:

- Press <MANUAL> on the IRC-6.
- 2. Press <R> (red), <G> (green), (blue), or <A> (amber) to choose your
- 3. Press <+> or <-> to increase or decrease the value of each color.

Miscellaneous Operation

To adjust the total output level:

- 1. Press <%> on the IRC-6.
- 2. Press <+> or <-> to increase or decrease the output level.

To adjust the strobe rate of the program:

- 1. Press **<STROBE>** on the IRC-6.
- 2. Press <+> or <-> to increase or decrease the strobe rate.
- 3. Press **<STROBE>** again to turn off the strobe.

To select only fading programs:

- 1. Press <FADE> on the IRC-6.
- Press <+> or <-> to select P2 or P4.

To black out the lights:

1. Press **<BLACK OUT>** on the IRC-6.

This will turn off all the lights until the button is pressed again.

NOTE: The IRC-6 will not respond to any inputs when Black Out is activated. If the remote does not respond when a button is pressed, try pressing **<BLACK OUT>**. You may have inadvertently activated Black Out.



Master/Slave Mode (Wired)

The Master/Slave mode allows a single SlimPAR Q12 USB product (the "master") to control the actions of one or more SlimPAR Q12 USB products (the "slaves") without the need of a DMX controller. The master product will be set to operate in Stand-Alone, while the slave products will be set to operate in Slave mode. Once set and connected, the slave products will operate in unison with the master product. Configure the products as indicated below.

Slave products:

- 1. Press <MENU> repeatedly until 4-CH or 9-CH shows on the display.
- 2. Press **<ENTER>** to accept.
- 3. Set the DMX address to d 1.
- 4. Connect the DMX input of the first slave product to the DMX output of the master product.
- Connect the DMX input of the subsequent slave products to the DMX output of the previous slave product.
- 6. Finish setting and connecting all the slave products.

Master product:

- 1. Set the master product to operate in Stand-Alone mode.
- 2. Make the master product the first product in the DMX daisy chain.



- Configure all the slave products before connecting the master to the daisy chain.
- Never connect a DMX controller to a DMX string configured for Master/Slave operation because the controller may interfere with the signals from the master.
- Do not connect more than 31 slaves to the master.

Master/Slave Mode (D-Fi USB)

The D-Fi USB allows a single SlimPAR Q12 USB product (the "master") to control the actions of one or more SlimPAR Q12 USB products (the "slaves") without the need of a DMX controller or DMX cables. The master (transmitter) product will be set to operate in Stand-Alone mode, while the slave (receiver) products will be set to operate in Slave mode. Once set and connected, the slave products will operate in unison with the master product.

Configure the products as indicated below.

Slave products:

- 1. Press <MENU> repeatedly until 4-CH or 9-CH shows on the display.
- 2. Press **<ENTER>** to accept.
- 3. Set the DMX address to d 1.
- 4. Set the D-Fi USB to receive on a specific channel, 1–16.
- 5. Plug in the D-Fi USB.
- 6. Finish setting and connecting all the slave products.

Master product:

- Press <MENU> repeatedly until the DMX personality the slaves are set to shows on the display.
- 2. Press **<ENTER>** to accept.
- 3. Set the DMX address to d -1.
- 4. Set the master product to operate in either Stand-Alone mode or with the IRC-6.
- 5. Set the D-Fi USB to transmit on the D-Fi channel the slaves are receiving on.
- 6. Plug in the D-Fi USB.
 - All products must be set to the same DMX personality, DMX address, and D-Fi channel.



- Configure all the slave products before configuring the master to transmit.
- Never connect a DMX controller to a D-Fi channel configured for Master/Slave operation because the controller may interfere with the signals from the master.



5. MAINTENANCE

Product Maintenance

Dust build-up reduces light output performance and can cause overheating. This can lead to reduction of the light source's life and/or mechanical wear. To maintain optimum performance and minimize wear, clean your lighting products at least twice a month. However, be aware that usage and environmental conditions could be contributing factors to increase the cleaning frequency.

To clean the product, follow the instructions below:

- 1. Unplug the product from power.
- 2. Wait until the product is at room temperature.
- Use a vacuum (or dry compressed air) and a soft brush to remove dust collected on the external surface/vents.
- Clean all transparent surfaces with a mild soap solution, ammonia-free glass cleaner, or isopropyl alcohol.
- 5. Apply the solution directly to a soft, lint free cotton cloth or a lens cleaning tissue.
- 6. Softly drag any dirt or grime to the outside of the transparent surface.
- 7. Gently polish the transparent surfaces until they are free of haze and lint.



Always dry the transparent surfaces carefully after cleaning them.



6. TECHNICAL SPECIFICATIONS

Dimensions and Weight

LENGTH	W IDTH	HEIGHT	WEIGHT
31 in (785 mm)	2.6 in (67 mm)	4.8 in (123 mm)	9.6 lb (4.4 kg)

Note: Dimensions in inches rounded to the nearest decimal digit.

Power

Power Supply Type	RANGE	VOLTAGE SELECTION
Switching (internal)	100 to 240 VAC, 50/60 Hz	Auto-ranging
PARAMETER	120 V, 60 Hz	230 V, 50 Hz
Consumption	108 W	105 W
Operating Current	1.5 A	1 A
Power linking current (products)	8 A (5 products)	8 A (9 products)
Fuse	T 2 A, 250 V	T 2 A, 250 V
Power I/O	U.S./Worldwide	UK/EUROPE
Power input connector	IEC	IEC
Power output connector	Edison	IEC
Power Cord plug	Edison (U.S.)	Local Plug
11.14.0		

Light Source

ТүрЕ	Color	QUANTITY	Power	CURRENT	LIFESPAN
LED	Tri-color RGB	10	9 W	2 A	50,000 hours

Photometrics

STROBE RATE	BEAM ANGLE	FIELD ANGLE
0 to 25 Hz	20°	34°

Thermal

MAXIMUM EXTERNAL TEMPERATURE	COOLING SYSTEM
104 °F (40 °C)	Convection

DMX

I/O CONNECTOR	CHANNEL RANGE
3-pin XLR	5, 6, 8, 10, 17, 32 or 36

Ordering

PRODUCT NAME	ITEM CODE	UPC NUMBER
SlimPAR Q12 USB	03031241	781462215897





RETURNS

In case you need to get support or return a product:

- If you are located in the U.S., contact Chauvet World Headquarters.
- If you are located in the UK or Ireland, contact Chauvet Europe Ltd.
- If you are located in Mexico, contact Chauvet Mexico.
- If you are located in Benelux, contact Chauvet Europe BVBA.
- If you are located in any other country, DO NOT contact Chauvet. Instead, contact your local distributor. for distributors outside the U.S., UK, Ireland, Mexico, or Benelux.

- 12
151
_

If you are located outside the U.S., UK, Ireland, Mexico, or Benelux, contact your distributor of record and follow their instructions on how to return Chauvet products to them. Visit our website ______ for contact details.

Call the corresponding Chauvet Technical Support office and request a Return Merchandise Authorization (RMA) number before shipping the product. Be prepared to provide the model number, serial number, and a brief description of the cause for the return.

To submit a service request online,

Send the merchandise prepaid, in its original box, and with its original packing and accessories. Chauvet will not issue call tags.

Clearly label the package with the RMA number. Chauvet will refuse any product returned without an RMA number.



Write the RMA number on a properly affixed label. DO NOT write the RMA number directly on the box.

Before sending the product, clearly write the following information on a piece of paper and place it inside the box:

- Your name
- Your address
- Your phone number
- RMA number
- A brief description of the problem

Be sure to pack the product properly. Any shipping damage resulting from inadequate packaging will be your responsibility. FedEx packing or double-boxing are recommended.



Chauvet reserves the right to use its own discretion to repair or replace returned product(s).

