








COMON
CM₂

User Guide 1.0EN


+ Package Contents

		
<p>COWON CM2</p>	<p>Portable Charging Cradle</p>	<p>Quick Guide</p>
  		
<p>Small(2EA) Medium(2EA) Medium(2EA)</p>		
<p>Ear Tips</p>	<p>Micro USB Cable</p>	


* Actual package contents may differ from the above images.

+ Before you start _ Names of Parts and Functions

COWON CM2

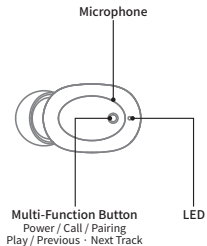


Charging Cradle

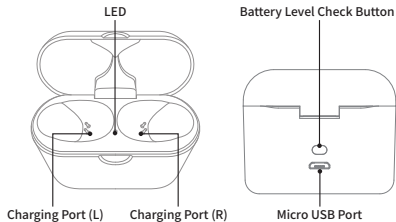

+ Before you start _Charging

Charge the CM2

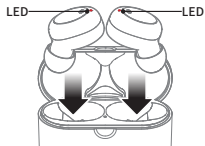

Red

Red

Red


Blue

Off

Charging
(Red LED Stays On → Blue LED Stays On)

Complete
(Turns Off)

Charge the Charging Cradle

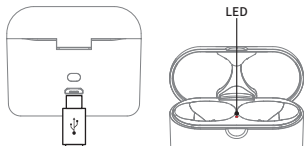

Red

Red ×2

Red ×3

Red ×4

On


Charging
(Red LED Blinks)

Complete
(Stays On)

- Please charge the charging cradle periodically. When the cradle battery is discharged, the earphone units may turn-on instead of being charged, causing the earphone to be discharged.
- Check the battery level by pressing the [Battery Level Check Button] on the cradle.

+ Using the Product_ Power On / Off


Auto

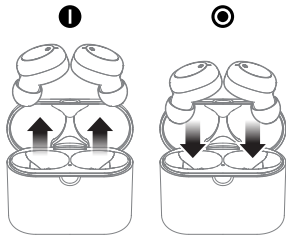

Remove : Power On

Insert : Power Off


Manual

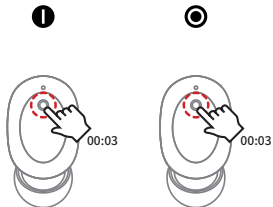

3 Sec Press : Power On / Off

+ Using the Product _ Pairing & Connection

Dual Mode : The CM2's left and right earphones can be used together in stereo.

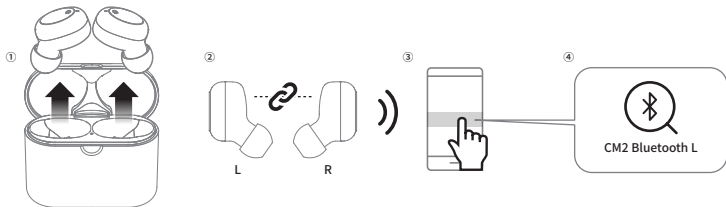


Power On	L , R Unit Connection	Pairing	Connection
When both earphones are removed at the same time from the charging cradle, they will automatically turn on.	L and R units are connect to each other.	Enter pairing mode following an "Pairing Mode" voice.	Turn on Bluetooth on your smartphone or Bluetooth-capable device, and select 'CM2 Bluetooth L' from the list of detected devices to pair and connect automatically.

* After the initial pairing, the CM2 and your smartphone will connect automatically when the CM2 is on and Bluetooth is enabled on your phone.

+ Using the Product _ Pairing & Connection

Single Mode : The CM2's left and right earphones can be used individually in mono.

- Pair the CM2 in Dual Mode as previously shown.
- Proceed steps ①~④.
- You can now turn on and use only the desired unit.

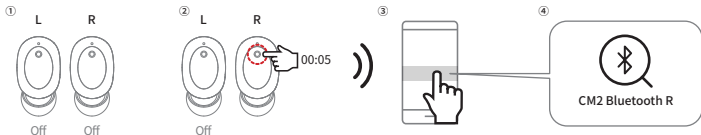


Power Off	5 Sec Press → Pairing	Connection
Turn off both the left and right earphones.	Press and hold the button on the right earphone for 5 seconds to enter pairing mode for only the right earphone. (Even if you have heard the "Power On" voice, please continue to press until you hear "Pairing Mode".)	Pair the detected right earphone(CM2 Bluetooth R) to your smartphone.

+ Using the Product _ Reset to Dual Mode (When the L and R units are not connecting to each other)

Refer to page 'Pairing & Connection' when connecting the product to a smart device for the first time.

If the L and R units only connect in single mode during normal dual mode operation, reset to dual mode by following the instructions below. If it fails to reset, start again from Step ②.

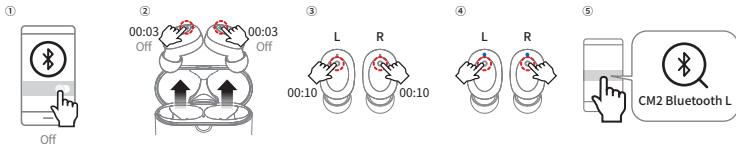

Delete connected device & Turn off Bluetooth	Power Off	Hold for 10 seconds and release	Press and release when the LED turns blue	Connection
Delete the [CM2 Bluetooth] device registered on your smartphone or other Bluetooth device and turn off Bluetooth.	Remove the earphones from the cradle and turn off both L and R units.	Press and hold the left and right buttons simultaneously for 10 seconds. Then release them.	Press and release both left and right buttons when the LED turns blue. Once reset, the L unit will enter pairing mode, and its LED will flash red and blue.	Turn on Bluetooth on your smartphone or other Bluetooth device and select [CM2 Bluetooth L] from the detected devices to complete pairing and automatically connect.

+ Using the Product _ Listening to Music · Calling









 Listening to Music	 Play · Pause	 Voice Recognition	 Next Track	 Previous Track
 Calling	 Answering a call · Ending a call	 Rejecting a call		

- Press and hold the multifunction button for 1 second to launch the voice recognition feature of your smartphone or tablet. (Android OS : Google Assistant / iOS : Siri / Window OS : Cortana - Except during calls)

- When using Dual Mode, the sound can be heard from both left and right earphones during calls. Mic only operates on left earphone. So make sure to put the left earphone near your mouth during calls in a loud environment.
- In Single Mode, each earphone will output sound with both microphones enabled for use.

- In Dual Mode, L unit connects to your smartphone.
- By using the CM2 in Single Mode, you can alternate between charging the left and right earphones for extended use. (Audio books, Podcasts, etc.)
- Since Single Mode uses only one earphone, you can stay aware of environmental sounds and use the device more safely when walking or bicycling.
- Keep the product and a mobile phone within 1 meter when pairing.
- If passkey input is required, enter a password or a PIN No.'0000'.
- When the CM2 is off, press and hold the multifunction button for 5 seconds to enter pairing mode.
- When powered on, the earphones will automatically connect to the most recently connected devices.

+ Voice Prompts · Status LED

Status	Voice Prompts	LED
Power On	"Power On"	 Blue
Power Off	"Power Off"	 Red
L, R Unit Connection		 Blue
Pairing Mode	"Pairing Mode"	 ↔  Blue Red
Bluetooth Connection	"Connected"	○ Off
Incoming call	"Incoming call" *	○ Off
Disconnected		 Blue

* For iPhone, user ringtone will be applied.

+ Specification

Bluetooth Version	V5.0
Bluetooth Profiles	HSP / HFP / A2DP / AVRCP
Standby Time	Up to 150 hours
Music-Playing Time	Single Mode : About 8.5 hours Dual Mode : About 6 hours
Charging Time	CM2 : About 1.2 hours * Charging Cradle : About 1.5 hours
Battery	CM2 : 3.7V / 60mAh Charging Cradle : 3.7V / 450mAh
Input	DC 5V / 500mA
Operating Distance	Up to 10m (Free space)
Weight	CM2 : 4.1g x 2 Charging Cradle : 27g

* Number of available CM2 charges using charging cradle (450mAh) : 3 times (with fully charged charging cradle)

DIGITAL PRIDE.

©WON